


Wireless Handheld Remote

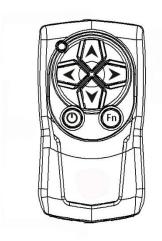

OPERATION:

- -Press on/off button to Power on or off searchlight.
- -Change direction of the light beam by using the direction buttons.

Up = Down = Right = Left =

-Function (Fn) Button = Strobe Mode on or off

HANDHELD WIRELESS REMOTE PROGRAMMING:

- 1. Switch off DC Power or disconnect from battery.
- 2. Make sure there is NO other transmitter operating at the same time.
- 3. Switch on DC power, within 5 seconds press remote up ▲ and down ▼ button once simultaneously.
- 4. Searchlight will flash to acknowledge the remote. Connection has been made.
- 5. Up to 4 remotes may be used with the searchlight (programming a fifth remote will replace the first). To program a second remote, within five seconds of programming the first remote, press the second remote's up and down button once simultaneously. Repeat to program additional remotes.

