



Firefly[®] PRO

Operating Instructions

- ❖ Slide thumb switch up to turn the strobe into the ON position.
- ❖ Slide thumb switch down to turn the strobe light into the OFF position.

ON **TOGGLE ON/OFF TO SELECT MODE**

↑

STROBE

STEADY


SOS

↓

OFF **MODE RESET = 5 MIN WHEN OFF**

Maintenance

- ❖ Open the battery door in a clean environment, and only to replace batteries.
- ❖ Keep battery door O-ring clean and free of debris accumulation.
- ❖ Clean battery door thoroughly if necessary to ensure watertight integrity.
- ❖ Avoid using abrasive or sharp objects to handle O-ring.
- ❖ Lubricate the entire O-ring with silicone based grease prior to closing to ensure a water-tight seal.
- ❖ Inspect O-ring periodically.
- ❖ Replace if damaged.

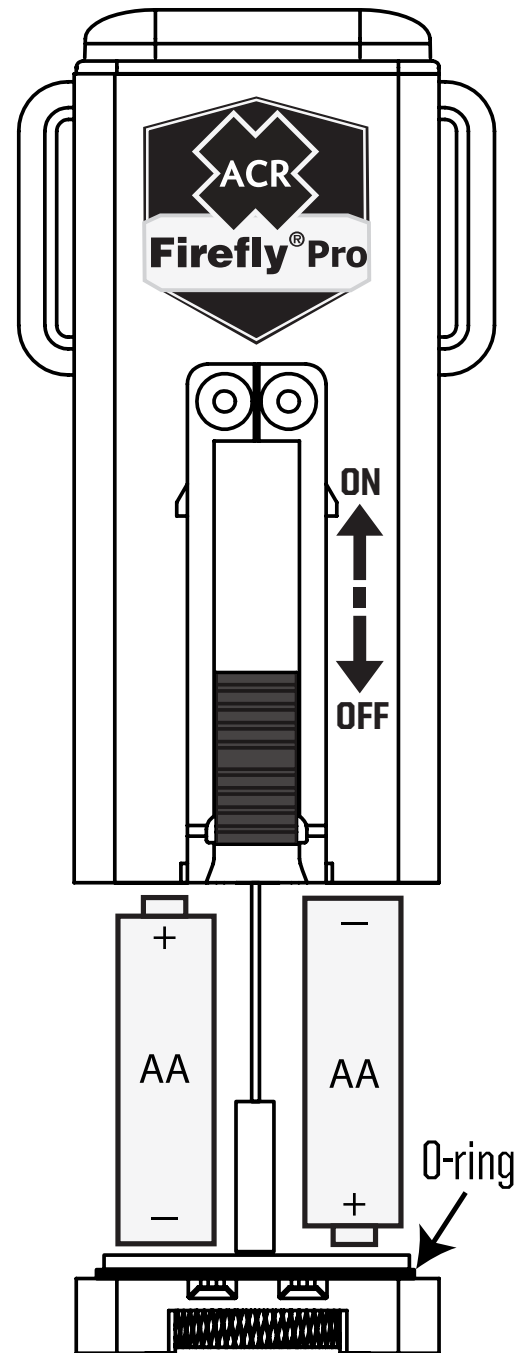

This strobe light is warranted against factory defect in material and workmanship for a period of one (1) year from the date of purchase or receipt as a gift. The warranty does not cover defects due to battery failure or leakage.