TO REMO∨E KNOB

ROTATE THE KNOB ANTICLOCKWISE TO OFF POSITION. THE KNOB IS STILL LOCKED TO SWITCH.


TO REMOVE KNOB FROM SWITCH, DEPRESS AND CONTINUE TO ROTATE ANTICLOCKWISE UNTIL

THE STOP IS REACHED, KNOB CAN NOW BE REMOVED.

THIS LOCK POSITION IS USED TO KEEP KNOB IN PLACE WHEN SWITCH IS N THE OFF POSITION.

TO REPLACE KNOB

PLACE KNOB IN SWITCH HOUSING. DEPRESS AND TURN CLOCKWISE 45° TO THE DFF POSITION.

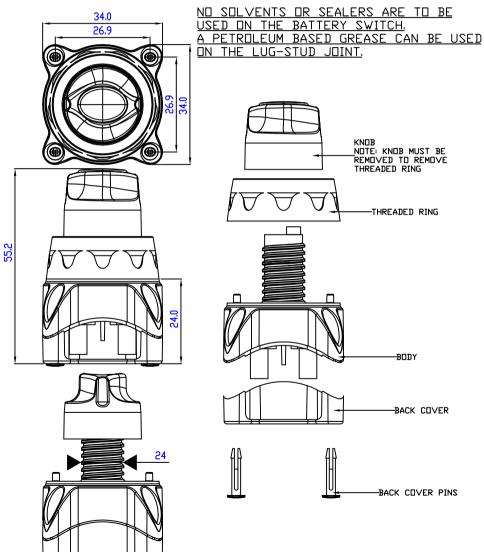

TO REMO∨E KNOB

ROTATE THE KNOB ANTICLOCKWISE TO OFF POSITION. THE KNOB IS STILL LOCKED TO SWITCH.


TO REMOVE KNOB FROM SWITCH, DEPRESS AND CONTINUE TO ROTATE ANTICLOCKWISE UNTIL


THE STOP IS REACHED. KNOB CAN NOW BE REMOVED.

THIS LOCK POSITION IS USED TO KEEP KNOB IN PLACE WHEN SWITCH IS N THE OFF POSITION.

TO REPLACE KNOB

PLACE KNOB IN SWITCH HOUSING. DEPRESS AND TURN CLOCKWISE 45° TO THE OFF POSITION.

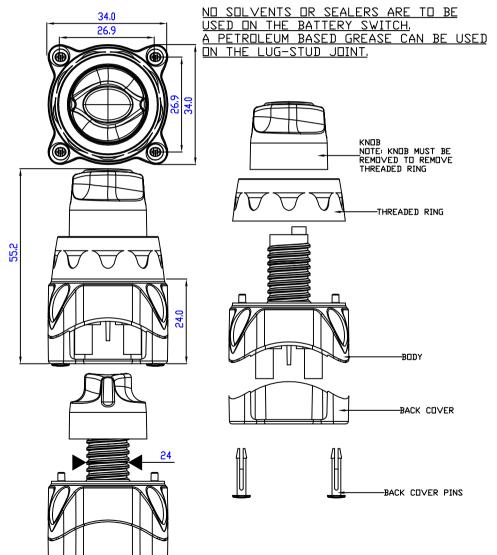

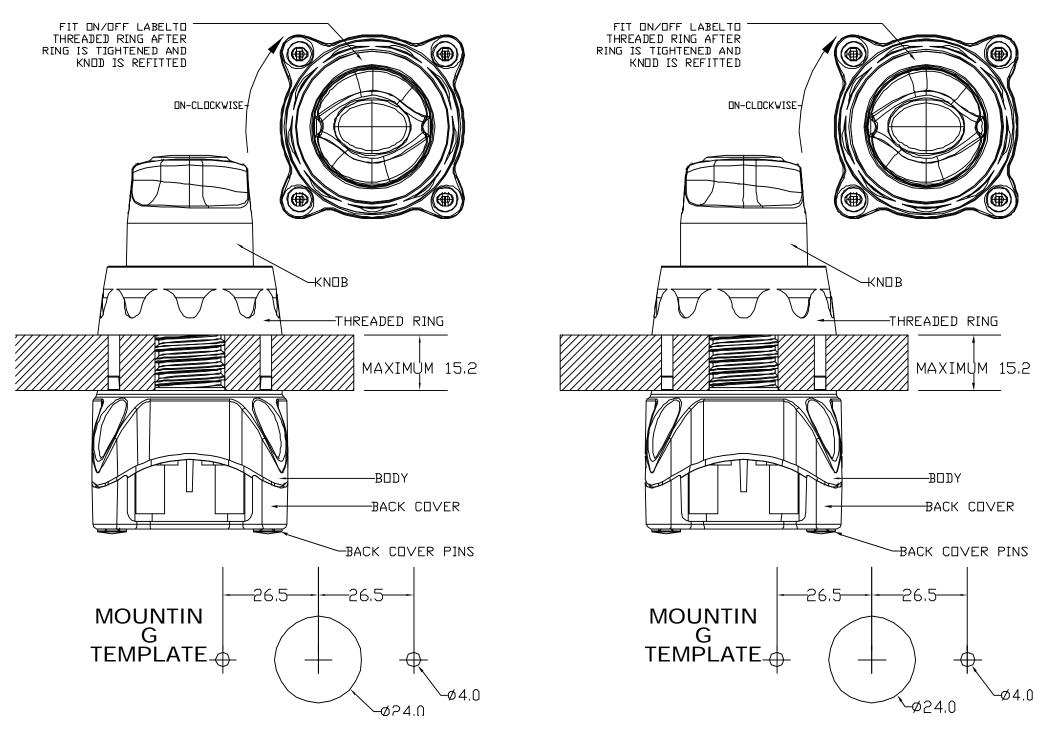

View other marine electrical distribution made by BEP on our website.