



NOTE:  
CHECK PANEL FIT BEFORE  
MOUNTING. ADJUST PANEL  
CUTOUT AS NEEDED.

THIS TEMPLATE HAS BEEN PROVIDED TO HELP YOU IN INSTALLING YOUR NEW BLUE SEA SYSTEMS POWER DISTRIBUTION PANEL. DIMENSIONS ARE SHOWN IN INCH AND [MILLIMETERS]

**BLUE SEA SYSTEMS**  
425 Sequoia Drive  
Bellingham, WA 98226  
Phone (360)738-8230 Fax (360)734-4195

10-1/2" X 11-1/4" PANEL CUTOUT DIMENSIONS

DATE	SCALE	DOCUMENT NO.	REVISION	SHEET
2-26-04	N.T.S.	6681	A	1 OF 1