 




True North

ELECTRIC SPACE HEATER

OPERATING INSTRUCTIONS

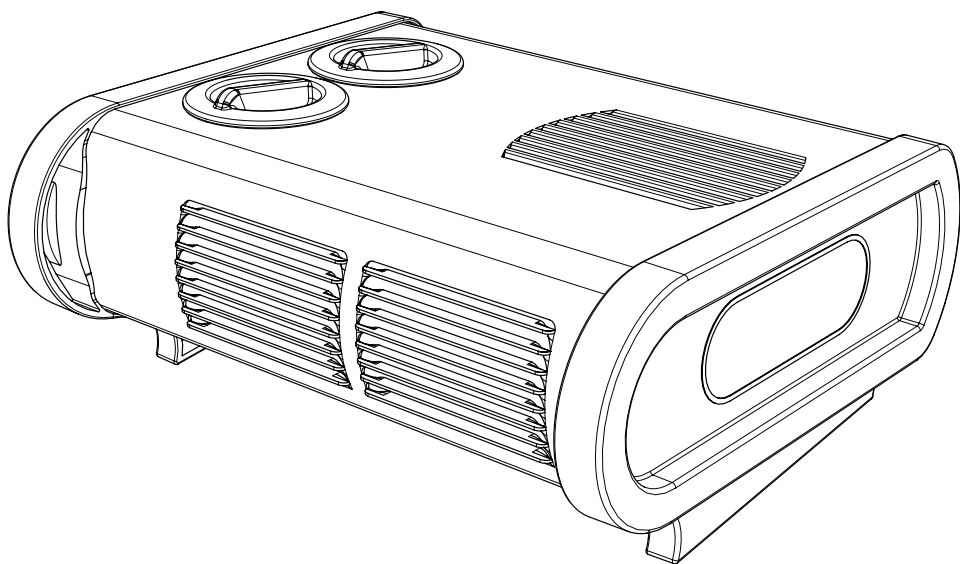

MODEL 9206CABBX black/noir

Read and save all instructions before using the heater.

WARNING

This Model 9206 Electric Space Heater is designed and approved for home use only.

1. This heater, like all resistance wire fan-forced convection heaters, has hot and arcing elements which can cause combustible materials and/or flammable vapors to ignite. This heater must only be used indoors in a clean and dry area free of loose combustible materials and explosive vapors. Do not use this heater outdoors, in barns, in barnyards, where explosive liquids or vapors are present, close to oily/flammable rags, in wood workshops, or any other area where combustible materials or flammable vapors could possibly enter the heater. Use of the heater where these are present could result in fire causing property damage, injury or death.
2. This heater, like all cord connected indoor use heaters, has internal electrical live components that should not get damp. Do not use this heater in wet or damp areas. Do not use this heater in bathrooms, laundry rooms and similar locations. Do not use in greenhouses. Do not use this heater in any manner where the heater could come into contact with liquids. Use of this heater in wet or damp locations could result in electrical shock causing injury or death.

Safety Feature

This model has two-stage overheat protection: a manual reset thermostat and a one time thermal fuse. If the flow of air becomes blocked, the heater will automatically turn off when the internal temperature reaches ~55°C. The unit will remain off.

To reset: Unplug heater, ensure all intakes are free of obstructions, and let unit cool for 10 minutes before restarting.

Care and Maintenance

There are no user serviceable parts in this heater. Do not attempt to service this unit. Your heater has been designed for many years of problem-free operation. The motor is permanently lubricated and does not require oiling. However, since this model moves a high volume of air, it does require periodic cleaning. Unplug the heater and using a vacuum, clean the air intakes on the top and bottom of the unit as well as the front grill.

Caution! Keep out of the reach of children.

Specifications

120 Volts, 60 Hz, 13.2 Amps, 1500 Watts, 6 ft. cord (1.83 m)

 
Important Safety Instructions

When using electrical appliances, basic precautions including the following should always be observed to reduce risk of fire, electric shock, and injury to persons.

1. Read and save all instructions before using this heater.
2. Caution: high temperature. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet from the front of the heater and away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or disabled persons and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area, and, where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Connect heater to an appropriate electrical outlet which meets the electrical ratings as marked on the heater.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage to the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored. Do not use in areas having loose combustible materials, which can enter heater. Ensure heater is kept clean.
14. Do not use in areas where there is a risk of build up of flammable materials.
15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
16. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be 12AWG minimum size and rated not less than 1875 watts.
17. **WARNING:** This heater has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fully fit the outlet reverse the plug. If it still does not fit consult a qualified electrician. Never use with an extension cord if the plug cannot be fully inserted. Do not attempt to defeat this safety feature.
18. Should the air intakes become blocked during operation the unit will shut down and remain off. To reset: Unplug heater, ensure all intakes are free of obstructions, and let unit cool for 10 minutes before restarting.
19. **“SAVE THESE INSTRUCTIONS.”**

True North Operating Instructions

Thermostat Switch

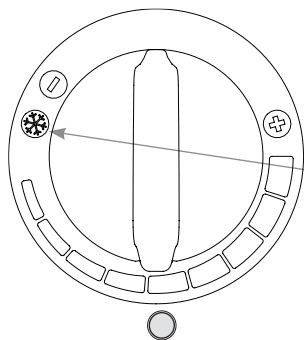


This control automatically cycles ON/OFF to regulate and maintain desired room temperature. Turn knob clockwise towards ⊕ to increase, and counterclockwise towards ⊖ to decrease the room temperature.

❄️ Anti-Freeze Setting

This feature automatically turns on your heater when room temperature drops to ~38°F (3°C) and will keep the heater running to maintain this temperature. Anti-freeze protection only applies to confined areas, it will **not heat** your entire house. To engage anti-freeze, turn thermostat to ❄️ and select an output heat setting (1-4). The lower settings will use less power but the heater will remain on longer.

 Heat Selector Switch

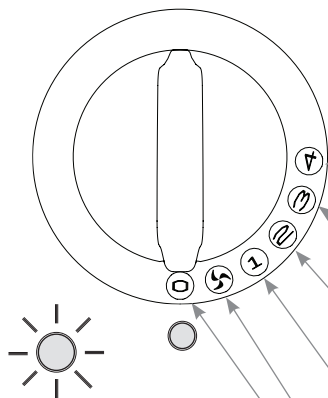

- ④ HI OUTPUT (1500 Watts, HI Fan)
Maximum heat / High air circulation
- ③ ENERGY SAVER (900 Watts, HI Fan)
Moderate heat / High air circulation
- ② ENERGY SAVER (900 Watts, LO Fan)
Moderate heat / Silent operation
- ① SLEEP MODE (600 Watt, LO Fan)
Low heat / Silent operation
- ⚡ FAN ONLY
- ⊖ OFF (No power to fan or element.)



PILOT LIGHT
(Illuminated when power is on.)
NOTE: If the pilot light is on but the heater is not working, turn the thermostat in a clockwise direction.