

Installation and Troubleshooting Guide

All rights reserved. Reproduction or use of content, in any manner, without express written permission by CDI Electronics, Inc., is prohibite



CDI P/N: 414-2770 Internal Engine Wiring Harness

This harness replaces P/N's: 37628, 38072, 38910, 39177, 45070, 46285, 46905, 48150, 49370, 52769, 52770, 52771, 52820, 56370, 59741, 84-46463, 84-62534, 84-66055, 84-66297, 84-69236, 84-71443, 84-73826, 84-74904.

Warning! This product is designed for installation by a professional marine mechanic. CDI cannot be held liable for injury or damage resulting from improper installation, abuse, neglect or misuse of this product. Fuses are not included with this harness.

NORMAL CONNECTIONS FOR BATTERY TYPE IGNITIONS:

SWITCH BOX P/N's

Mercury	CDI Electronics
332-2803	114-2803
332-2986	114-2986
332-4796	114-4796
337-4411	N/A
Points/Condenser	N/A







Wire Color Function/Connection

Black (4 AWG) Engine Ground

Black (18 AWG)

Yellow

Negative Terminal on Starter Solenoid

Start Terminal on Starter Solenoid

Gray Choke Solenoid

Orange Kill Circuit for ADI- Not Used, Tape Off

White 12V From Key-switch

Yellow/Red Stripe (2) Jumpers for Rectifier to Stator Term Block

Brown Tachometer Signal

Red (4 AWG)

Battery Side of Starter Solenoid
Red (18 AWG in Harness) POS (+) of Rectifier (May not be needed)

Red Jumper Connect between Rectifier positive post and the red terminal on the switch box.

NORMAL CONNECTIONS ON ALTERNATOR DRIVEN IGNITIONS

WARNING!! DO NOT CONNECT ANY 12V DC (RED WIRE) TO THE SWITCH BOXES LISTED BELOW AS SEVERE DAMAGE WILL RESULT.

SWITCH BOX P/N's

Mercury	CDI Electronics
332-4172	N/A
332-5772	114-5772
332-7778	114-7778
332-4911	114-4911
333-3213	N/A
338-4733	114-4911
339-5287	114-6222
339-6222	114-6222

Wire Color Function/Connection

Black (4 AWG) Engine Ground

Black (18 AWG)

Negative Terminal on Starter Solenoid
Yellow

Start Terminal on Starter Solenoid

Gray Choke Solenoid

Orange Kill Circuit for ADI- (May be Black/Yellow)

White Not Used- Tape Off

Yellow/Red Stripe (2) Jumpers for Rectifier to Stator (If Needed)

Brown Tachometer Signal

Red (4 AWG) Battery Side of Starter Solenoid

Red (18 AWG in Harness) POS (+) of Rectifier (May not be needed)

Red Jumper No Connection.

Black Jumper Connect Form Switch Box to Engine Ground.