

This Honda marine manual is 584 pages.

QUICK REFERENCE DATA

CHAPTER ONE / GENERAL INFORMATION

Manual organization / Notes, caution and warnings / Torque specifications / Engine operation / Fasteners / Lubricants / Gasket sealant / Galvanic corrosion / Propellers

CHAPTER TWO / TOOLS AND TECHNIQUES

Safety first / Basic hand tools / Test equipment / Service hints / Special tips / Mechanics tips

CHAPTER THREE / TROUBLESHOOTING

Troubleshooting test equipment / Troubleshooting preparation / Starting difficulty / Fuel system testing / Starting system / Ignition system / Warning systems / Charging system / Fuses and wire harnesses / Trim system troubleshooting / Base engine / Cooling system / Gearcase / Electronic fuel injection system

CHAPTER FOUR / LUBRICATION, MAINTENANCE AND TUNE-UP

Routine maintenance / Electrical and ignition system / Cooling system maintenance / Fuel system / Submersion / Tune-up

CHAPTER FIVE / TIMING, SYNCHRONIZATION AND ADJUSTMENTS

Timing adjustments / Throttle control/cable adjustments / Carburetor adjustments / Shift system adjustments / Neutral start system adjustment / Trim sender adjustment / Timing belt tensioner

CHAPTER SIX / FUEL SYSTEM REPAIR

Fuel tank and fuel hose components / Silencer cover and carburetor/throttle body/ Carburetor repair / EFI components

CHAPTER SEVEN / ELECTRICAL AND IGNITION

Starting system / Charging system / Ignition system / Warning system components / Battery maintenance and testing

CHAPTER EIGHT / BASE ENGINE

Base engine removal and installation / Flywheel / Timing belt / Rocker arm removal/installation / Cylinder head / Oil pump / Base engine disassembly / Base engine inspection and measurement / Primary gearcase repair / Break-in procedure

CHAPTER NINE / GEARCASE REPAIR

Gearcase operation / Propeller / Gearcase removal and installation / Water pump / Gearcase repair

CHAPTER TEN / JET DRIVES

Jet drive operation / Jet drive components / Thrust control / Jet drive repair / Jet drive removal/installation / Intake housing liner replacement / Impeller removal/installation / Impeller shimming / Bearing housing removal / Bearing housing installation / Correcting steering torque

CHAPTER ELEVEN / REWIND STARTER

Rewind starter operation / Rewind starter removal, assembly and installation / Rewind starter disassembly, inspection and assembly

CHAPTER TWELVE / POWER TRIM/TILT SYSTEMS

Gas-assisted manual tilt system removal/installation / Single hydraulic cylinder trim/tilt systems removal/installation / Three cylinders trim/tilt systems removal/installation / Trim/tilt system components / Trim position sender removal/installation / Trim control unit removal/installation / Electric trim/tilt motor removal/installation / Manual relief valve replacement / Electric trim/tilt motor repair / Filling procedure / Bleeding procedure

CHAPTER THIRTEEN / MIDSECTION

Minor repairs / Major repairs / Tiller control components

CHAPTER FOURTEEN / REMOTE CONTROL

Throttle/shift cable removal/installation / Remote control disassembly and assembly

SUPPLEMENT / 2000-2005 MODEL SERVICE INFORMATION

Auto-start system / Centrifugal clutch

INDEX

WIRING DIAGRAMS

Models covered:

1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF100
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda
BF115A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda
BF130A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF15A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF20
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF20A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF25A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF2A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF30A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF35A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF40A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF45A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF50
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF50A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF5A

1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF75
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF75A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF8A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda
BF9.9A
1976 1977 1978 1979 1980 1981 1982 1983 1984 1985 1986 1987 1988 1989 1990 1991 1992
1993 1994 1995 1996 1997 1998 1999 2000 2001 2002 2003 2004 2005 2006 2007 Honda BF90A

Clymer Manuals Honda BF100 Manual
Clymer Manuals Honda BF115A Manual
Clymer Manuals Honda BF130A Manual
Clymer Manuals Honda BF15A Manual
Clymer Manuals Honda BF20 Manual
Clymer Manuals Honda BF20A Manual
Clymer Manuals Honda BF25A Manual
Clymer Manuals Honda BF2A Manual
Clymer Manuals Honda BF30A Manual
Clymer Manuals Honda BF35A Manual
Clymer Manuals Honda BF40A Manual
Clymer Manuals Honda BF45A Manual
Clymer Manuals Honda BF50 Manual
Clymer Manuals Honda BF50A Manual
Clymer Manuals Honda BF5A Manual
Clymer Manuals Honda BF75 Manual
Clymer Manuals Honda BF75A Manual
Clymer Manuals Honda BF8A Manual
Clymer Manuals Honda BF9.9A Manual
Clymer Manuals Honda BF90A Manual

Clymer Manuals Honda BF100 Online Manual
Clymer Manuals Honda BF115A Online Manual
Clymer Manuals Honda BF130A Online Manual
Clymer Manuals Honda BF15A Online Manual
Clymer Manuals Honda BF20 Online Manual
Clymer Manuals Honda BF20A Online Manual
Clymer Manuals Honda BF25A Online Manual
Clymer Manuals Honda BF2A Online Manual
Clymer Manuals Honda BF30A Online Manual
Clymer Manuals Honda BF35A Online Manual
Clymer Manuals Honda BF40A Online Manual
Clymer Manuals Honda BF45A Online Manual
Clymer Manuals Honda BF50 Online Manual
Clymer Manuals Honda BF50A Online Manual
Clymer Manuals Honda BF5A Online Manual

Clymer Manuals Honda BF75 Online Manual
Clymer Manuals Honda BF75A Online Manual
Clymer Manuals Honda BF8A Online Manual
Clymer Manuals Honda BF9.9A Online Manual
Clymer Manuals Honda BF90A Online Manual

Honda BF20 (1976-2007)
Honda BF2A (1976-2007)
Honda BF50 (1976-2007)
Honda BF5A (1976-2007)
Honda BF75 (1976-2007)
Honda BF8A (1976-2007)
Honda BF100 (1976-2007)
Honda BF9.9A (1976-2007)
Honda BF15A (1976-2007)
Honda BF20A (1976-2007)
Honda BF25A (1976-2007)
Honda BF30A (1976-2007)
Honda BF35A (1976-2007)
Honda BF40A (1976-2007)
Honda BF45A (1976-2007)
Honda BF50A (1976-2007)
Honda BF75A (1976-2007)
Honda BF90A (1976-2007)
Honda BF115A (1976-2007)
Honda BF130A (1976-2007)