



Key No.	Parts Name	BG4500 Part No.	BG5000 Part No.	BG6500 Part No.	BG8000 Part No.
1	DRAG KNOB	J31-2101	J31-2101	J31-2101	J31-2101
2	DRAG WASHER RET	F88-4001	F88-4001	F88-4001	F88-4001
3	DRAG WASHER	J31-3601	J31-3601	J31-3601	J31-3601
4	KEY WASHER	H17-5101	H17-5101	H17-5101	H17-5101
5	EARED WASHER	G70-0701	G60-0701	G70-0701	G70-0701
6	BALL BEARING	B35-8607	B35-8607	B35-8607	B35-8607
2-7	SPOOL ASSEMBLY	J34-4801	J32-2801	J33-8601	J31-1701
8	WASHER	F05-0100	F05-0100	F05-0100	F05-0100
9	WASHER	F05-0002	F05-0002	F05-0002	F05-0002
10	CLICK LEAF SPRING HOLDER	H30-9501	H30-9501	H32-3701	H32-3701
11	SPRING	B74-7701	B74-7701	G34-1401	G34-1401
12	WASHER	F04-9901	F04-9901	F04-9901	F04-9901
13	SCREW	G27-0801	G27-0801	G27-0801	G27-0801
14	LINE GUARD PLATE	J32-2501	J32-2501	J31-0601	J31-0601
15	ROTOR NUT	J32-2401	J32-2401	J31-0501	J31-0501
16	ROTOR NUT PLT	G39-2202	G39-2202	J31-6501	J31-6501
17	ROTOR	J32-1601	J32-1601	J30-9401	J30-9401
18	BAIL SPRING (A)	H50-3401	H50-3401	H78-2801	H78-2801
19	BAIL SPRING WASHER	G68-5401	G68-5401	E27-2501	E27-2501
20	BAIL SPRING SHAFT	H50-3301	H50-3301	H68-4601	H68-4601
21	BAIL SPRING HOLDER	J32-2001	J32-2001	H68-4701	H68-4701
22	BAIL SPRING (B)	J32-1901	J32-1901	G41-8101	G41-8101
23	WASHER €	J32-1801	J32-1801	J30-9601	J30-9601
24	BAIL SPRING SHAFT	J32-1701	J32-1701	J30-9501	J30-9501
25	COLLAR	H94-5501	H94-5501	H94-5501	H94-5501
26	BAIL ARM	J30-9701	J30-9701	J30-9701	J30-9701
27	BAIL ARM SCREW	G45-5601	G45-5601	G45-5601	G45-5601
28	COVER (A)	J32-2101	J32-2101	J30-9801	J30-9801
29	SCREW	G27-0801	G27-0801	G27-0801	G27-0801
30	BAIL ASSEMBLY	J32-3301	J32-3301	J30-9901	J30-9901
31	COLLAR ©	J41-6001	J41-6001	J41-6001	J41-6001
32	LINE ROLLER	H24-6103	H24-6103	H24-6103	H24-6103
33	COLLAR (D)	J31-0401	J31-0401	J31-0401	J31-0401
34	SCREW	F60-8901	F60-8901	F60-8901	F60-8901
35	WASHER (F)	J30-9301	J30-9301	J30-9301	J30-9301
36	SCREW	J00-1601	J00-1601	J00-1601	J00-1601
37	COVER (B)	J32-3901	J32-3901	J30-9201	J30-9201
38	ROLLER CLUTCH	J30-9101	J30-9101	J30-9101	J30-9101
39	SPACING SLEEVE	J30-9001	J30-9001	J30-9001	J30-9001
40	SCREW	J00-1602	J00-1602	J00-1601	J00-1601
41	BEARING RETAINER (A)	J30-8401	J30-8401	J30-8401	J30-8401
42	BALL BEARING	G42-6301	G42-6301	G42-6301	G42-6301
43	WASHER	G61-3404	G61-3404	H24-3901	H24-3901
44	A/R RATCHET	E26-2701	E26-2701	E26-2701	E26-2701
45	WASHER	G61-3404	G61-3404	E33-9701	E33-9701
47	BALL BEARING	G52-2702	G52-2702	B86-1704	B86-1704
48	COLLAR	J32-0901	J32-0901	J30-8101	J30-8101
49	BODY	J31-9801	J31-9801	J30-7001	J30-7001
50	MAIN SHAFT	J32-0501	J32-0501	J30-7701	J30-7701
51	STABILIZER BAR	J32-0801	J32-0801	J30-8001	J30-8001
52	REAR COVER	J32-1501	J32-1501	J30-8901	J30-8901
53	SCREW	J00-1801	J00-1801	J00-1801	J00-1801
54	OSC GEAR	J32-0401	J32-0401	J30-7601	J30-7601
55	BALL BEARING	G46-7105	G46-7105	B86-1704	B86-1704
56	SCREW	H27-2201	H27-2201	H34-7101	H34-7101
57	COLLAR	H24-3301	H24-3301	H24-3301	H24-3301
58	A/R PAWL	H24-3201	H24-3201	H33-9401	H33-9401
59	SCREW	351-6401	351-6401	351-6401	351-6401
60	SPRING	J30-8601	J30-8601	J30-8601	J30-8601
61	O-RING	J32-1201	J32-1201	J30-8501	J30-8501
46+62	PINION + DRIVE GEAR UNIT	Z02-3041	Z02-3041	Z02-2625	Z02-2625
63	DRIVE GEAR WASHER	371-2800	371-2800	371-2800	371-2800
64	BALL BEARING	G52-2802	G52-2802	G52-2802	G52-2802
65	SIDE COVER	J32-1301	J32-1301	J30-8701	J30-8701
66	WASHER (J)	J42-3501	J42-3501	J42-3501	J42-3501
67	SCREW	351-6416	351-6417	351-6417	351-6417
68	BALL BEARING	G52-2802	G52-2802	G52-2802	G52-2802
69	RETAINER	H04-7201	H04-7201	H04-7201	H04-7201
70	O-RING	J04-2501	J04-2501	J04-2501	J00-2501
71	HANDLE SCREW CAP	J39-4902	J39-4902	J39-4902	J39-4902
72	HANDLE ASSEMBLY	J41-6501	J41-6501	J41-6501	J41-6501