




BAITCASTING REEL

# COASTAL-TWS200HS

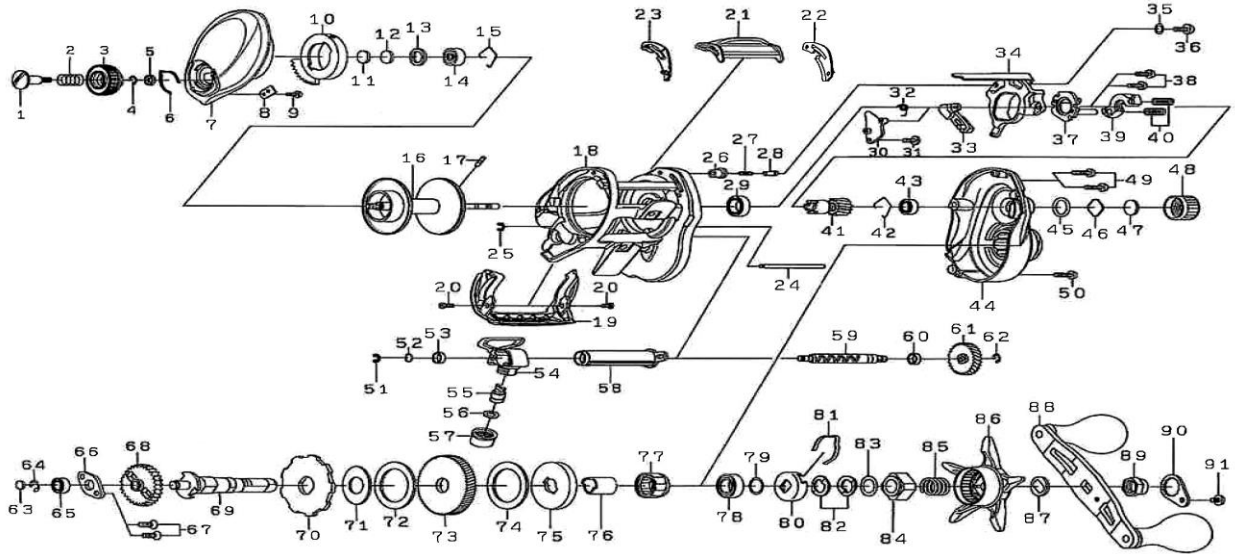

KEY NO.	PART NO.	PART NAME	KEY NO.	PART NO.	PART NAME
1	H93-0401	SET PLT SCREW	47	B17-5503	SPACER
2	E16-7101	SPRING (A)	48	J00-4701	CAST CONTROL CAP
3	H93-0227	BRAKE ADJ KNOB	49	G04-0814	R/S PLT SCREW
4	B33-9801	BRAKE DIAL RET (A)	50	G04-0825	R/S PLT SCREW
5	F63-7701	BRAKE DIAL WASHER	51	320-5901	RET (B)
6	H66-3401	BRAKE DIAL CLICK SPRING	52	B41-1700	WASHER
7	H93-0110	L/S PLT	53	G72-0001	WORM SHAFT SPACER (A)
8	H91-5501	BRAKE DIAL RET (B)	54	J17-6601	T-LEVEL WIND
9	G93-9301	SCREW (B)	55	121-4212	LINE GUIDE PALW
10	H93-0501	MAGNET HOLDER	56	373-1300	WASHER
11	375-7400	SPACER (A)	57	F40-2801	PAWL CAP
12	375-7411	SPACER (B)	58	H91-0801	LEVEL WIND GUARD
13	G18-5101	SPACER ©	59	H91-1701	WORM SHAFT
14	G51-1507	BALL BEARING (A)	60	G72-0001	WORM SHAFT SPACER
15	F03-2201	BEARING RET	61	H91-0501	WORM GEAR
16-24	J10-7203	SPOOL ASSEMBLY	62	B33-9801	RET ©
18	H91-0216	FRAME	63	G09-9800	WASHER
19	H93-0002	FRONT PLT	64	320-8002	RET (D)
20	H45-5402	SCREW ©	65	G53-8007	BALL BEARING (D)
21	H91-2401	CLUTCH LEVER	66	H92-8901	PLATE (B)
22	H91-5601	CLUTCH LEVER PLT	67	E13-4509	SCREW
23	H91-5701	CLUTCH LEVER PLT	68	H91-2701	DRIVE SHAFT GEAR
24	H91-2101	STABILIZER BAR	69	H91-1601	DRIVE SHAFT
25	H70-4101	RET (A)	70	H92-9401	A/R RATCHET
26	H91-0601	COLLAR	71	H66-1101	DRIVE SHAFT WASHER (A)
27	H92-8801	SPRING (B)	72	H66-1001	DRIVE SHAFT WASHER (B)
28	J05-5201	PIN	73	J07-5402	DRIVE GEAR
29	G43-1002	BALL BEARING (B)	74	H45-2601	DRAG WASHER
30	H91-2301	PLATE (A)	75	H91-3201	KEY WASHER
31	H29-4101	SCREW (D)	76	G54-5001	GEAR SHAFT COLLAR
32	H45-0001	CLUTCH CAM SPRING	77	G81-9801	ROLLET CLUTCH
33	J22-1401	CLUTCH TRIP LEVER	78	G43-1002	BALL BEARING
34	H92-8701	CLUTCH CAM	79	B55-3801	WASHER
35	H15-9201	WASHER	80	F02-8203	CLICK LEAF SPRING HOLDER
36	352-2501	SCREW	81	F03-2401	CLICK LEAF SPRING
37	H65-9101	CLUTCH CAM PLT	82	150-8901	SPRING WASHER
38	B03-2904	SCREW	83	H92-9501	WASHER (F)
39	H92-9001	YOKE	84	H91-2001	NUT
40	J05-5301	YOKE SPRING	85	J01-1901	SPRING ©
41	J09-1901	PINION GEAR	86	H91-1901	STAR DRAG
42	H18-0501	BEARING RET	87	F57-6601	HANDLE COLLAR
43	G43-1105	BALL BEARING	88	J25-4001	HANDLE ASSEMBLY
44	H91-0325	R/S PLT	89	G79-3301	HANDLE NUT
45	171-5201	"O" RING	90	H83-4510	HANDLE NUT PLT
46	B17-5406	SPACER (F)	91	353-8301	HANDLE SCREW