



MD Series User Reference Guide

Joystick Control Unit (JCU)

Power Button

- Press to dim
- Press and hold for power menu

Menu Button

- Press to enable menu
- Press to exit menu

Scene Button

- Toggles through image contrast settings

JCU Puck

- Press and hold to zoom in
- Pull out to zoom out
- On-screen menus: move up/down by twisting or moving fore or aft
- Press to select (click)



LCD Display

- Displays JCU menu
- Use puck to move

User Button

- Toggles through color palettes


Home Button

- No effect (used with other cameras)

Color Button

- Toggles through color palettes

Web Interface Toolbar Buttons

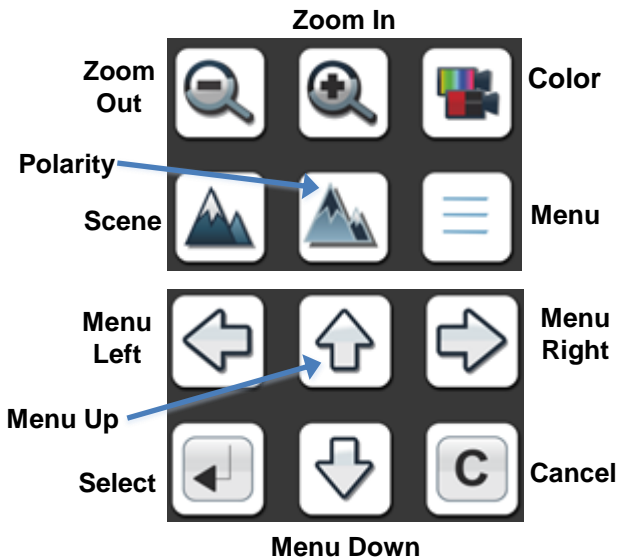

MD Series User Reference Guide

Video Screen Icons

On-screen Menu

