

Operational Overview


Power/Brilliance key and microSD card slots

Peel the cover from the bottom to show:

microSD card slots (2 places)
Note: Insert cards on an angle towards the back of the unit.
Forced shut-down button

Power/Brilliance key

- Long press: Turn power on/off.
- Short press: Show the Brilliance settings pop up window. Adjust the brilliance.

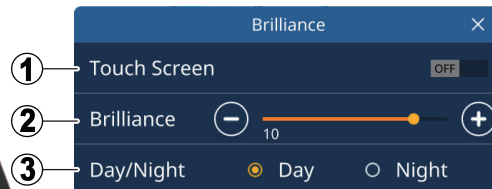


Brilliance settings pop up window

- ① Lock the touch screen.
- ② Adjust the screen brilliance.
- ③ Change the color scheme.


How to select the displayed page

Method 1: From the Home screen

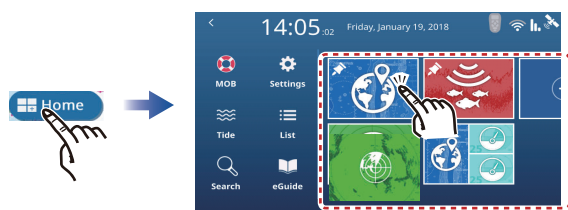

Home screen


Method 2: From the Quick Page list

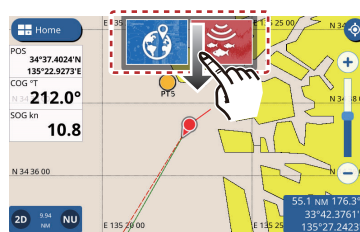

Quick Page list*

*: Pages "pinned" with the pin tool (📌) from the Home screen.

Edge-swipe functions

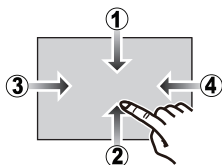

- ① Top edge of the screen, downwards: Shows the Quick Page list.
- ② Bottom edge of the screen, upwards: Shows the layered menu.
- ③ Left edge of the screen, rightwards: Shows the data boxes.
- ④ Right edge of the screen, leftwards: Shows the slide-out menu.


Chart Plotter

Zoom in/Zoom out

Method 1: Screen-pinch



Method 2: Slide bar

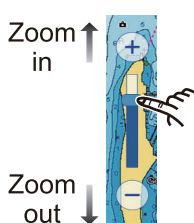


Point Creation



Saved point appears on the screen.

Changing the display orientation

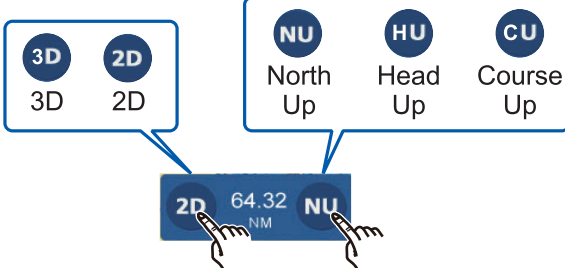


Quick Route Creation




Saved point becomes Quick Route destination.

Planned Route Creation

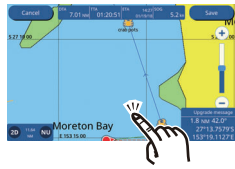

Tap the location of the next waypoint.


Repeat

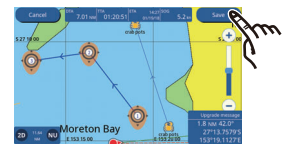

Tap Save route after entering the final waypoint.

Radar

Standby/Transmit

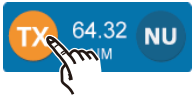

TX : Transmitting

TX : In standby

Fish Finder


Frequency Selection




HF : High Freq.

LF : Low Freq.

Gain mode selection


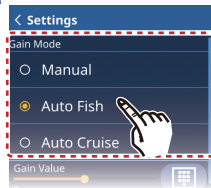


 Auto modes: Tap [Auto Fishing] or [Auto Cruise].
Manual mode: Tap [Manual].



For manual mode, drag the slider icon (circle).




Echo Adjustments

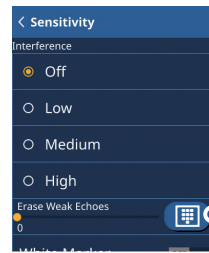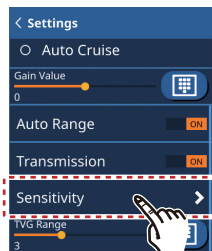

Reduce interference

Remove weak echoes

Display mode selection

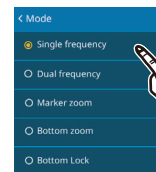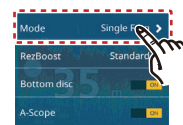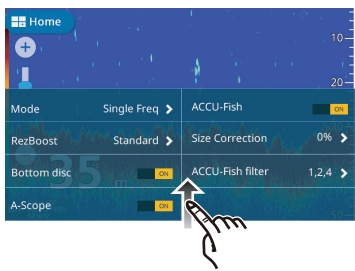

- Single frequency
- Dual frequency
- Marker Zoom
- Bottom Zoom
- Bottom Lock

Instruments

Instrument selection



Repeat
(Up to 7 pages available)