

# Model NAVpilot-300

## Operator's Guide

The purpose of this guide is to provide the basic operation for this equipment. For more detailed information, see the Operator's manual and Installation manual.  
All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

### Key functions

**Short press:** Turn on power; open the brilliance adjust window.  
**Long press:** Turn off power.



**STBY mode (Short press):** Change the main data box display.  
**AUTO and SABIKI™ mode (Short press):** Steer boat to port by 1 degree.

**STBY mode (Short press):** When the destination is not set on the GPS navigator Go to AUTO mode. When the destination is set on the GPS navigator Open the steering mode selection window.  
**Other modes (Short press):** Go to STBY mode.

**STBY mode (Long press):** Go to NFU (PORT) mode.  
**AUTO and SABIKI™ mode (Short press):** Steer boat to port by 10 degrees.  
**Other modes (Long press):** Dodge (PORT) mode

**Short press:** Open the turn menu.  
**Long press:** Open/close the user menu.

**STBY mode (Short press):** Change the sub data box display.  
**AUTO and SABIKI™ mode (Short press):** Steer boat to starboard by 1 degree.


**STBY mode (Long press):** Go to NFU (STBD) mode  
**AUTO and SABIKI™ mode (Short press):** Steer boat to starboard by 10 degrees.  
**Other modes (Long press):** Dodge (STBD) mode

### How to adjust brilliance


Short press → Panel Dimmer 5, Brilliance 4 → Close

Adjust the panel dimmer. (Adjust the display brilliance.)

### How to select a steering mode

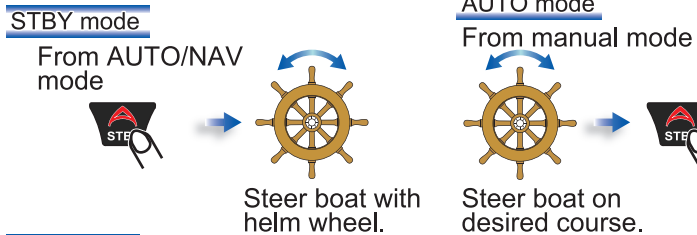

For advanced auto mode, connect NAVpilot to a navaid which outputs position data. Select [Advanced Auto: ON] from menu, then operate NAVpilot as in AUTO mode.

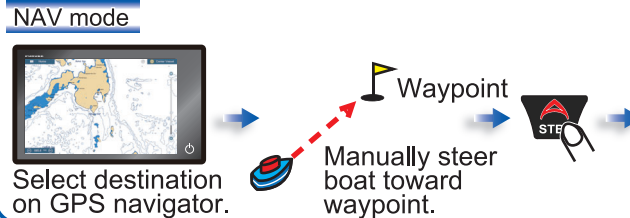


NAV mode is available. Please select the steering mode.

- NAV (Economy)
- NAV (Precision)
- AUTO
- Cancel

or

### How to dodge boats, obstacles

 In STBY/NAV mode



Release after object has been dodged.

### Operation in the safe helm mode



(Available with the Accu-Steer FPS 12V/24V drive unit.)



Turn the helm to dodge object.

### How to use the preset turns

The [ ] key provides various turnings, motions.  
P: to "port"  
S: to "starboard"

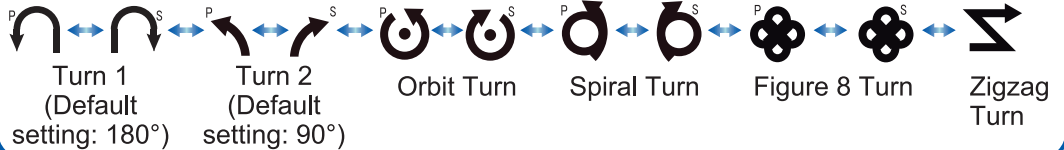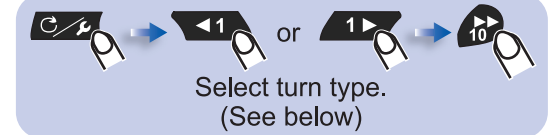

### Gesture Controller GC-001

**Turning on/off the remote controller**  
Long press MENU key.

**Switching AUTO and STBY mode**  
Press **STBY/AUTO** key to switch from AUTO mode to STBY mode and vice versa.

### Pairing procedures


**On GC-001**  
Turn on and select [PAIRING] menu and select [YES].

**On NAVpilot-300**  
Turn on and select [Wireless RC] from the menu.

Select the remote controller from the listed equipment and pairing is completed.

### Gesture operation

1. Point the current heading direction with the remote controller.
2. Press **GESTURE** key.
3. With pressing the **GESTURE** key, move the GC-001 horizontally and NAVpilot-300 will steer to the pointed direction.
4. Release **GESTURE** key.

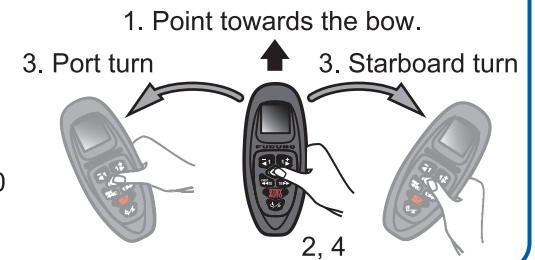

### If this happens...

#### Control unit display is blank

- Press key several times and adjust the brilliance.

#### Displayed compass heading does not match with vessel compass

- Compass not calibrated. Do compass setup in Sea trial menu, in Installation menu.

#### Drive unit steers helm hard over when Auto is activated

- Do rudder limit setup and rudder test on Dockside setup menu, in Installation menu.

#### NAVpilot does not auto advance

- No position data. Check that position source is outputting this data.

#### How to display Installation menu:

On STBY display  
Press and hold + Press 3 times