

# JABSCO®

## Impeller Removal Tool

- Simple to use
- Fits ALL makes of impeller
- Avoids damage to pump
- All Stainless Steel

50070-0080 ■ 40 - 57mm (1<sup>9</sup>/<sub>16</sub>" - 2<sup>1</sup>/<sub>4</sub>")  
(compact version)


50070-0040 ■ 40 - 65mm (1<sup>9</sup>/<sub>16</sub>" - 2<sup>9</sup>/<sub>16</sub>")

50070-0200 ■ 65 - 118mm (2<sup>9</sup>/<sub>16</sub>" - 4<sup>5</sup>/<sub>8</sub>")



**JABSCO®**

# Impeller Removal Tool

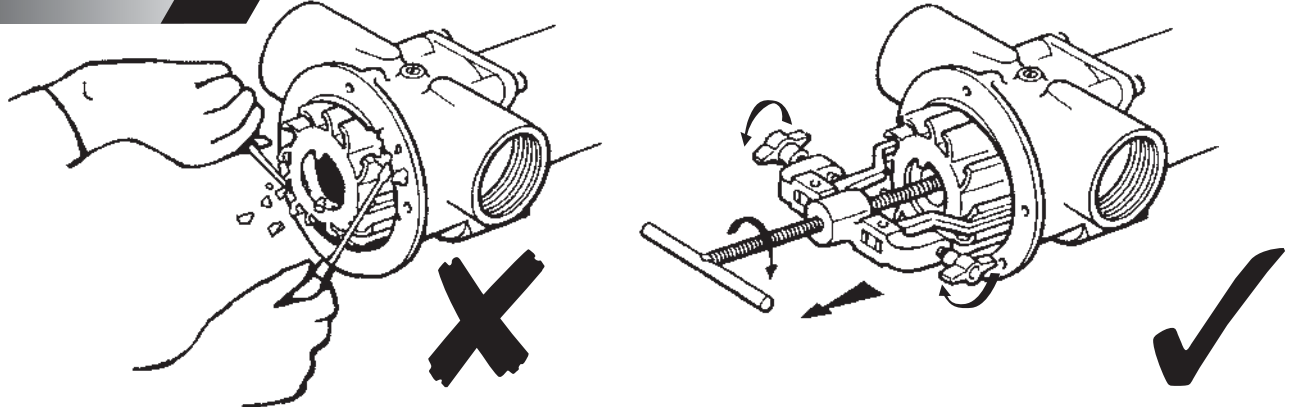

## **GB** Impeller Removal Tool

**Simple to use Fits ALL makes Avoids damage to pump All Stainless Steel**

- Remove screws, end cover and gasket from the pump body.
- Extract the impeller from the pump body using the Jabsco Removal Tool.
- Remove any debris from pump chamber and inlet / outlet ports.