




Disassemble, Disconnect and Recycle Tron 60S/ Tron 60GPS

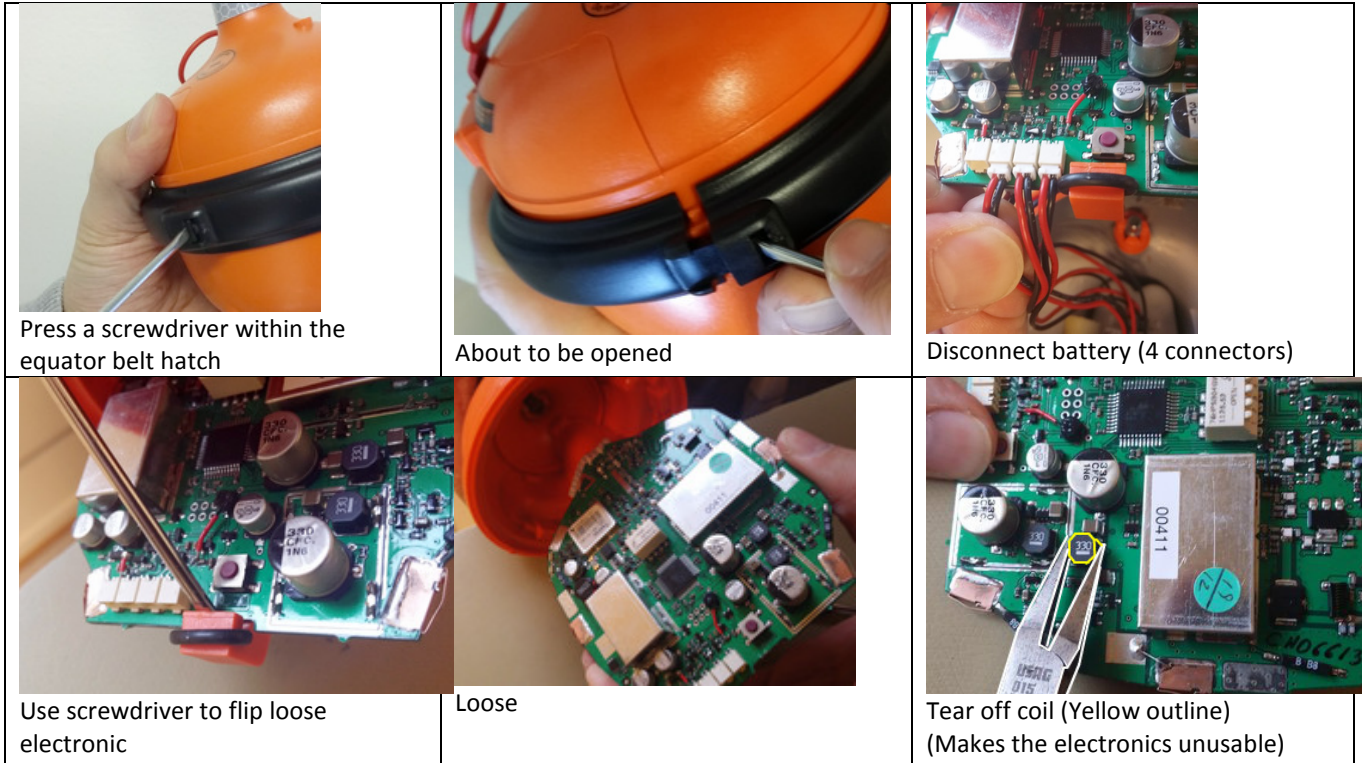

Press a screwdriver within the equator belt hatch

About to be opened

Disconnect battery (4 connectors)

Use screwdriver to flip loose electronic

Loose

Tear off coil (Yellow outline) (Makes the electronics unusable)

Recycle the different parts:

	Part	How	Note
1	Battery	Do NOT throw in waste bin, but recycle as "Haz.mat" (Dangerous goods).	Contains high energy Lithium Metal batteries of type Energizer L91.
2	Electronics	Do NOT throw in waste bin, but recycled according to legal procedures regarding waste electronic.	May contain: <ul style="list-style-type: none"> • Lead (Pb) • Copper(Cu) • Tin (Sn) • Other metals
3	Plastic	Contains mostly Polycarbonate (Lexan) .	