

Owner's Manual

Read fire extinguisher labels completely before you read this owner's manual.

Which Extinguisher To Use

There are two common types of fire extinguishers. Type ABC extinguishers fight wood, paper and cloth fires, plus flammable liquid and electrical fires.

Type BC extinguishers are for flammable liquids and electrical fires.

 
To determine which class or classes of fire your extinguisher is designed to fight, locate the use code symbols on the front extinguisher label.

Using the wrong extinguisher on a fire could do more harm than good. Be sure you understand which extinguisher is appropriate for each class of fire. For protection against ALL COMMON CLASSES OF FIRES, you must choose a type ABC extinguisher.


Inspection And Maintenance

To ensure that your fire extinguisher will be ready when needed:


- Read and follow all instructions on label and in owner's manual.
- Inspect the extinguisher AT LEAST once a month - more frequently if exposed to weather or possible tampering.
- Check that extinguisher is charged. Pointer on pressure indicator MUST be in green section. If pointer is in red or white section extinguisher is NOT ready for use.
- Be sure the lock pin is firmly in place.
- Keep the extinguisher clean. Check for dents, scratches, corrosion or any other damage.
- Check the discharge nozzle. Make sure it is clean and free of obstructions.

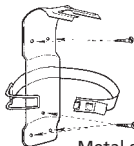

Metal strap bracket

 

Plastic wall hanger

 

Metal wall hanger

 
Plastic Strap Bracket Instructions

1



1. Fasten bracket to wall with appropriate fasteners (not included).

2

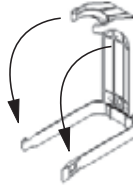

2. Place extinguisher into bracket. Buckle straps together to lock in place.

IF YOUR EXTINGUISHER WAS SHIPPED WITH A PLASTIC BRACKET AND METAL STRAP then mount your extinguisher as follows:

1. Fasten bracket to suitable surface using a screw in the upper bracket mounting hole.
2. Mount the metal strap provided with your extinguisher in the lower bracket mounting hole using another screw.
3. Place extinguisher into bracket and latch the strap to hold the extinguisher securely in place.

IF YOUR EXTINGUISHER WAS SHIPPED WITH A HOSE AND HOSE STRAP, then slide the hose strap over the bottom of the cylinder, and secure the nozzle end of the hose to the hose strap before placing your extinguisher in service.

366224M

IF YOUR EXTINGUISHER WAS SHIPPED WITH A PLASTIC BRACKET AND METAL STRAP then mount your extinguisher as follows:

1. Fasten bracket to suitable surface using a screw in the upper bracket mounting hole.
2. Mount the metal strap provided with your extinguisher in the lower bracket mounting hole using another screw.
3. Place extinguisher into bracket and latch the strap to hold the extinguisher securely in place.

IF YOUR EXTINGUISHER WAS SHIPPED WITH A HOSE AND HOSE STRAP, then slide the hose strap over the bottom of the cylinder, and secure the nozzle end of the hose to the hose strap before placing your extinguisher in service.

366224M

Owner's Manual

Read fire extinguisher labels completely before you read this owner's manual.

Which Extinguisher To Use

There are two common types of fire extinguishers. Type ABC extinguishers fight wood, paper and cloth fires, plus flammable liquid and electrical fires.

Type BC extinguishers are for flammable liquids and electrical fires.

To determine which class or classes of fire your extinguisher is designed to fight, locate the use code symbols on the front extinguisher label.

Using the wrong extinguisher on a fire could do more harm than good. Be sure you understand which extinguisher is appropriate for each class of fire. For protection against ALL COMMON CLASSES OF FIRES, you must choose a type ABC extinguisher.

Inspection And Maintenance

To ensure that your fire extinguisher will be ready when needed:

- Read and follow all instructions on label and in owner's manual.
- Inspect the extinguisher AT LEAST once a month - more frequently if exposed to weather or possible tampering.
- Check that extinguisher is charged. Pointer on pressure indicator MUST be in green section. If pointer is in red or white section extinguisher is NOT ready for use.
- Be sure the lock pin is firmly in place.
- Keep the extinguisher clean. Check for dents, scratches, corrosion or any other damage.
- Check the discharge nozzle. Make sure it is clean and free of obstructions.

Remember the phrase **PASS**

P A S S

pull the pin

aim at the
base of fire

 
squeeze
lever & handle

sweep from
side to side



The fire extinguisher is filled with a dry chemical agent. Examine the extinguisher's instruction label to determine the types of fire that can be tackled with this extinguisher.

The fire classifications (Types of Fire)

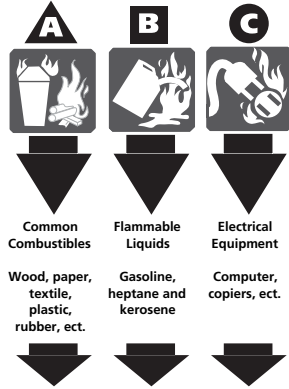

DO NOT TEST BY PARTIALLY DISCHARGING. LOSS OF PRESSURE WILL OCCUR.

Six, Ten or Twelve-Year Limited Warranty
(see below for 10 & 12 year applicable models).

KIDDE will repair or replace this product to the original owner free of charge, if defective in material or workmanship. This warranty does not apply to damage resulting from accident, alteration, abuse or failure to follow instructions supplied.

KIDDE, at its option, may refund the purchase price in lieu of replacement or repair. ANY AND ALL IMPLIED WAR-RANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO A PERIOD OF SIX (6) YEARS FROM DATE OF PURCHASE. KIDDE, its dealers and distributors shall not be responsible or in any way liable for any special or consequential damages for breach of any warrant or implied warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.