 
LOWRANCE Hook Reveal


Hook Reveal Quick Guide


Front controls



	ſ				
1	Pages	• Press to activate the Home page.			
2	Zoom in/ out				
3	Arrows	 On any full screen page: Press to position the cursor on the image. Press to pan the image in any direction. On multi-panel pages: Press to select panel. In menus and dialogs: Press to highlight an option. 			
4	Exit (X)	 On a maximized multi-panel page: Press to return to the multi-panel page. In menus and dialogs: Press to return to previous menu level and to exit a dialog. 			
5	Menu/ On any full screen page with no menu or dializative: • Press to display the menu. On multi-panel pages: • Press to maximize the current selected particular in menus and dialogs: • Press to confirm a selection.				
6	Cursor/ Waypoint	Press to activate/deactivate the cursor.Press and hold to save a waypoint.			
7	Power	 Press to display the System Controls dialog. Press and hold to power the unit on/off .			

  Micro SD card





The card reader position depends on model.

System controls dialog

Used for quick access to system settings.



→ *Note:* The content of the System Controls dialog depends on connected equipment and active panel.

Display illumination

- Set brightness and select day/night mode from the System Controls dialog.
- Repeat short presses on the Power key to cycle the backlight brightness.

The Home page



- 1. Tools panel
- 2. Page icons
- 3. Customize option
- → *Note:* Page icons on the Home page vary with model type.

Pages

Select a page icon on the Home page to display a page.


Custom pages



- Select the **Add Page** icon to create a custom page.
- Switch **Customize** ON to edit custom pages.

Multi-panel pages

- With cursor not active on any panel: switch active panel by using the arrow keys. An active panel is indicated with an orange border.
- Activate the cursor by pressing the Cursor/Waypoint key, then use the arrow keys to position the cursor.
- Maximize the active panel by pressing the Menu/Enter key. Press the X key to go back to the multi-panel page.
- Adjust panel size by selecting **Adjust** in the System controls dialog, then use the arrow keys to set preferred panel size. Confirm the layout by pressing the Menu/Enter key.

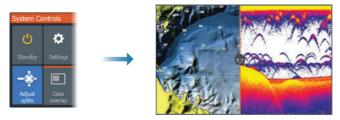

→ *Note:* You must maximize a panel in a multi-panel page to use the panel menu.

Charts and GPS plotter pages



aaa		6
23.0 45.7	1	
60.2	7	

Chart page (only available for Hook Series models)

GPS Plotter page(only available for Hook X Series models)

- Zoom the image by using the Zoom keys.
- Pan the image in any direction by using the arrow keys.
- Display item information by positioning the cursor on an item and then pressing the Menu/Enter key.

Create a route

- 1. Activate a full screen page or maximize the panel on a multi-panel page
- 2. Press the Menu/Enter key to activate the menu, then select the **New route** option in the menu
- **3.** Press the arrow keys to position the first route point, then press Menu/Enter key to confirm the position
- 4. Repeat step 3 to position additional route points
- 5. Press the X key to save the route

Trails

The system automatically tracks and draws the vessel's movement on the chart/GPS Plotter panel. Trails are managed from the Trails dialog.

To display the trails dialog:

- 1. Select Waypoints, Routes, Trails from the Home page
- 2. Select the Trails tab in the dialog
- 3. Select the trail you want to edit




Change chart source if card is inserted

Set	tings		
System Controls	System	Chart source	Lowrance 🗸 🗸
U 🗘	r system	Popup information	Lowrance
Standby Settings	Navigation	Range rings	Navionics
		Grid lines	C-MAP
	🕀 Chart	Waypoints	ON
Data Edit overlay overlay	Sonar	Routes	ON
		Traile	01

Sonar, SideScan and DownScan

 → Note: Available options depend on installed transducer. SideScan is only available on TripleShot models with a SideScan capable transducer connected.



Sonar

SideScan

DownScan

- Zoom the image by using the Zoom keys.
- Use the arrow keys to view the sonar history.

By default the unit is set to **Auto** mode, and all settings are automated.

• Change to **Custom** mode to allow for customizing the settings.



Logging sonar data

Sonar data can be logged and saved to internal memory or to a memory card.



Create a waypoint

Press and hold the Cursor/Waypoint key to save a new waypoint.

- With cursor inactive, the waypoint is placed at the vessel's position.
- With cursor active, the waypoint is placed at the cursor position.



Overlay data



The data type can be changed, and the item position on the image is selectable.

The data items can be turned on/off from the System Controls dialog. Each data item can be removed individually from the panel:



- 1. Select the **Edit overlay** option in the System Controls dialog to turn the unit into edit mode
- 2. Press the Menu/Enter key to display edit options
- 3. Press the X key to leave edit mode

Create a Man Over Board (MOB) waypoint

Activate a MOB waypoint by pressing both Zoom keys simultaneously.



Settings dialog

Used for system configuration.



