

INSTRUCTION MANUAL

CAR DVD/MP4 PLAYER

MAJESTIC[®]







DVD5800

— PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE OPERATION —

ATTENTIONS OF INSTALLATION

ATTENTIONS OF INSTALLATION

    - 1、 This player should be installed by professional technician.
- 2、 Please read the instruction and operation of equipment carefully before installing.
- 3、 Make sure to connect other wires before power connection.
- 4、 To avoid short circuit , please make sure all the exposed wire are insulating.
- 5、 Please fix all the wires after installation.
- 6、 Please make connection to the player accordingly to this instruction manual, wrong connection may cause damage.
- 7、 This player just only fit for 12V DC device and please make sure your car belongs to this kind of cathode grounding electrical system.
- 8、 Please connect the wires rightly. Wrong connection will cause malfunction or damage the car electrical system.

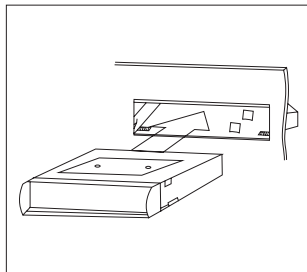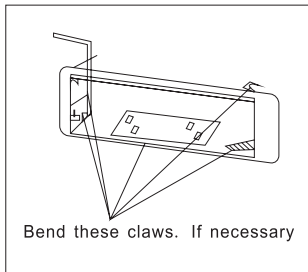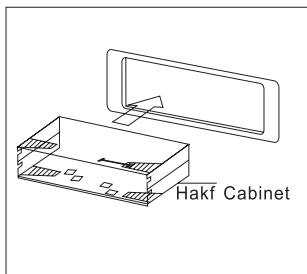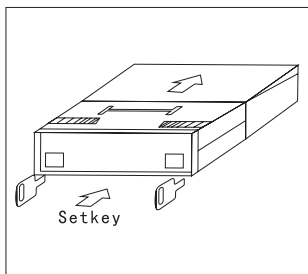


NOTE:

Please keep the disk access clean. Please make cleaning with soft cloth if any dust on the disk. If the dirty disk be loaded, it would damage the mechanism, and this circumstance will be not included in the guarantee.


INSTALLING PROCESS

INSTALLING PROCESS

 - 1、Overall
- 2、Theftproof frame
- 3、Dashboard
- 4、Erection bolt
- 5、Spring
- 6、M5×15 hexagonal nut
- 7、Car diaphragm
- 8、The fixed iron rod
- 9、Tapping screw.

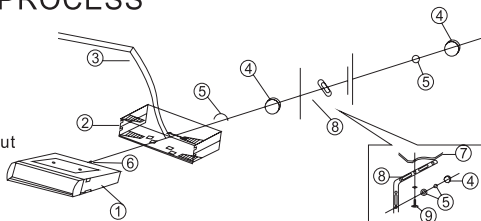


WIRING DIAGRAM

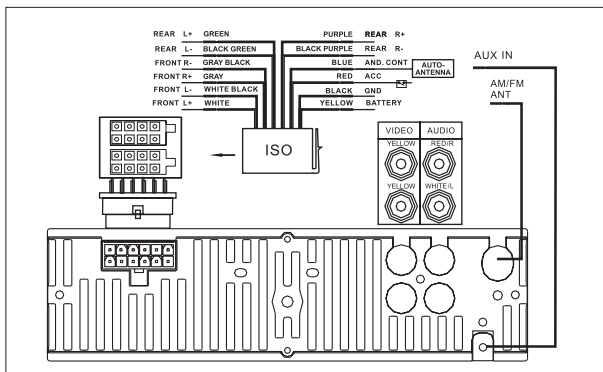 

- 1、 This equipment can only be used by the 12V DC cathode grounding electrical system.
- 2、 To avoid short circuit, don't connect the terminals of the car battery until the player is absolutely with well erection joint.
- 3、 Please make sure to connect the yellow wire to the positive of the battery(+) or the terminal of the BAT.
- 4、 When change the fuse , please make sure the specifications are same.
- 5、 Using good quality speaker with 4-8 ohm can result in the best effect of the equipment.

CONTROL PANEL AND FUNCTIONS

 CONTROL PANEL AND FUNCTIONS

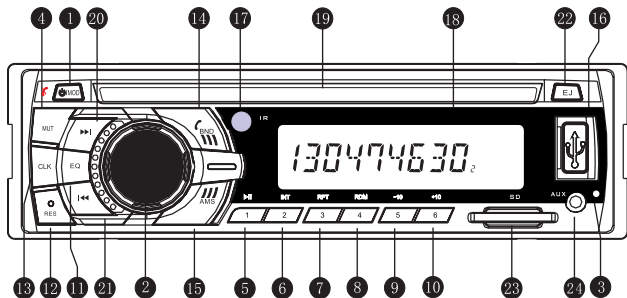

(Diagram I)

- 1、 "POWER/MODE" button : Power on/off. exchange mode after power on unit/phone connect
- 2、 "VOL/SEL" button : Volume adjusting/multifunctional adjusting
- 3、 "MIC" hole : Microphone(unavailable if the player does not have Bluetooth function)
- 4、 "MUTE" button
- 5、 "1 /▶||"button : preset station / pause/play
- 6、 "2 / INT" button : preset station / songs display
- 7、 "3 / RPT" button : preset station / repeat playing
- 8、 "4 / RDN" button : preset station / random playing
- 9、 "5 / +10" button : preset station / next ten playing.
- 10、 "5 / -10" button : preset station / previous ten playing.
- 11、 "EQ" button : For equalizer selection
- 12、 "RES" button : reset
- 13、 "CLK" button : clock
- 14、 "BAND" button : band switching /phone cancel
- 15、 "AMS" button : preset station memorized
- 16、 USB port
- 17、 Remote control receiver
- 18、 LCD display
- 19、 Disk entrance
- 20、 "◀◀"button: previous / automatic up scanning
- 21、 "▶▶"button: next / automatic down scanning
- 22、 "EJ"button: disk pop up
- 23、 SD card slot
- 24、 AUX IN

Bluetooth Operation:

(1).To pair the player with mobile phone

Activate Bluetooth function in your mobile phone and start a device search. When the mobile find the Bluetooth device from the player, try to connect them. You may be required to input the default password "0000" in your mobile."BT ON" will display on the LCD of player after pairing is successfully connected. And now you can operate calls through the player.

(2).Receive calls

 
When there comes a call, coming call's number will display on the LCD. Press "BAND" to answer the call, or press "MODE" to reject or end the call.

(3).Make calls

Input the phone number in your mobile phone and you can talk through the player. Press "MODE" to end the call.

REMOTE CONTROL

REMOTE CONTROL OPERATION

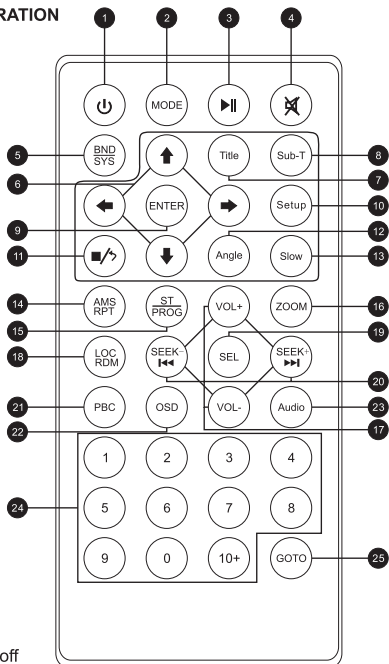

1. Power Button: Power on/off
2. Mode Button: Radio, playback mode conversion
3. " > || " Button: PAUSE/PLAY
4. "MUTE" Button: Press for mute
5. BND/SYS: On radio position for band conversion; on DVD playback position for system conversion (unavailable on CD playing position)
6. Menu Select: In Playing position, you can press these buttons to select the menus according to your request, and then press "ENTER" or play button to confirm
7. TITLE Button: When playing VCD/DVD, press "Title" button to display all the list of the disc. And you can use number keys (1 to 10 +) directly to select, or use selecting button "6" to select the desired menu and then press "9" or "3" to confirm. (NOTE: "Title" button will be unusable in CD/MP3 playing mode)

REMOTE CONTROL

8. Sub-T Button: Press the "Sub-T" button for subtitle/sound/Chinese/English selection.
9. ENTER Button: press "ENTER" to confirm the selected menu.
10. Setup Button: menu setting, press "Setup" button when playing disc, the contents of the system menu will display on the screen.
11. "■/↵" Button: Back to the menu / select. To terminate the current playing, press " " to go back to main menu to select.
12. Angle Button: in the DVD playing, you can press "Angle" button for different angle watching.
13. Slow Button: In the DVD \ VCD playing mode, press this button for 1 / 2 speed playing, again for 1 / 3 speed, 1/4 speed playing, and till 1/7 speed playing.
14. AMS/RPT Button: On radio mode, press "AMS / RPT" button to scan the desired radio stations; On disc playing mode, press "AMS / RPT" button for repeat.
15. ST/PROG Button: ON radio model, press this button for single track/stereo conversion. On playback mode for program. (Note: Only be available for DVD playing)
16. Zoom Button: Zoom settings: In DVD/VCD playing mode, press "ZOOM" button for double display, again for triple display and till four times display (Note: it will be unusable in CD/MP3 playing mode)
17. VLO+/VOL- Button: Increase or decrease the volume.
18. LOC / RDM: In the radio mode, press "LOC / RDM" button for near / far effect. In playback mode for random playing.
19. SEL Button: Press the "SEL" button to select by following order.
VOL-BAS-TRE-BAL-FAD
20. "⏮ / ⏭" Button: Radio Scan/Playing Select/fast forward/fast backward:
 - * In radio mode, press "⏮ / ⏭" for station scanning upward or downward. Press and hold button "⏮ / ⏭" over 3 seconds for manual scanning.
 - * In disc playing mode, press "⏮ / ⏭" for playing selecting upward or downward. Press and hold for fast forward/fast backward.
21. PBC Button: In DVD/VCD playing mode, press "PBC" button and screen will display all the list of the disc. And you can use number keys (1 to 10 +) directly to select the desired song. When the equipment is playing PBC list and you want to stop, press "■/↵" button and come back to main menu to select others. Again press "PBC" button to cancel PBC playback.
22. OSD button: Playing Time Display. In DVD, VCD, CD playing, press "OSD" button and the Playing time/remain time/full time will display on the screen.
23. Audio Button: Left / Right stereo Adjustment In DVD, VCD, CD playing, continuously press "Audio" button to set up the left / right channels and stereo mode.
24. 1-10+button: number buttons
 - * In radio mode, press button "1-6" to select the memorized radio stations .
 - * In disc playing mode, press button "1-10 +" to select any segment directly.
25. GOTO Button: select according to playing times.

NOTE:

- 1.If make wrong connecting to the antenna lighting(blue / white wire) or touch ground will result in the phenomenon of burn-in or no power on.
- 2.If make wrong connecting to the power wire(yellow wire) or touch ground will result in the phenomenon of burn-in or no power on.
- 3.If make wrong connecting to the memory wire (red line) will result in the phenomenon of burn-in or no power on or can not turn off the equipment after take off the key of car.
- 4.Make sure to connect the wires with speakers correctly, otherwise it will cause burning to the speakers and amplifier IC, or no voice.
- 5.Always keep the disc entrance clean, clean the dust disc with soft cloth before put in the disc. Otherwise the dust will cause damage to the laser head.

PERFORMANCE & INDEX

RADIO PART

Frequency FM Range:.....	87.5 – 108MHZ
AM Range:.....	522-1710KHZ
Medium Frequency range:.....	10.8MHZ±0.3%
Noise Limit Sensitivity:.....	40dB
Image-Rejection Ratio:.....	40dB
Residual Noise Sensitivity:.....	15-30dB

DVD/VCD/CD/MP3

Laser:.....	Laser light wavelength780MM
Frequency Response:.....	20HZ-20KHZ
Signal Noise Ratio:.....	80dB
Coordinate Distortion:.....	<0.012%(1KHZ)
Disc Format:.....	DVD/VCD/MP3/CD/CD-R/CD-RW/PICTURE-CD

OVERALL

Output Power (10% THD):	4X45W
Tone Control:.....	±8dB(BASS100Hz,TRE10KHz)
Power Voltage:.....	11-16VDC
Speaker Impedance:.....	4-8ohm/channel
Install Dimensions:.....	178x165x50MM
Weight:.....	2.0Kg