



PROPELLER REPLACEMENT:

- Disconnect the motor from the battery.
- Hold the propeller and loosen prop nut with pliers or wrench.
- Remove prop nut and washer. If drive pin is sheared, hold the shaft steady with a screwdriver blade pressed into the slot on end of shaft.
- Turn the old prop to horizontal (as illustrated) and pull it straight off. If drive pin falls out, push it back in.
- Align new propeller with the drive pin.
- Install prop washer and prop nut.
- Tighten prop nut 1/4 turn past snug. [25-35 inch pounds]
Be careful, over tightening prop nut can damage prop.