



Installation Manual

Transom Mount Models Only.

KPS25A

KPS50A

KPS100A

KPS25B

KPS50B

KPS100B

KPS25C

KPS50C

KPS100C



Introduction

Thank you for purchasing your new KingPin Anchor system. Please read through these operating instructions so you will know how to install and operate your model properly.

Safety Precautions

The safety precautions for this KingPin Anchor system have been pre-pared to assist the operator in the performance of good safety procedures.

Warning!!

Only engage KingPin Anchor pole when stopped. NEVER MOVING. Disengage KingPin Anchor pole before moving the watercraft. ALWAYS be aware of your surrounding while moving with KingPin Anchor pole in its mount. Take CAUTION around bridges, low hanging trees, power lines, Etc. Make sure KingPin Anchor pole is securely stored before trailering boat. Always use the comfort grips while handling the KingPin Anchor pole. Never step on the KingPin Anchor mount. Take CAUTION articles of clothing could get snagged on the KingPin Anchor mount.. Use caution while docking with KingPin Anchor mount attached to watercraft. **FAILURE TO HEED TO ANY OF THESE INSTRUCTIONS MAY RESULT IN DAMAGE TO YOUR KINGPIN ANCHOR SYSTEM, WATERCRAFT, AND/OR SERIOUS PERSONAL INJURY OR DEATH.**

Kit Includes

One (1) 2.5" or 5" or 10" Transom

Four (4) 5/8" O-Rings

Four (4) Screws



*Note: Kit does **not** include the (2) Rubber Pole Clips shown below.

(Included with the Pole Kit **only**.)



Required Tools For Installation

- 13/64" Drill Bit
- Phillips Bit
- Power Drill
- Marker

Installing the KingPin Anchor

1. First use the base of the anchor as a template for marking hole location.
2. Drill holes using a 13/64" drill.
3. Place 5/8" O-Rings in countersink grooves on the boat side of Base Plate.
4. Align and secure anchor with machine screws. CAUTION over tightening may cause screws to strip.

The hardware installation is complete. Your KingPin Anchor is ready for use.

