

Cat. Nos. 0540, 0541, 0542, 0543, 0580, 0581,  
0582, 0583, 0590 & 0591 Series Combination Gas/Vent Fills

## Installation and Operation Instructions

PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING

### 1. Select mounting location:

- In accordance with A.B.Y.C., U.S. Coast Guard and E.P.A. requirements and regulations.
- Surface must be flat and provide adequate clearance to remove the cap.
- Allow for adequate clearance under fill for routing fill and vent hose, which must be selected and installed in accordance with A.B.Y.C. requirements and U.S. Coast Guard Safety Standards for Small Boat Fuel Systems (33 CFR 183).

### - CONSIDER THE LIMITATIONS OF A MARINE FUEL VENT:

- A) DO NOT LOCATE ON A SURFACE THAT CAN BECOME SUBSTANTIALLY SUBMERGED OR FLOODED, OTHERWISE WATER CAN BE DRAWN INTO THE SYSTEM DURING VENT OPERATION. AN ACCESSORY MOUNTING RING (PERKO CAT. NO. 0540RNGBLK) IS AVAILABLE TO RAISE THE FILL/VENT ABOVE THE MOUNTING SURFACE.
  - B) ACCOMODATE FUGITIVE LIQUID FUEL EMISSIONS THAT RESULT FROM IN-TANK FUEL SURGES.
2. Attach mounting template to selected mounting surface and orient for desired position of fill/vent connections and for ease of insertion of the fuel nozzle into the fill neck. Drill where indicated. Be sure to drill the 3/4 inch hole before drilling the 2-1/16 inch hole.  
**NOTE: The 2-1/16" dimension of the larger hole is sized to provide mounting surface support to the fill body. DO NOT use larger size cutter or drill.**
  3. Mount fill using #8 pan head screws. Caulk if necessary.
  4. Attach and clamp 1-1/2 inch fill hose and 5/8 inch vent hose in accordance with the above referenced standards.
  5. The vent system requires that the surge valve feels loose in order to operate properly. Remove two screws under cap to access flame arrester screen for cleaning.

**NOTE: Plastic fuel fills should NOT be grounded.**

05/16  
0540INS1

## MOUNTING TEMPLATE

This is a  
3/4" circle in  
order to scale  
internet  
printed  
templates

