

PERKO®

Operating Instructions

Fig. Nos. 1324 Series Locking Caps
0599 and 1399 Series Locking Fuel Fills

Examine the Mounting Location of the fill and consider the limitations of the key cylinder with regards to potential water intrusion -- DO NOT locate on a substantially submerged or flooded surface, otherwise moisture can be drawn into the system.

To Unlock - Insert key, hold tabs and turn key counterclockwise to engage threads, unscrew cap.

To Lock - Screw cap into fill, insert key, hold tabs and turn key clockwise, remove key.

Note: When cap is locked, top portion will spin freely.