



Features

- A 3 Weight Display Options**
Choose lb./oz., decimal lbs. or kg.
- B 8 Storage Bins**
Store up to 8 individual fish weights.
- C Total Catch Weight** Continuously displays total weight stored in bins.
- D Back Light** Illuminates screen for low light and evening conditions.
- E Ambient Temp**
Displays current air temperature.
- F Sound**
Turn acknowledgment tone on or off.

TURN ON AND CHOOSE PREFERRED MEASURING UNITS (A)

(00 Lb. 00oz °F/00.00 Lbs. °F/00.00 Lbs. °C/00.00 Kg °F/00.00 Kg °C)

- 1) Press **POWER** button for 3 seconds (until screen flashes)
- 2) While screen is flashing press the **POWER** button to cycle through the units.
- 3) When desired units are shown on the display wait until flashing stops. Next time you turn on your scale the chosen unit will be set as default.

ADJUST SCALE TO ZERO

Press the **CLEAR SCALE** button on touch screen.

TURN ON OR OFF BACK LIGHT (D)

Press **LOCK/LIGHT** button until back light turns on or off.

TURN ON OR OFF BEEP SOUND (F)

Press **SOUND** icon button until you hear a beep sound.

MEASURE THE WEIGHT OF A FISH

- 1) Add fish to the scale using the clip or hook.
- 2) The weight of the fish will show on the display.

STORE A WEIGHT INTO STORAGE BIN (B)

After fish is on the scale and the weight of the fish is showing on the display:

- 1) Press **LOCK/LIGHT** button once. You will see the flashing.
- 2) Press the desired storage bin (1-8) to save the weight.
- 3) Weight will be shown in selected bin.

DELETE WEIGHT STORED IN BIN (B)

- 1) Press the **UNDO** button and the desired bin at the same time.
- 2) The **CLEAR SCALE** button will be flashing.
- 3) Press the **CLEAR SCALE** button to delete the bin.

DELETE ALL BINS (B)

- 1) Press the **POWER** button and the **CLEAR SCALE** button at the same time
- 2) All the storage bins will flash
- 3) Press the **CLEAR SCALE** button to delete all bins.

TURN OFF

Press **POWER** button for 3 seconds (until screen goes blank)

Requires 2 AA batteries
(batteries not included).

