


ST1000+ and ST2000+ Quick Reference Guide

Basic operation

Auto mode

Extending/retracting the pushrod

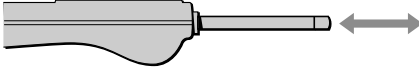

Use any of these keys to extend or retract the pushrod

-1

+1

or

-10

+10

Making course changes

Course changes to port

-1
or
-10

1°
or
10°

+1
or
+10

Course changes to starboard

Returning to previous locked heading

1 sec then again to accept heading

Returning to Standby (Disengaging the autopilot)

Entering Auto mode (Engaging the autopilot)

Track mode

Entering Track mode (from Auto or Wind Vane mode)

and to enter Track mode

then and to accept new heading

Press **standby** or **auto** to exit.

WindTrim mode

Entering WindTrim mode

and to enter WindTrim mode

Press **standby** or **auto** to exit WindTrim mode.

Using AutoTrack

AutoTrack to port (100°)

-1
and
-10

+1
and
+10

AutoTrack to starboard (100°)

Autopilot displays

Displaying navigation data
(from Auto or Standby modes)

and

Press **-1** and **+10** together to exit.

Switching lighting on/off
(from Standby mode only)

Press and to switch between:

Wait 10 sec to return to previous mode.


Switching AutoSeastate on/off
(from Auto/Track/WindTrim modes)

Press and to switch between:

ST1000+ and ST2000+ Quick Reference Guide

Compass calibration


1 Enter compass calibration

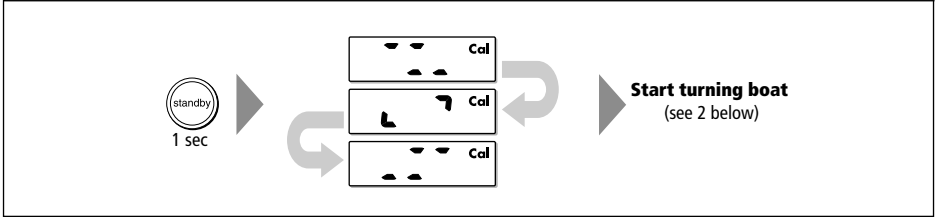

2 Turn boat in slow circles

Turn the boat in slow circles so:


- boat's speed stays below 2 knots
- each circle takes at least 3 minutes

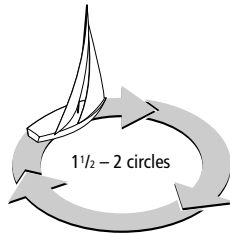

3 Autopilot displays amount of deviation detected


Keep turning the boat until the display alternates between:

 - autopilot heading
- deviation detected



4 Align the autopilot heading

Adjust the autopilot heading to match the boat's steering compass

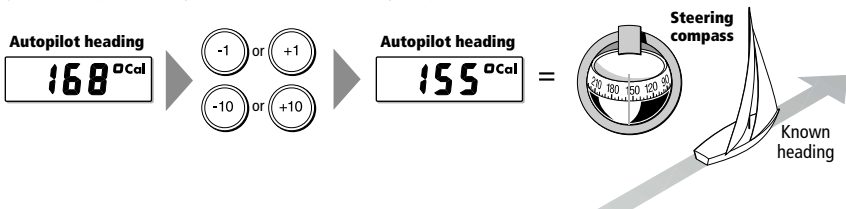

5 Save changes



- To:
- save deviation correction
 - save heading alignment
 - return to STANDBY mode



- To:
- quit compass calibration without saving

D3363-2