



High Water Bilge Alarm INSTRUCTION MANUAL

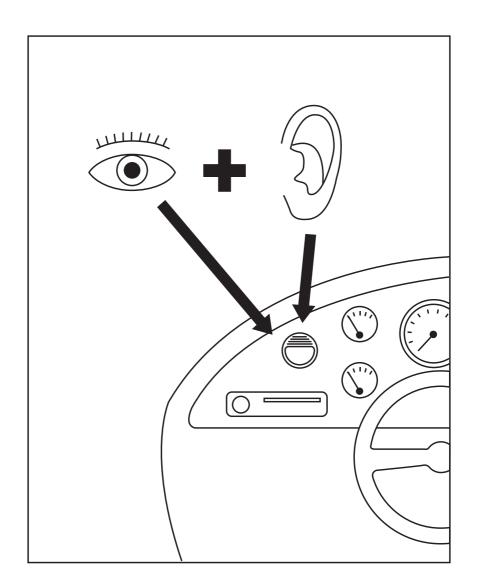



CAUTION Disconnect power from the system before working on the unit to avoid personal injury, damage to the surrounding environment and/or damage to the unit.






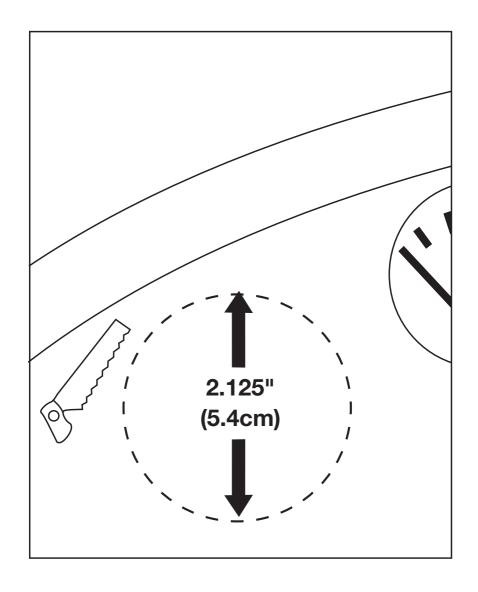

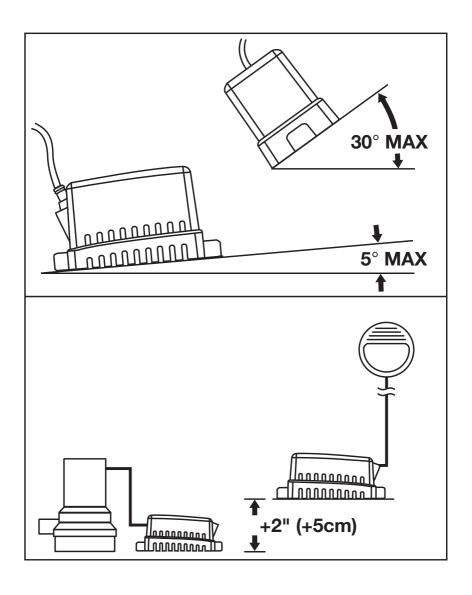

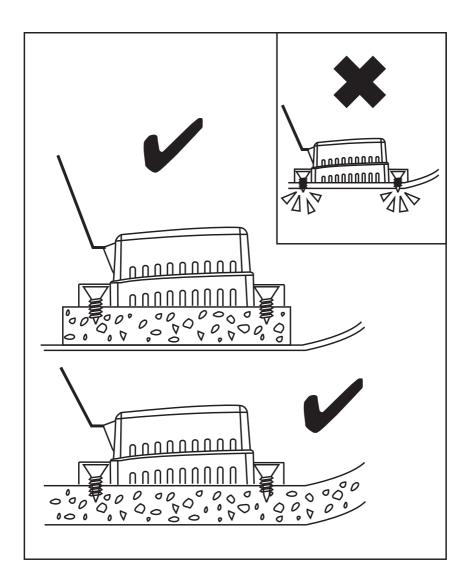


TESTING THE FLOAT SWITCH

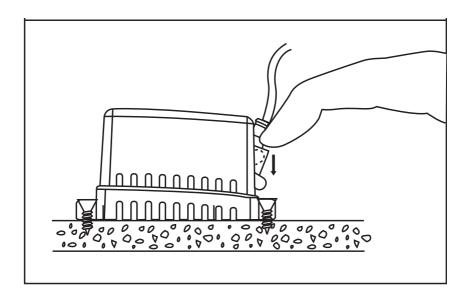






Always install proper fuse size to prevent damage to product should a short occur. Failure to install proper fuse could increase risk of pump malfunction potentially resulting in personal injury and/or fire hazard.

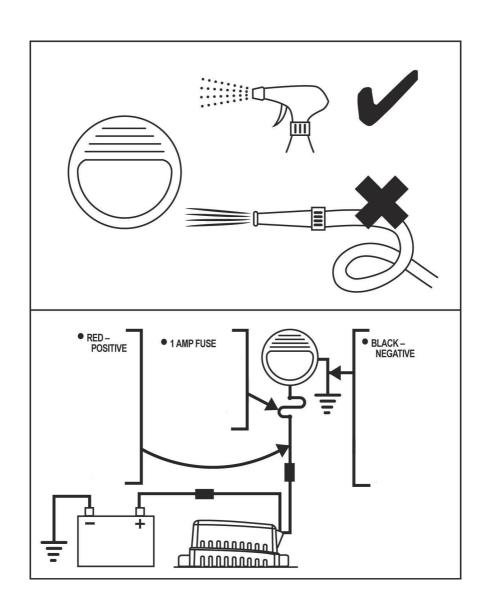

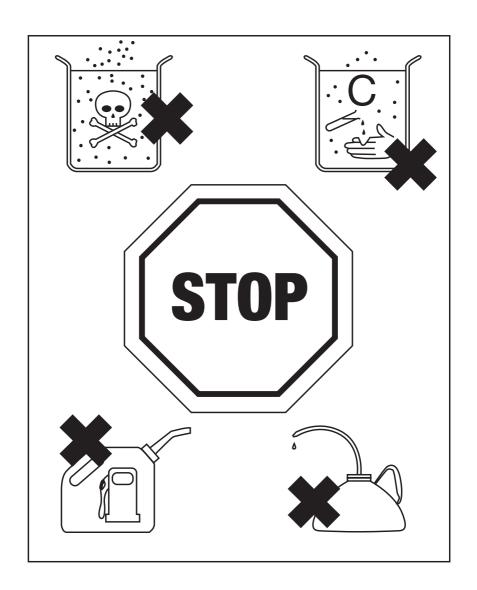

All mounting holes must be sealed with a marine grade sealant to prevent water intrusion.





Install to ABYC standards H-22 and E11



When this product carries a CE mark, it conforms to one or more of the following standards: EN 61000-6-1:2001 EN 61000-6-3:2007 Following the Provisions of the Electromagnetic Compatibility

Directive 2004/108/EC

ISO 8846 / Electrical Devices Protection Against Ignition of Surrounding Flammable Gases

ISO 10133:2000 / Electrical Systems - Extra Low Voltage D.C. Installations Following the Provisions of the Recreation Craft Directive 94/25/EEC



32ALA

31ALA

Keep all wire connections above the highest water level. Wires must be joined with butt connectors and a marine grade sealant to prevent wire corrosion.

Α	В	С	
Model	Volts	Max Amps	
A	В	С	
33ALA	12V	20A	

10A

6.5A

24V

32V

