

# On/Off Switch for Personal Watercraft Pump

1. Install the switch in a 1/2" diameter hole in or near the instrument panel of the PWC.
2. Strip the wire and back 1/4" prior to soldering or crimping the connectors provided.
3. The brown wire from the pump should be connected to one of the spade terminals on the back of the toggle switch. From the other spade terminal, connect a 16 gauge wire with an in-line fuse holder with proper fuse size (see pump for fuse recommendations) to the positive battery terminal. See schematic for details.
4. The negative wire should be connected directly to the negative terminal on the battery or suitable ground such as the engine block.
5. The failure to fuse the pump and switch assembly will void the warranty on Rule® Pumps

## WIRING SCHEMATIC

