



MOUNTING INSTRUCTIONS FOR STRIKER ROD HOLDER

- The "STRIKER" Rod Holder is designed to enter the Mounting Bracket only when pointing inboard, and is locked in every other direction. To ensure the Mounting Bracket is correctly positioned, the "Scotty" trademark on the bracket should be read right way up, when looking from inboard.
- When mounting the bracket, a wood or metal backing plate on the underside of the gunnel should be used to help distribute the load.
- When side mounting the "STRIKER", the bracket should be mounted as flush to the gunnel top as possible, to allow full swivel rotation.
- Note: The front lock ring is intended to hold the rod securely when the Rod Holder is in the upright "TRAVELLING" position. IT IS NOT NEEDED TO HOLD THE ROD DOWN WHEN FISHING.