


## #423040 Bilge Pump Panel, Breaker Installation Instructions

### Switch Position:

**OFF** No circuits are activated

**MANUAL** When switch is in manual position, red LED light (at top) will illuminate, to indicate that bilge pump is running. It will continue to run until the switch is changed to the "OFF" position. If green LED light is illuminated, auto float switch has been activated, indicating a high bilge water level.

**AUTO** When switch is in auto position, green LED light (at bottom) is illuminated, to indicate that the circuit is activated. If bilge pump float switch is turned on by rising bilge water level, red LED light will illuminate to indicate that bilge pump circuit is activated. When bilge water level lowers to a level where the auto float switch is deactivated, red LED light will cease to illuminate.

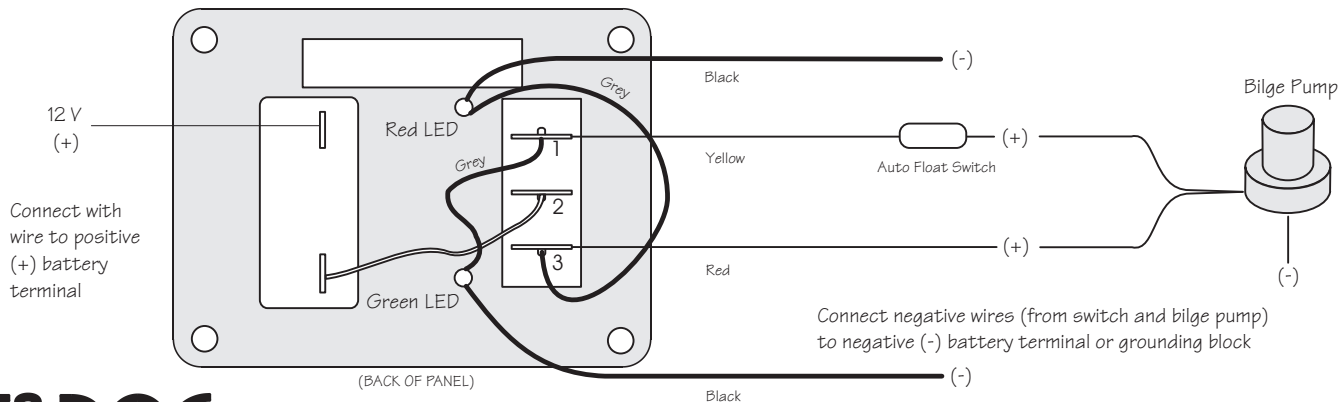

**SEADOG**  
**LINE**®

#D423040  
Made In USA

Learn more about electrical distribution on our website.