

INSTALLATION INSTRUCTIONS

Please follow the easy installation instructions carefully to assure maximum efficiency in your bilge pump operation.

19261

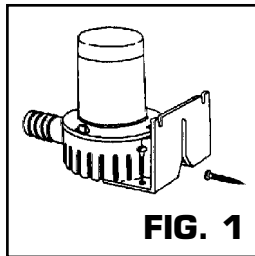
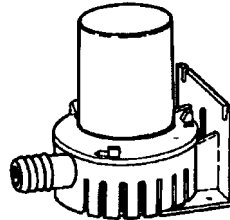


FIG. 1

1. Select the lowest point in the bilge. Fasten the pump with screws where convenient. You may use a single screw on a stringer and simply slide the screw into the pump bracket slot - see Fig. 1.

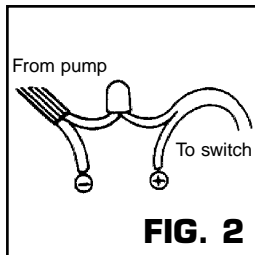


FIG. 2

2. Connect the brown wire to the positive (+) lead and switch, and connect the black wire to the negative (-) lead. We suggest a 3A fuse - see Fig. 2.

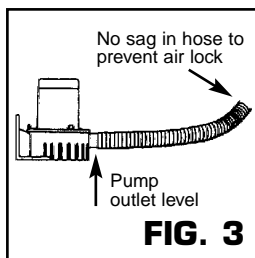


FIG. 3

3. Make sure the pump outlet is level or pointed slightly upward. The discharge hose must have no loops or sags which would cause an airlock - see Fig. 3.

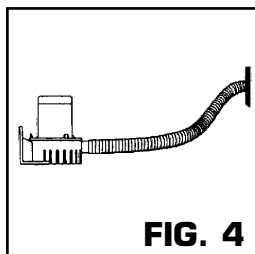


FIG. 4

4. Fasten the hose to the pump outlet and to the thru-hull connector, cutting off any excess hose that might sag - see Fig. 4.