

## **Instructions: 20971/52135**

- 1. Remove fuel filter from fuel line.**
2. Unscrew and remove the filter end marked "IN".
3. Remove glass sleeve, magnet & spring.
4. Remove spindle by turning counter clockwise.
5. Remove the used element and discard.
6. Replace "O" rings on end caps if required (Replace only if originals are leaking or appear cracked or torn).
7. Place a new element on the spindle and screw back into "OUT" end cap. Screw firmly to properly seat element at both ends.
8. Replace glass sleeve. Replace spring and then magnet on spindle.
9. Screw "IN" end cap onto spindle just slightly tighter than finger tight.

### **Do Not Over Tighten**

10. Replace filter in fuel line.
11. Start engine and check for leaks.

**CAUTION:** Gasoline and its vapors are extremely explosive. Observe installation safety precautions. Do not smoke. Install in well ventilated area away from flame and sparks.