


Congratulations on purchasing your new *livewell* **Oxygenator**™. You have just purchased the most advanced system available for oxygenating water in your livewell for healthier and livelier fish.

Installation Instructions:

Drill a two-inch hole using a hole saw at the lower half of the livewell. Center of hole should be at least 2.5 inches from the bottom and side wall. Slide Oxygenator through the hole with rubber O-Ring on the inside of the livewell. Tighten (screw on) rear nut ring as tight as possible by hand. Then using a strap wrench, tighten 1/4 turn to secure the "O-ring" seal. DO NOT USE A **SEALANT**. Connect red wire directly to the positive (+) battery terminal and black wire directly to the negative (-) battery terminal. The circuitry is internally fused and does not require an external fuse. The Oxygenator will only draw 1/2 amp per hour when you fill your livewell. The Oxygenator shuts off automatically when you drain your livewell. Although, if unit is connected directly to a battery, green light remains on at all times, but the emitter is not operating. The LED draws insignificant amps. Some manufacturers wire to a switch, some do not.

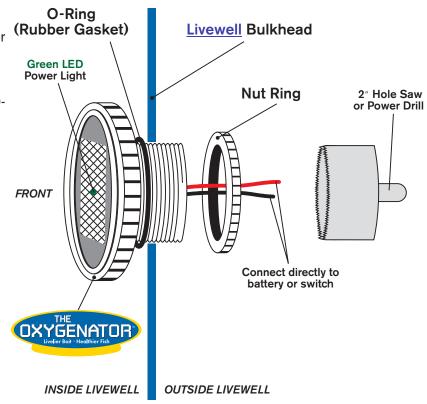

Key Points:

- The nano-bubbles generated by the Oxygenator are so small they are nearly invisible (the bubbles look like smoke); however the unit is generating oxygen. This is not a bubbler.
- The Oxygenator runs totally silent. You will not hear it operate.
- In SALT WATER, after you drain your livewell, hose off the emitters with fresh water. Use a nylon brush to help remove salt build-up.
- In **SALT WATER**, *U*₂ *Pro Formula Livewell Treatment* salt water additive must be used in conjunction with the Oxygenator. U₂ removes chlorine buildup. Treat immediately and every 6 hours. If you leave bait overnight, retreat water before you leave.

