

- INSTALLATION -

WARNING: this steering wheel is supplied ready to mount with the hub included: for a safe use, please do not unscrew or remove any part except from when specified in this manual.

- 1) Remove the central cap by gently pushing from the back of the wheel with a rod (or a screwdriver) (Pic. A-B).
- 2) Remove the metal bushing (for Morosini and Foscari types only) (Pic. C).
- 3) Insert the steering wheel on the shaft taking care to add the wodroof key (included in the steering system) in its groove (Pic. D).
- 4) For Morosini and Foscari steering wheels install the metal hub (Pic. E) on the shaft first and then mount the steering wheel on it (Pic. F).
- 5) Tighten the locking nut (included in the steering helm) to the torque recommended from the steering system's manufacturer (Pic. G).
- Insert the seal cap included in the Boccanegra and Morosini wheel types over the Locking nut (Pic. H-I).
- Insert the steering wheel hub cover, taking care that the four fixing brackets (with spring ring) are correctly positioned in the central hole (Pic. L - Doria; Pic. M - Morosini/Boccanegra; Pic. N - Foscari).
- 8) Check that the hub cover has been properly fixed.
- 9) To remove the hub cover, insert a flat screwdriver in the dedicated grooves on the cover itself and pull it out taking care not to damage or scratch any surface (Pic. O - Doria; Pic. P - Morosini/Boccanegra; Pic. Q - Foscari).

- MAINTENANCE -

- 1) Periodically clean the steering wheel to remove any salt deposit: rinse with fresh water and dry with a clean cloth.
- 2) Do not use any aggressive soap or alcohol based cleaner or solvent that may damage the steering wheel.
- 3) Use specific cleaning products on leather finished steering wheels; automotive leather seats cleaners and cloths are the most indicated.
- 4) Always protect the steering wheel with its own textile cover during non-use periods.

 










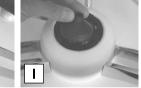



0

