

Xantrex™ Sine Wave Inverter 1000/1800


Interface Panel




CAUTION: Turn display panel switch to  and disconnect all sources of power before proceeding.

xantrex™
Smart choice for power

To install the Inverter Interface Panel:

- 1) Remove LCD panel from the inverter by removing its four screws and disconnecting the cord from the back.
- 2) Plug cord into the back of the Interface Panel and install into the cavity with the four screws. DO NOT PINCH THE CORD.
- 3) Using the insert card as a template, cut a 2.5" x 2.5" (6.5 mm x 6.5 mm) hole in wall where the LCD panel is to be mounted, and drill the four corner holes. Connect the 30' (10 m) cord from the Interface Panel's "REMOTE OUTPUT" jack, through the mounting hole, to the back of the LCD panel.
- 4) Secure LCD panel to wall. Holes can accept up to M3 or #4 screws.
- 5) Turn inverter on by switching both panels to the "I" position. Turning either switch to the  position will disable the inverter.

NOTE 1: BYPASS MODE FOR TRANSFER RELAY MODELS: While the inverter is in the  position, any incoming AC power will be switched to the output load.

NOTE 2: Interface Panel may be used to control the inverter without a connected LCD panel. LED is constantly on during normal operation, slow flash for Power-Save operation (1 flash every 2 seconds), and fast flash for a fault condition (2 flashes every second).

