


Smart choice for power

xantrex

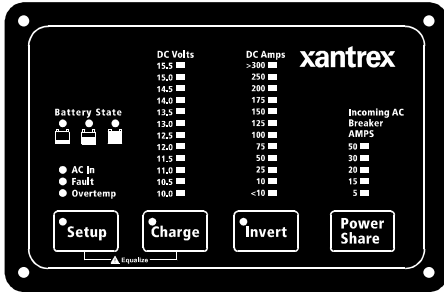


**Freedom
Basic Remote**

Owner's Manual

**Xantrex Freedom
Inverter/Charger
Basic Remote**

Remote Control Panel

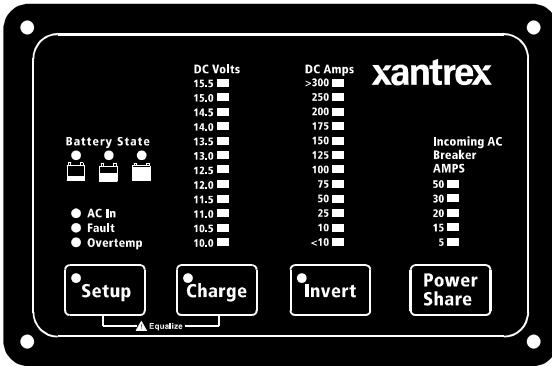

- Control your Xantrex Freedom Inverter/Charger
- DC system monitoring of DC Volts, Battery Charger output current, Inverter input current and Battery State
- Adjustable features of Power Share Battery Type and Idle Mode settings.
- Additional features on Freedom 458 and Marine Series include Battery Capacity setting.
- Easy to install

Manual Contents

Installation.....	3
Operation.....	3-4
Setup Procedure.....	5
Equalizing Batteries.....	6-7
Error Indications and Troubleshooting.....	7-8

Notice of Copyright

Xantrex Freedom Inverter/Charger Basic Remote © December 2003 Xantrex International. All rights reserved.

Disclaimer

UNLESS SPECIFICALLY AGREED TO IN WRITING, XANTREX TECHNOLOGY INC. ("XANTREX")

(a) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION.

(b) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSS OR DAMAGE, WHETHER DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK.

Introduction


 


 

Congratulations! You have purchased a powerful electronic instrument. In order to understand, use, and install it, **PLEASE** read this manual. In this manual, "Freedom" will refer to the Freedom Inverter/Charger while "458" or "458 Series" will refer to both the Freedom 458 Series Inverter/Charger and the Freedom Marine Series Inverter/Charger.

Installation

During installation of the Freedom Remote, the Freedom Inverter/Charger may have power applied to it. If using a 458 Series, the AUXILIARY SWITCH (jumper) on the inverter must be in the Off position. Refer to the owner's manual for position details. The Freedom Remote may be mounted up to 50 feet from the Freedom Inverter/Charger. Cut a hole in an appropriate location using the mounting template supplied. Route the data cable from the remote to the inverter. Routing the data cable away from AC and DC wires will minimize the potential for interference. Plug the data cable into the Freedom Remote and the Freedom Inverter/Charger. Secure the Remote Control Panel using the supplied screws.

Power Up Indications and Default Values

When power is first applied to the remote, there is a delay of up to four seconds, while the remote and the Freedom Inverter/Charger establish communications.

LED	Indication	Meaning
BATTERY STATE		Assumed battery state (will take approx. 15 minutes to reflect actual value)
 AC IN	On	If external AC Power is available
 FAULT	Off	If operation is normal
 OVERTEMP	Off	If operation is normal
 CHARGE	On	Freedom charging
 INVERT	Off	Invert function Off

Normal Operation Indications

The Freedom Remote shows AC IN (status), DC VOLTS, DC AMPS (charger or inverter current), and INCOMING AC BREAKER AMPS setting plus CHARGE, INVERT and BATTERY STATE. The display is updated once per second.

Normal Operation Mode: Controls

The remote comes On automatically when the Freedom Inverter/Charger is connected to a charged battery or external AC power. The following buttons are used:

SETUP

Blinking indicates SETUP mode. SETUP is explained on page 5.

CHARGE

When the CHARGE LED is On (solid green), the Battery Charger is On and charging. When the LED is Off, the charger is Off. Charging automatically begins when external AC power is detected. **OPERATING TIP:** Leaving the charger ON helps to assure a full battery.

INVERT

When the INVERT LED is On (solid green), the Freedom Inverter is inverting (making AC power from the DC battery source). When the INVERT LED is Off, the inverter is Off. When external AC power is present (AC IN LED On) and the INVERT LED is blinking green, the inverter is in standby, waiting for external AC power to be removed to begin inverting. When there is no external AC power, a blinking green LED indicates the inverter is in the Idle Mode. Idle mode is explained in detail in the SETUP section. **OPERATING TIP:** To avoid the risk of discharging your batteries if external power fails, leave the inverter OFF when leaving the boat or RV unattended.

POWER SHARE

Before you plug into an external AC source, note the breaker size. Press POWER SHARE until the appropriate "INCOMING AC BREAKER" LED is On. For example, to plug into a 30 ampere external AC power source, press POWER SHARE until the 30 amp "INCOMING AC BREAKER" LED is ON. **OPERATING TIP:** If the breaker trips, reduce this setting. Setting the POWER SHARE feature to a lower setting may limit charger output, causing the batteries to require more time to become fully charged.

POWER SHARE limits the amount of external AC current used by the charger. If the total AC load is larger than the AC power available, the external AC circuit breakers may trip. Select a lower POWER SHARE setting to reduce AC power consumption by the charger, thus reducing the total AC load.


Available POWER SHARE settings vary by inverter/charger model. Only the settings that the inverter/charger supports are allowed. The following table shows the effective power share for a Freedom Inverter/Charger with a serial number less than 100,000.

REMOTE POWER SHARE	POWER SHARE USED BY FREEDOM (SN < 100,000)				
	MODEL:	F10	F20	F25	F25
	SN:	<100,000	<70699	<70801	>70802
50		NA	NA	OFF	OFF
30		30	30	NA	NA
20		20	20	50	30
15		15	15	30	20
5		10	10	20	5

Setup Mode

Enter the SETUP mode by pressing and holding **SETUP** for five seconds until the LED blinks. The Freedom Remote is connected to a 458 Series if at least one DC VOLTS LED is On. After five seconds of no activity, the Freedom Remote automatically exits from the SETUP mode. Use the Freedom Remote buttons **SET AHRS** **SET IDLE** or **SET TYPE** to select SETUP features. Refer to the following template.

OPERATING TIP: Battery type and Battery Capacity are the most critical setup settings.

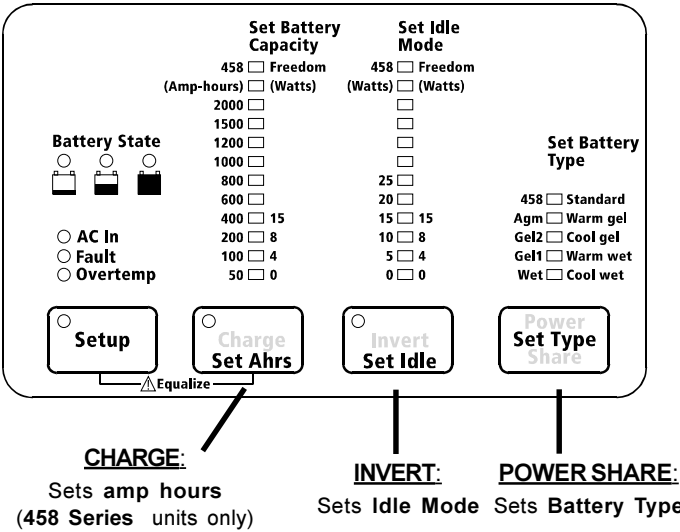

SET AHRS

Battery Capacity (Amp-hours)

Applies only to 458 Series

Using CHARGE, set the amp-hour rating of the battery bank. This information is used to determine the charge parameters for the battery. Default setting varies. 1000 W: 200 amp hours

(458 Series Only) 1500–2000 W: 400 amp hours
2500–3000 W: 600 amp hours

SET IDLE

Idle Load (Watts)

Changing this setting is not normally recommended.

Using INVERT, select Idle setting. If present inverter loads are less than the selected value, the inverter will remain in Idle Mode. Idle mode prevents unnecessary power drain on the battery when no AC loads are in use. When an AC load is turned On and the load draw exceeds the idle value, the unit begins full power inverting. When the appliance is turned Off, the inverter returns automatically to Idle mode. A setting of “0” disables Idle Mode.

Default: **Freedom:** 4 watts, **458 Series:** 5 watts.

SET TYPE

Battery Type

*This setting is **important**. Check your settings.*

Using POWER SHARE, set the Battery Type. The charger uses this information to set charging values for the 3-stage automatic charger. Be sure to set the correct type.

Default: **Freedom**: Cool (<80 °F) Wet cell, **458 Series**: Wet cell

Setting the Battery Type correctly is important.

458 Series selections: Wet, Gel 1, Gel 2 or AGM.

Freedom selections:	Cool Wet Cell:	< 80 °F.
	Warm Wet Cell:	> 80 °F.
	Cool Gel Cell:	< 80 °F.
	Warm Gel Cell:	> 80 °F.

Low Power Mode

When no external AC power is available, the remote panel LEDs can be turned Off to conserve battery power. Turning off the INVERT function (with external AC absent) activates the low power mode.

In this mode, if one of the front panel keys is pressed, the display will become active. Press **SETUP**, **CHARGE**, or **POWER SHARE** and the unit will display data for a short period of time, then return to the Low Power Mode. If **INVERT** is pressed, the selected function is activated and Low Power Mode is cancelled.

Equalizing Charge Mode

The Freedom Remote has a special charging mode that improves the condition of batteries. Equalizing helps maintain battery capacity and extends life by deliberately overcharging batteries for a short period of time. Do not equalize gel cell batteries.

OPERATING TIP: How often should batteries be equalized? It is recommended that after 30 deep cycles or once a year the batteries should be equalized. Check with the battery manufacturer for specific battery requirements.

Equalize Procedure

EQUALIZE mode must be started manually. To begin equalizing, enter **SETUP** mode, then hold both **SETUP** and **CHARGE** until the BATTERY STATE LEDs start blinking.

Equalizing should only be engaged after the batteries have been fully charged by the normal battery charging cycle. The Equalizing charge cycle lasts approximately eight hours. The Equalize charge cycle can be terminated at any time by interrupting the external AC power to the charger or by pressing **CHARGE**. The unit will return to normal display and operation after the completion of the Equalize cycle.

CAUTION: Equalizing may cause the DC system voltage to exceed 16 volts. Be sure to disconnect any equipment not rated for this voltage. Equalizing causes the battery to release hydrogen from your battery and may reach explosive concentrations in a closed environment. Make sure the battery area is well ventilated. Do not smoke or operate spark-causing devices in the vicinity of batteries being equalized.

Battery State LEDs

The BATTERY STATE LEDs indicate the approximate state of the battery bank. It is based on the battery voltage sampled over a period of time under the present load conditions. The battery state does not represent the actual amp-hour capacity remaining in the battery.



Lowest State: Voltage is low. Charging is recommended. In charge mode, indicates Charge.



Middle State: Battery is in normal range. In charge mode, indicates Acceptance.

 


Highest State: Battery voltage is at its highest and the battery is charged. In charge mode, indicates Float.

Note: Depending on battery size and condition, loads connected to the battery may affect the battery voltage and the BATTERY STATE display. In charge mode BATTERY STATE LEDs also indicate charger states.

Error Indications and Troubleshooting

The FAULT LED indicates a possible error has been detected and the Freedom Inverter/Charger has shut down to protect itself and the electrical system. The source of the error must be corrected before restarting the Freedom's inverter or charger functions. However, an OVERTEMP error will reset automatically, and operation will resume when the unit has cooled sufficiently. Refer to the table on page 8 for troubleshooting.

LED Indication	Fault LED	Error Detected	Possible Solution
OVERTEMP On	OFF	Over-temperature shutdown.	Increase air circulation and allow to cool.
BATTERY STATE Empty blinking 	ON	Low Battery Shutdown. (too low to continue inverting)	Charge batteries.
BATTERY STATE Empty On	ON	Battery Overload. (excessive ripple voltage during charge)	Select lowest Power Share setting. Turn off DC Loads. Restart Charger.
15.5 VDC blinking (31.0 VDC in 24 V system)	ON	High battery shutdown.	Check other charging sources connected to the battery.
AC IN blinking	ON	AC Backfeed (external AC power detected at inverter output).	Disconnect Incoming AC power and correct wiring.
INVERT blinking	ON	Inverter overload (too much AC load on inverter).	Reduce AC load on inverter. Reset by pressing INVERT Off and On.
CHARGE blinking	ON	Charger overload (Battery voltage too low to charge).	Check batteries. Turn Off all DC loads. Restart charger.

NOTE: For error conditions not shown above, disconnect Freedom Remote Control Panel for 30 seconds, verify that phone cable is plugged in at remote and inverter/charger and verify that batteries are above 10 VDC. If condition persists, disconnect incoming AC power from inverter/charger and remove positive battery lead for 30 seconds.

Specifications

Model: 84-2056-01: 12 V Control Panel w/25' data cable
Size: 5 3/4" (L) X 3 3/4" (W) X 1" (D)
Cutout Size: 4.7/8" (W) X 2 7/8" (H)
Environmental: Splash resistant
Operating temp: 0–70 °C
Weight: 3 Oz.
Power: Power for the Remote Control Panel is supplied by the Freedom Inverter/Charger.

Export Model

The export model has power share levels of 2.5, 7.5, 10, 15, and 25 amps. The following table shows the effective power share if a Freedom Inverter/Charger with a serial number less than 100,000 is used.

REMOTE POWER SHARE	POWER SHARE USED BY FREEDOM	
	MODEL:	F10E (EXPORT)
	SN:	≤70746
20		NA
16		30
10		20
6		15
4		5