


Freedom SW Inverter/Charger Parallel Stacking Configuration


120 VAC only

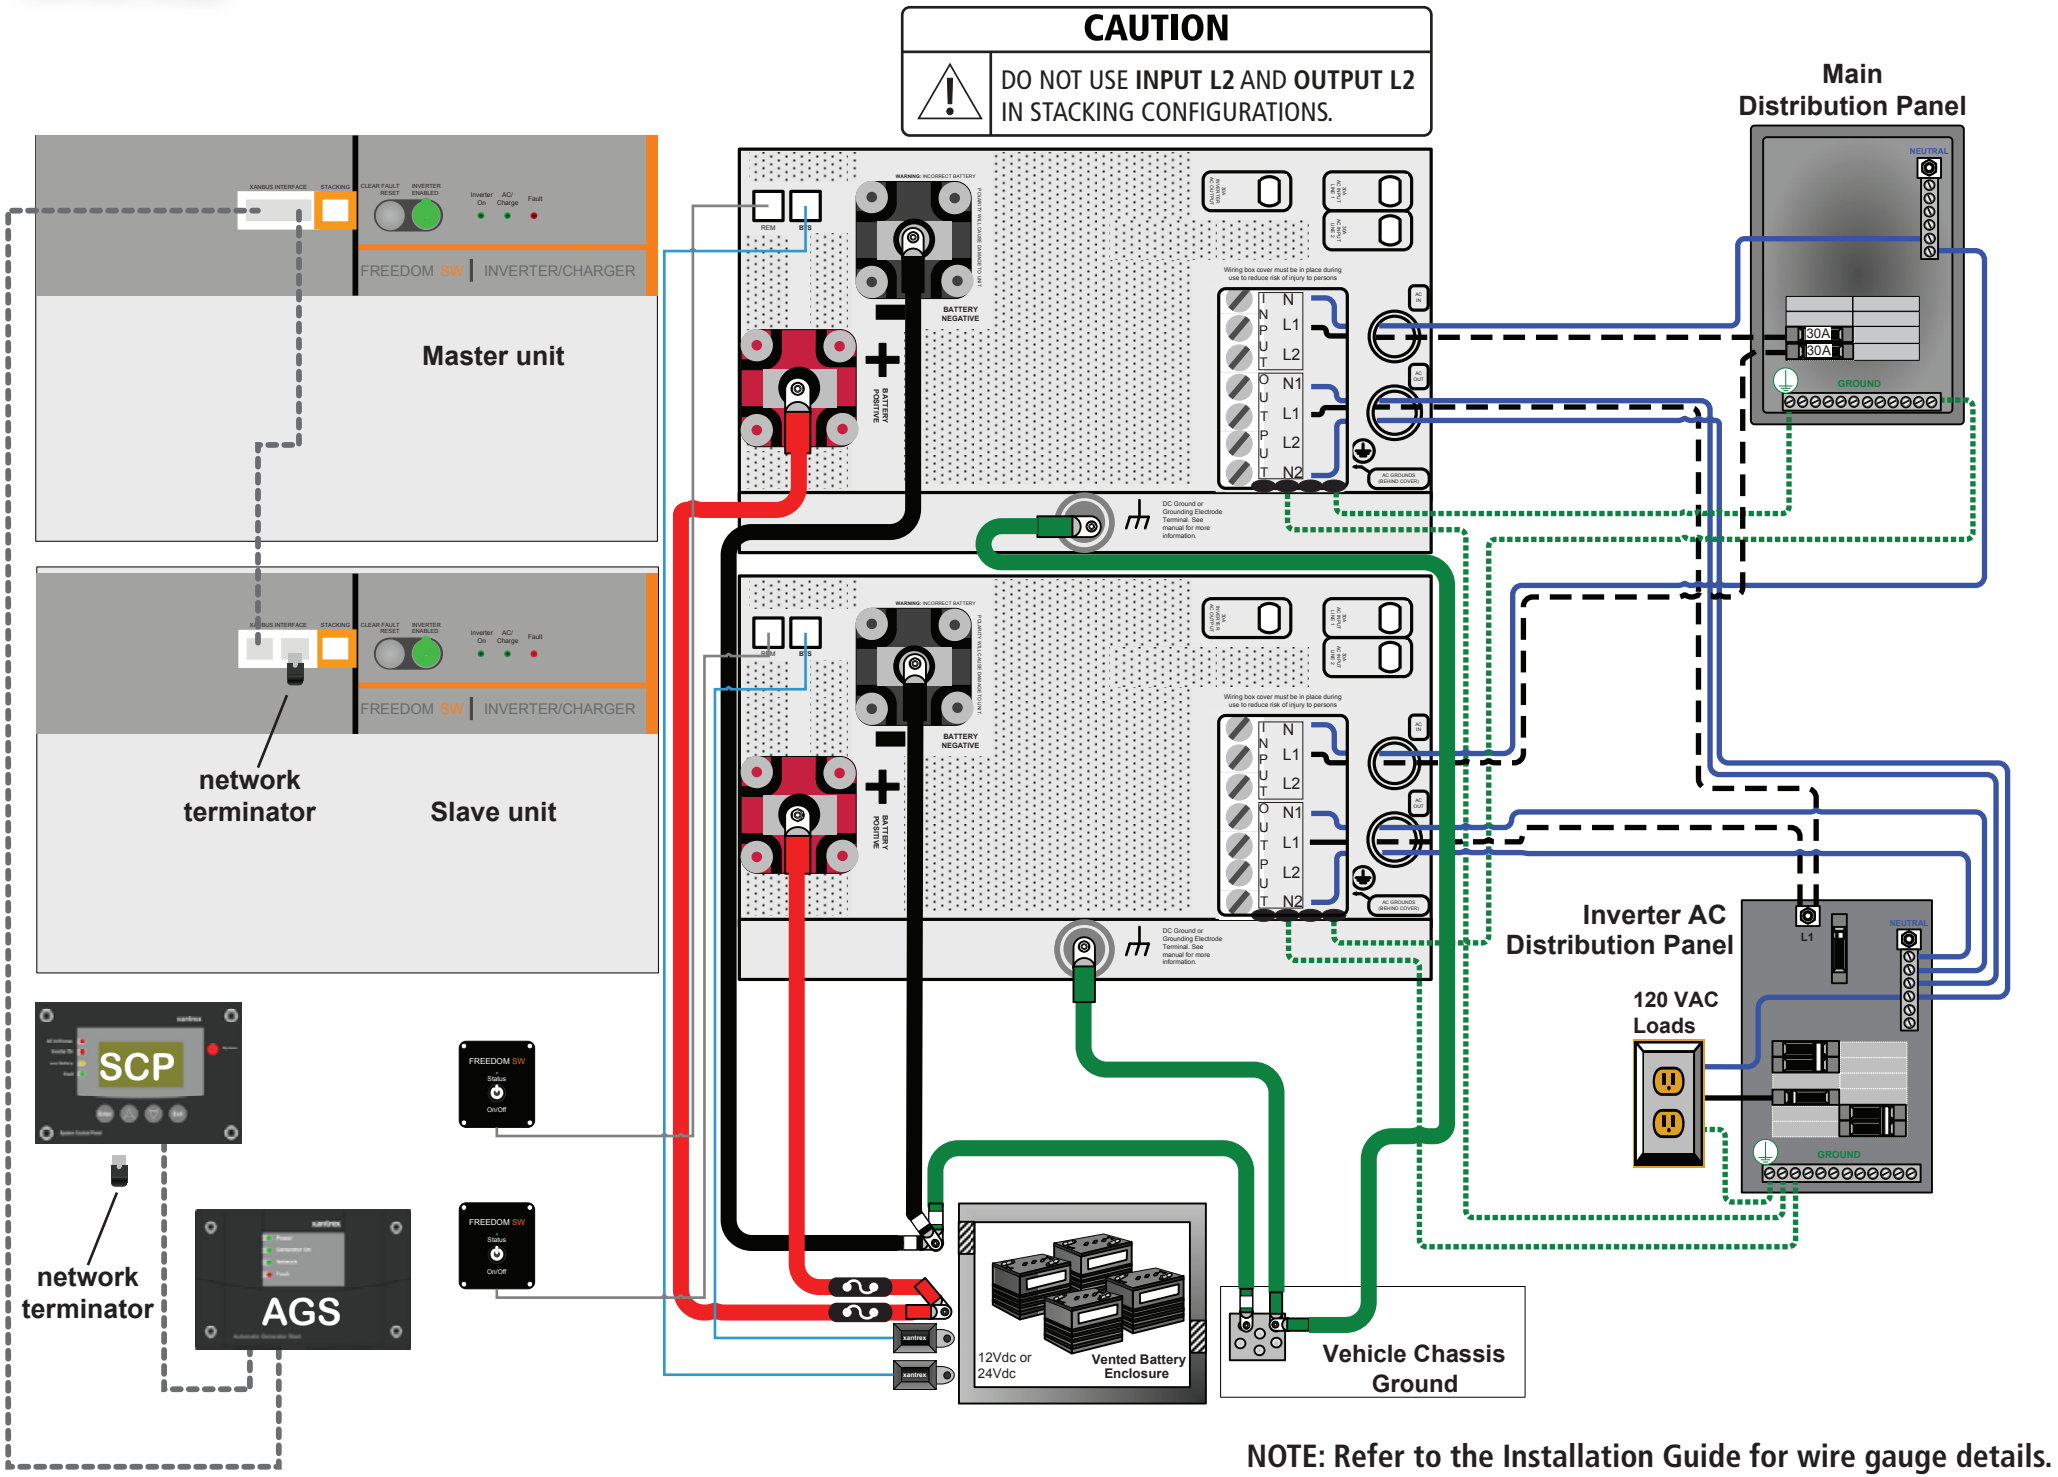

NOTE: Refer to the Installation Guide for wire gauge details.

Freedom SW Inverter/Charger Series Stacking Configuration

120 and 240 VAC

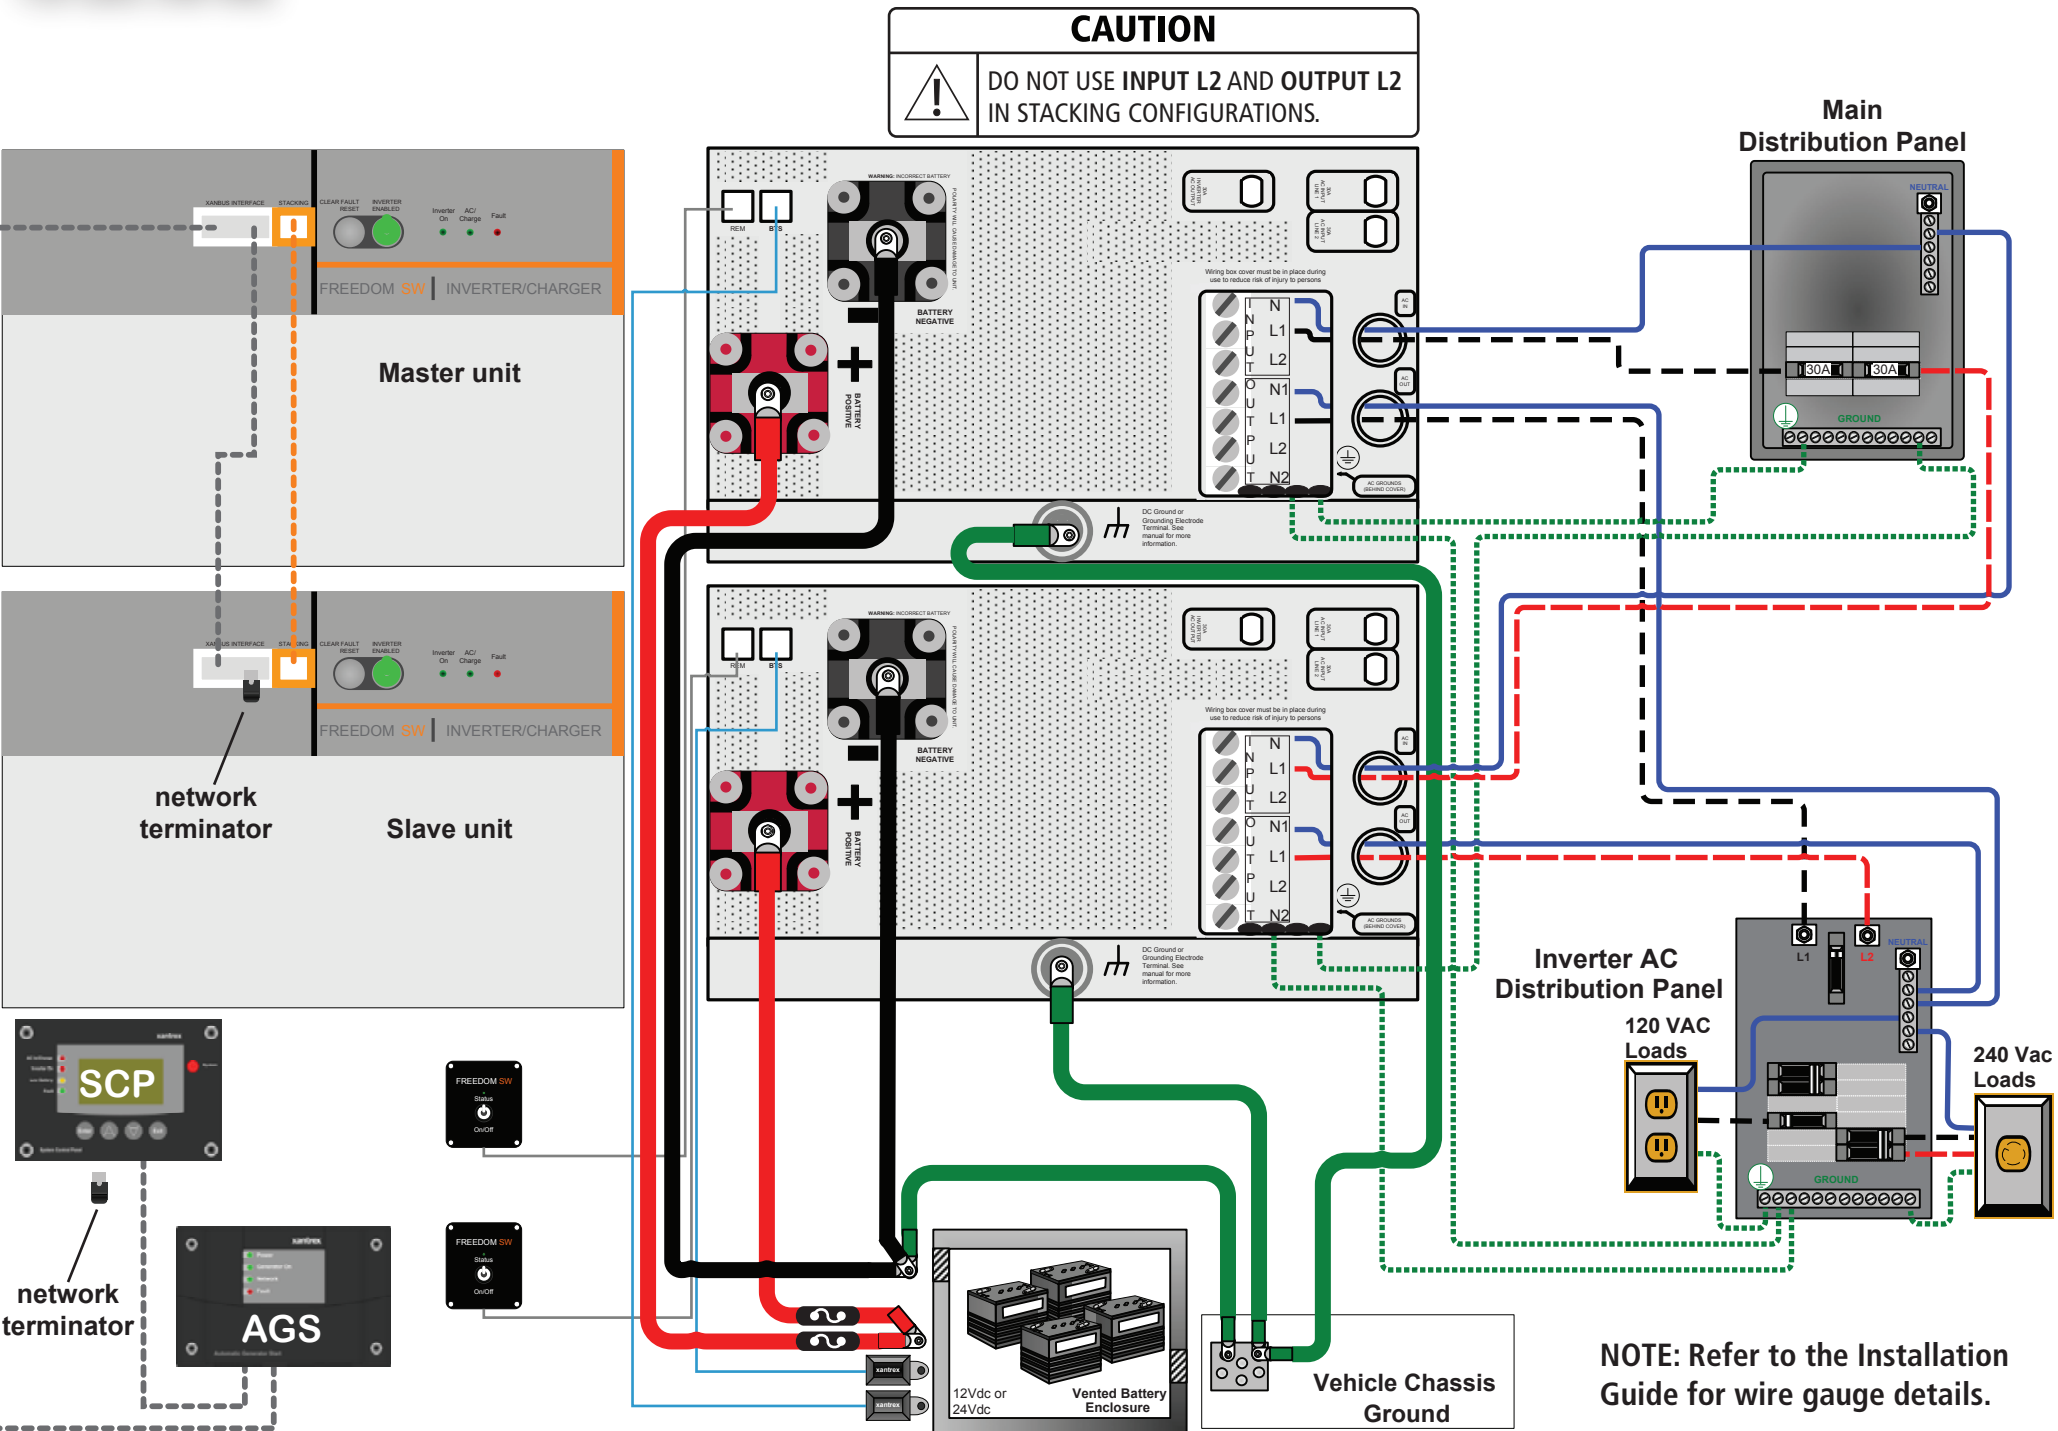

NOTE: Refer to the Installation Guide for wire gauge details.