

**FURUNO**

**OPERATOR'S MANUAL**

*NETWORK SOUNDER*

Model

**DFF3**

---

# IMPORTANT NOTICES

---

## General

- This manual has been authored with simplified grammar, to meet the needs of international users.
- The operator of this equipment must read and follow the descriptions in this manual. Wrong operation or maintenance can cancel the warranty or cause injury.
- Do not copy any part of this manual without written permission from FURUNO.
- If this manual is lost or worn, contact your dealer about replacement.
- The contents of this manual and equipment specifications can change without notice.
- The example screens (or illustrations) shown in this manual can be different from the screens you see on your display. The screens you see depend on your system configuration and equipment settings.
- Save this manual for future reference.
- Any modification of the equipment (including software) by persons not authorized by FURUNO will cancel the warranty.
- All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

## How to discard this product


Discard this product according to local regulations for the disposal of industrial waste. For disposal in the USA, see the homepage of the Electronics Industries Alliance for the correct method of disposal.

## How to discard a used battery

Some FURUNO products have a battery(ies). To see if your product has a battery, see the chapter on Maintenance. Follow the instructions below if a battery is used. Tape the + and - terminals of battery before disposal to prevent fire, heat generation caused by short circuit.


### In the European Union

The crossed-out trash can symbol indicates that all types of batteries must not be discarded in standard trash, or at a trash site. Take the used batteries to a battery collection site according to your national legislation and the Batteries Directive 2006/66/EU.

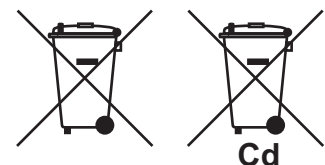

### In the USA

The Mobius loop symbol (three chasing arrows) indicates that Ni-Cd and lead-acid rechargeable batteries must be recycled. Take the used batteries to a battery collection site according to local laws.

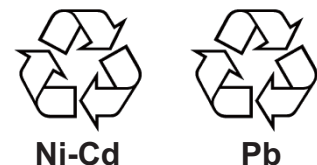



### In the other countries




There are no international standards for the battery recycle symbol. The number of symbols can increase when the other countries make their own recycle symbols in the future.









# SAFETY INSTRUCTIONS






The user and installer must read the appropriate safety instructions before attempting to install or operate the equipment.

 <b>WARNING</b>	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 <b>CAUTION</b>	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.





 Warning, Caution	 Prohibitive Action	 Mandatory Action
--	--	--

## Safety instructions for the operator

 <b>WARNING</b>	
	<b>Do not open the equipment.</b> Only qualified personnel should work inside the equipment.
	<b>Do not disassemble or modify the equipment.</b> Fire, electrical shock or serious injury can result.
	<b>Turn off the power immediately if the equipment is emitting smoke or fire.</b> Fire or electrical shock can result if the power is left on.
	<b>Turn off the power immediately if water leaks into the equipment or an object is dropped inside the equipment.</b> Continued use can cause fire or electrical shock.
	<b>Turn off the power immediately if you feel the equipment is acting abnormally.</b> If the equipment is hot to the touch or is emitting strange noises, turn off the power immediately and contact your dealer for advice.






 <b>WARNING</b>	
	<b>Do not operate the equipment with wet hands.</b> Electrical shock can result.
	<b>Do not place liquid-filled containers on the top of the equipment.</b> Electrical shock can result.
	<b>Do not install the equipment where it may be subjected to rain or water splash.</b> Fire or electrical shock can result if water gets inside the equipment.
	<b>Use the proper fuse.</b> Use of a wrong fuse can damage the equipment and may cause fire.





A warning label is attached to the equipment. Do not remove this label. If the label is missing or illegible, contact a FURUNO agent or dealer about replacement.

 <b>WARNING</b> 
To avoid electrical shock, do not remove cover. No user-serviceable parts
 

Name: Warning Label (1)  
Type: 86-003-1011-3  
Code No.: 100-236-233-10

**Safety instructions for the installer**

 <b>WARNING</b>	
	<p><b>Do not open the equipment.</b></p> <p>Only qualified personnel should work inside the equipment.</p>
	<p><b>Turn off the power before beginning the installation.</b></p> <p>Fire or electrical shock can result if the power is left on.</p>
	<p><b>Be sure no water leaks at the transducer and temperature sensor.</b></p> <p>Water leakage can sink the vessel. Also, confirm that neither the transducer or sensor will loosen by vibration. The installer is solely responsible for the installation.</p>
	<p><b>Confirm that the power supply voltage is within the rating of this equipment.</b></p> <p>Incorrect voltage will damage the equipment and may cause fire.</p>

 <b>CAUTION</b>					
	<p><b>The transducer cable must be handled carefully, following the guidelines below.</b></p> <ul style="list-style-type: none"> <li>• <b>Keep fuels and oils away from the cable.</b></li> <li>• <b>Locate the cable away from chemicals.</b></li> <li>• <b>Locate the cable away from locations where it might be damaged.</b></li> </ul>				
	<p><b>Do not apply the power with the transducer exposed to air.</b></p> <p>Damage to the transducer may result.</p>				
	<p><b>Observe the following compass safe distances to prevent interference to a magnetic compass:</b></p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tbody> <tr> <td style="padding: 5px;">Standard compass</td> <td style="padding: 5px;">Steering compass</td> </tr> <tr> <td style="text-align: center; padding: 5px;">0.95 m</td> <td style="text-align: center; padding: 5px;">0.60 m</td> </tr> </tbody> </table>	Standard compass	Steering compass	0.95 m	0.60 m
Standard compass	Steering compass				
0.95 m	0.60 m				

# TABLE OF CONTENTS

---

<b>FOREWORD .....</b>	<b>v</b>
<b>SYSTEM CONFIGURATION .....</b>	<b>vi</b>
<b>1. MOUNTING .....</b>	<b>1</b>
1.1 Equipment Lists.....	1
1.2 Network Sounder .....	8
1.3 Transducer .....	9
1.4 Optional Speed/Temperature Sensors ST-02MSB, ST-02PSB .....	9
1.4.1 Mounting considerations.....	9
1.4.2 Mounting procedure.....	9
1.5 Optional Temperature Sensors .....	10
1.5.1 Transom mount temperature sensor T-02MTB .....	10
1.5.2 Thru-hull temperature sensor T-02MSB, T-03MSB .....	11
<b>2. WIRING .....</b>	<b>12</b>
2.1 Wiring Outline.....	12
2.2 Transducer Cable.....	13
<b>3. INITIAL SETTINGS .....</b>	<b>15</b>
3.1 Tap Setting.....	15
3.2 DIP Switch Setting .....	16
3.3 Operation Check .....	18
<b>4. MAINTENANCE .....</b>	<b>19</b>
4.1 Maintenance.....	19
4.2 Replacing the Fuse .....	20
4.3 Restoring Default Settings .....	20

# FOREWORD

---

## A Word to the Owner of the DFF3

Congratulations on your choice of the FURUNO DFF3 Network Sounder. We are confident you will see why the FURUNO name has become synonymous with quality and reliability.

Since 1948, FURUNO Electric Company has enjoyed an enviable reputation for quality marine electronics equipment. This dedication to excellence is furthered by our extensive global network of agents and dealers.

This equipment is designed and constructed to meet the rigorous demands of the marine environment. However, no machine can perform its intended function unless operated and maintained properly. Please carefully read and follow the recommended procedures for operation and maintenance.

Thank you for considering and purchasing FURUNO.

## Features


The DFF3 network sounder is a dual frequency echo sounder designed for use with the FURUNO NavNet, NavNet vx2, NavNet 3D and NavNet TZtouch series. The DFF3 feeds data about underwater conditions via a LAN.

- FURUNO Free Synthesizer (FFS) transceiver design allows use of user-selectable operating frequencies (28 - 200 kHz).
- Automatic operation selects correct range and gain to show fish echoes and bottom in both shallow and deep waters.
- Improved discrimination of near-surface fish by eliminating the transmission line.
- Heaving compensation\* stabilizes the picture against ship's pitching and rolling. \* Requires NavNet 3D/TZtouch display device plus Satellite Compass SC-30.
- Approximate fish length calculation available with connection of transducer 50/200-1T. (NavNet 3D and TZtouch only.)
- 1/2/3 kW output

**Note:** The terms "NavNet", NavNet vx2", "NavNet 3D" and "NavNet TZtouch" refer to the models listed below.

NavNet/NavNet vx2	NavNet 3D	NavNet TZtouch
Model 17x2 Series, Model 17x2C Series, Model 17x4 Series, Model 17x4C Series, GD-1720, GD-1720C, Model 18x3C(-BB) Series, Model 18x4C(-BB) Series, Model 19x3C(-BB) Series, Model 19x4C(-BB) Series, GD-1900C(-BB), GD-1920C(-BB)	MFD8/12/BB	TZ9, TZ14

# SYSTEM CONFIGURATION

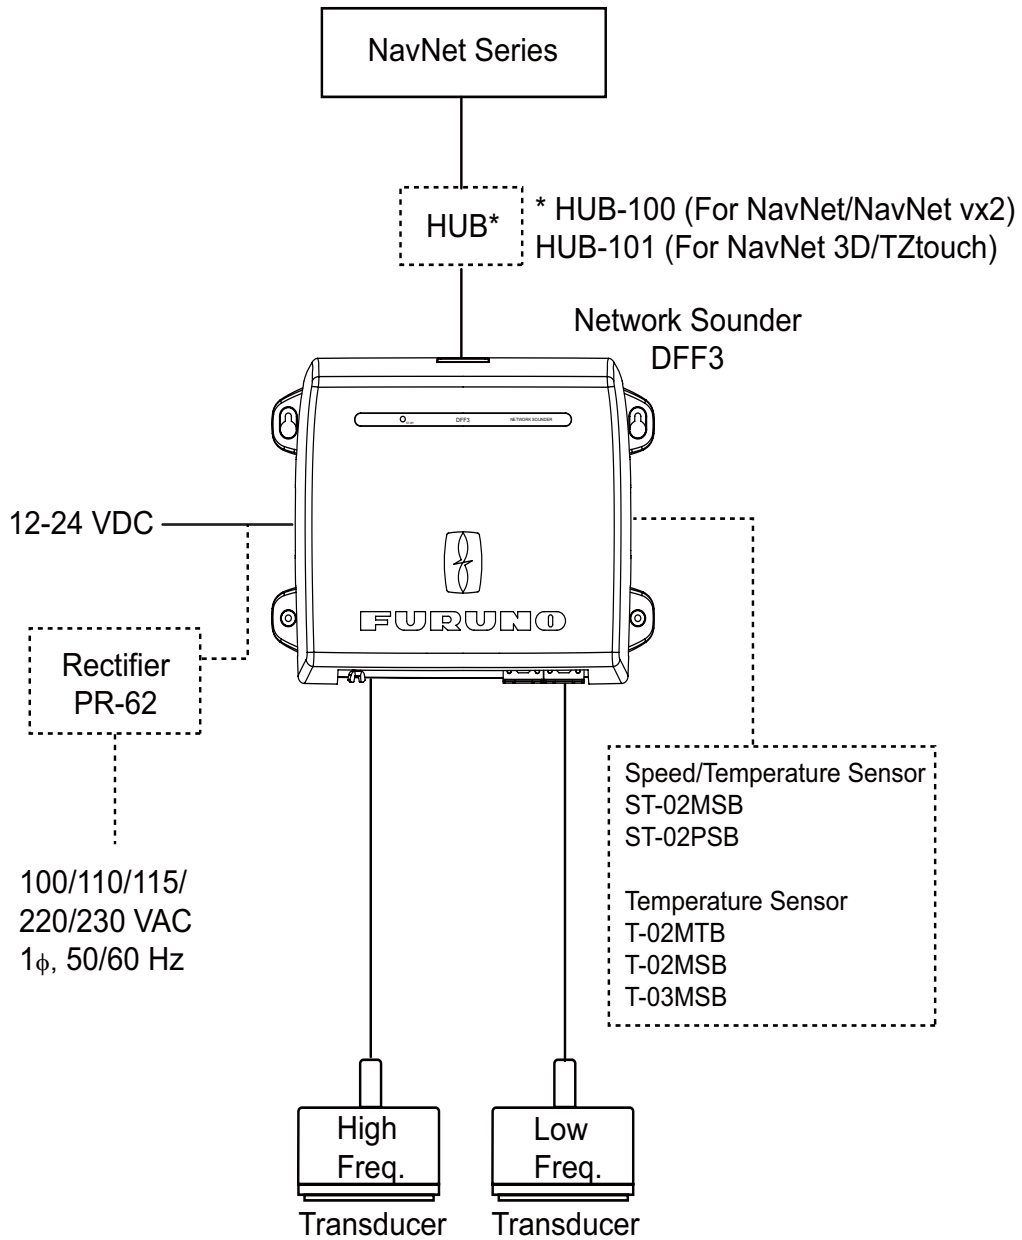

# 1. MOUNTING

## 1.1 Equipment Lists

### Standard supply

Name	Type	Code No.	Qty	Remarks
Network Sounder	DFF3	—	1	
Spare Parts	SP02-05601	001-033-740	1 set	Fuse
Installation Materials	CP02-08500	000-011-917	1 set	- Power cable (3.5 m) - LAN cable (5 m) - Self-tapping screws

### Optional supply

Name	Type	Code No.	Remarks
Transducer	1/2/3kW available. See next page for choices.	—	
Thru-hull pipe		—	
Tank		—	
Cable Assembly	MJ-A6SPF0017-010C	001-159-704-10	1 m, for NavNet
	MJ-A6SPF0017-050C	001-159-705-10	5 m, for NavNet
	MJ-A6SPF0017-100C	001-159-706-10	10 m, for NavNet
	MJ-A6SPF0017-200C	001-159-707-11	20 m, for NavNet
	MJ-A6SPF0017-300C	001-159-708-11	30 m, for NavNet
	MOD-Z072-020+	000-167-175-10	2 m, for HUB-101
	MOD-Z072-100+	001-167-177-10	10 m, for HUB-101
Speed/Temperature Sensor	ST-02MSB	000-137-986	Thru-hull mount, steel hull
	ST-02PSB	000-137-987	Thru-hull mount, plastic hull
Temperature Sensor	T-02MTB	000-040-026	Transom mount
	T-02MSB	000-040-040	Thru-hull mount
	T-03MSB	000-040-027	Thru-hull mount
Rectifier	PR-62	000-013-484	100 VAC
		000-013-485	110 VAC
		000-013-486	220 VAC
		000-013-487	230 VAC



1. MOUNTING

**Transducer, thru-hull pipe and tank combinations**

Output (W)	Frequency (kHz)	Ship type	Transducer	Thru-hull pipe	Tank	
1k/1k	28/50	Steel	28F-8	TWB-6000(2)	T-656	
		FRP	50B-9B	-	-	
	28/88	Steel	28F-8	TWB-6000(2)	T-657	
		FRP	88B-8	-	-	
	50/88	Steel	50B-9B	TWB-6000(2)	T-658	
		FRP	88B-8	-	-	
	50/200	Steel	50/200-1T or	TFB-5000(1)	T-603	
			50/200-1ST	-	T-603F	
		FRP	50/200-12M	-	-	
			-	-	-	-
	1k/2k	28/200	Steel	28F-8	TWB-6000(2)	T-657
			FRP	200B-8/8B	-	-
50/200		Steel	50B-9B	TWB-6000(2)	T-658	
		FRP	200B-8/8B	-	-	
88/200		Steel	88B-8	TWB-6000(2)	T-659	
		FRP	200B-8/8B	-	-	

Output (W)	Frequency (kHz)	Ship type	Transducer	Thru-hull pipe	Tank
2k/2k	28/50	Steel	28F-18 50B-12	TFB-7000(2)	T-634
		FRP		TRB-1100(2)	T-634-F
	28/82	Steel	28F-18 82B-35R	TFB-7000(2)	T-636
		FRP		TRB-1100(2)	T-636-F
	28/88	Steel	28F-18 88B-10	TFB-7000(2)	T-636
		FRP		TRB-1100(2)	T-636-F
	28/200	Steel	28F-18 200B-8/8B	TFB-7000(2)	T-638
				TRB-1100(2)	T-638-F
		FRP	28BL-6HR 200B-8/8B	TFB-7000(2)	T-693
			TRB-1100(2)	T-693-F	
	38/200	Steel	38BL-9HR 200B-8/8B	TFB-7000(2)	T-693
		FRP		TRB-1100(2)	T-693-F
	50/82	Steel	50B-12 82B-35R	TFB-7000(2)	T-643
		FRP		TRB-1100(2)	T-643-F
	50/88	Steel	50B-12 88B-10	TFB-7000(2)	T-643
		FRP		TRB-1100(2)	T-643-F
	50/200	Steel	50B-12 200B-8/8B	TFB-7000(2)	T-645
				TRB-1100(2)	T-645-F
		FRP	50BL-12HR 200B-8/8B	TFB-7000(2)	T-693
			TRB-1100(2)	T-693-F	
		Steel	50BL-12 200B-8/8B	TFB-7000(2)	T-693
				TRB-1100(2)	T-693-F
	82/200	Steel	82B-35R 200B-8/8B	TFB-7000(2)	T-649
		FRP		TRB-1100(2)	T-649-F
	88/200	Steel	88B-10 200B-8/8B	TFB-7000(2)	T-649
		FRP		TRB-1100(2)	T-649-F
	28/107	Steel	28F-18 100B-10R	TFB-7000(2)	T-636
		FRP		TRB-1100(2)	T-636-F

1. MOUNTING

Output (W)	Frequency (kHz)	Ship type	Transducer	Thru-hull pipe	Tank
2k/3k	28/150	Steel	28F-18 150B-12H	TFB-7000(2)	T-637
		FRP		TRB-1100(2)	T-637-F
	50/107	Steel	50B-12 100B-10R	TFB-7000(2)	T-643
		FRP		TRB-1100(2)	T-643-F
	50/150	Steel	50B-12 150B-12H	TFB-7000(2)	T-644
		FRP		TRB-1100(2)	T-644-F
3k/2k	68/200	Steel	68F-30H 200B-8/8B	TFB-7000(2)	T-647
		FRP		TRB-1100(2)	T-647-F
	107/200	Steel	100B-10R 200B-8/8B	TFB-7000(2)	T-649
		FRP		TRB-1100(2)	T-649-F
3k/3k	28/38	Steel	28BL-12HR 38BL-15HR	TFB-7000(2)	T-681
		FRP		TRB-1100(2)	T-681-F
		Steel	28F/24H 38BL-15HR	TFB-7000(2)	T-681
		FRP		TRB-1100(2)	T-681-F
	28/50	Steel	28BL-12HR 50BL-24HR	TFB-7000(2)	T-681
		FRP		TRB-1100(2)	T-681-F
		Steel	28BL-12HR 50F-24H	TFB-7000(2)	T-681
		FRP		TRB-1100(2)	T-681-F
		Steel	28F-24H 50BL-24H	TFB-7000(2)	T-696
		FRP		TRB-1100(2)	T-696-F
		Steel	28F-24H 50BL-24HR	TFB-7000(2)	T-681
		FRP		TRB-1100(2)	T-681-F
	Steel	28F-24H 50F-24H	TFB-7000(2)	T-681	
	FRP		TRB-1100(2)	T-681-F	

Output (W)	Frequency (kHz)	Ship type	Transducer	Thru-hull pipe	Tank
3k/3k (con't)	28/88	Steel	28BL-12HR 88F-126H	TFB-7000(2)	T-682
		FRP		TRB-1100(2)	T-682-F
		Steel	28F-24H 88F-126H	TFB-7000(2)	T-682
		FRP		TRB-1100(2)	T-682-F
	28/150	Steel	28BL-12HR 150B-12H	TFB-7000(2)	T-683
				TRB-1100(2)	T-683-F
		FRP	28F-24H 150B-12H	TFB-7000(2)	T-683
				TRB-1100(2)	T-683-F
	28/200	Steel	28BL-12HR 200B-12H	TFB-7000(2)	T-683
				TRB-1100(2)	T-683-F
		FRP	28F-24H 200B-12H	TFB-7000(2)	T-683
				TRB-1100(2)	T-683-F
	38/50	Steel	38BL-15HR 50BL-24HR	TFB-7000(2)	T-681
				TRB-1100(2)	T-681-F
		FRP	38BL-15HR 50F-24H	TFB-7000(2)	T-681
				TRB-1100(2)	T-681-F
	38/88	Steel	38BL-15HR 88F-126H	TFB-7000(2)	T-682
		FRP		TRB-1100(2)	T-682-F
	38/150	Steel	38BL-15HR 150B-12H	TFB-7000(2)	T-683
		FRP		TRB-1100(2)	T-683-F
	38/200	Steel	38BL-15HR 200B-12H	TFB-7000(2)	T-683
		FRP		TRB-1100(2)	T-683-F
	50/88	Steel	50BL-24H 88F-126H	TFB-7000(2)	T-697
				TRB-1100(2)	T-697-F
		FRP	50BL-24HR 88F-126H	TFB-7000(2)	T-682
				TRB-1100(2)	T-682-F
		Steel	50F-24H 88F-126H	TFB-7000(2)	T-682
				TRB-1100(2)	T-682-F
	50/150	Steel	50BL-24HR 150B-12H	TFB-7000(2)	T-683
				TRB-1100(2)	T-683-F
		FRP	50F-24H 150B-12H	TFB-7000(2)	T-683
				TRB-1100(2)	T-683-F

1. MOUNTING

Output (W)	Frequency (kHz)	Ship type	Transducer	Thru-hull pipe	Tank	
3k/3k (con't)	50/200	Steel	50BL-24H 200B-12H	TFB-7000(2)	T-695	
		FRP		TRB-1100(2)	T-695-F	
		Steel	50BL-24HR 200B-12H	TFB-7000(2)	T-683	
		FRP		TRB-1100(2)	T-683-F	
		Steel	50F-24H 200B-12H	TFB-7000(2)	T-683	
		FRP		TRB-1100(2)	T-683-F	
	68/150	Steel	68F-30H 150B-12H	TFB-7000(2)	T-646	
		FRP		TRB-1100(2)	T-646-F	
	68/200	Steel	68F-30H 200B-12H	TFB-7000(2)	T-646	
		FRP		TRB-1100(2)	T-646-F	
	88/150	Steel	88F-126H 150B-12H	TFB-7000(2)	T-685	
		FRP		TRB-1100(2)	T-685-F	
	88/200	Steel	88F-126H 200B-12H	TFB-7000(2)	T-685	
		FRP		TRB-1100(2)	T-685-F	
	1k	28	Steel	28F-8	TFB-5000(1)	T-604
			FRP		TRB-1000(1)	T-604-F
		50	Steel	50B-6/6B	TFB-5000(1)	T-605
			FRP		TRB-1000(1)	T-605-F
Steel			50B-9B	TFB-5000(1)	T-603	
FRP				TRB-1000(1)	T-603-F	
68		Steel	68F-8H	TFB-5000(1)	T-621	
		FRP		TRB-1000(1)	T-621-F	
88		Steel	88B-8	TFB-5000(1)	T-606	
		FRP		TRB-1000(1)	T-606-F	
200		Steel	200B-5S	TFB-5000(1)	T-605	
		FRP		TRB-1000(1)	T-605-F	
2k		28	Steel	28F-18	TFB-5000(1)	T-612
			FRP		TRB-1000(1)	T-612-F
			Steel	28BL-6HR	TFB-5000(1)	T-702
			FRP		TRB-1000(1)	T-702-F
		38	Steel	38BL-9HR	TFB-5000(1)	T-702
			FRP		TRB-1000(1)	T-702-F

Output (W)	Frequency (kHz)	Ship type	Transducer	Thru-hull pipe	Tank
2k (con't)	50	Steel	50B-12	TFB-5000(1)	T-611
		FRP		TRB-1000(1)	T-611-F
		Steel	50BL-12	TFB-5000(1)	T-702
		FRP		TRB-1000(1)	T-702-F
		Steel	50BL-12HR	TFB-5000(1)	T-702
		FRP		TRB-1000(1)	T-702-F
	82	Steel	82B-35R	TFB-5000(1)	T-609
		FRP		TRB-1000(1)	T-609-F
	88	Steel	88B-10	TFB-5000(1)	T-609
		FRP		TRB-1000(1)	T-609-F
	200	Steel	200B-8/8B	TFB-5000(1)	T-608
		FRP		TRB-1000(1)	T-608-F

## 1. MOUNTING

Output (W)	Frequency (kHz)	Ship type	Transducer	Thru-hull pipe	Tank
3k	28	Steel	28F-24H	TFB-4000(1)	T-616
		FRP		TRB-1000(1)	T-616-F
		Steel	28BL-12HR	TFB-4000(1)	T-616
		FRP		TRB-1000(1)	T-616-F
	38	Steel	38BL-15HR	TRB-4000(1)	T-616-
		FRP		TRB-1000(1)	T-616-F
	50	Steel	50F-24H	TFB-4000(1)	T-616
		FRP		TRB-1000(1)	T-616-F
		Steel	50BL-24HR	TFB-4000(1)	T-616
		FRP		TRB-1000(1)	T-616-F
		Steel	50BL-24H	TFB-4000(1)	T-694
		FRP		TRB-1000(1)	T-694-F
	68	Steel	68F-30H	TFB-5000(1)	T-614
		FRP		TRB-1000(1)	T-614-F
	88	Steel	88F-126H	TFB-4000(1)	T-618
		FRP		TRB-1000(1)	T-618-F
	107	Steel	100B-10R	TFB-5000(1)	T-609
		FRP		TRB-1000(1)	T-609-F
	150	Steel	150B-12H	TFB-5000(1)	T-615
		FRP		TRB-1000(1)	T-615-F
200	Steel	200B-12H	TFB-5000(1)	T-615	
	FRP		TRB-1000(1)	T-615-F	

## 1.2 Network Sounder

The network sounder can be installed on a desktop, deck or on a bulkhead. When selecting a mounting location for the network sounder, keep the following in mind:

- The temperature and humidity at the mounting site should be moderate and stable.
- Locate the unit away from exhaust pipes and vents.
- The mounting location should be well ventilated.
- Mount the unit where shock and vibration are minimal.
- Keep the unit away from electromagnetic field-generating equipment such as motors and generators.
- Leave slack in cables for maintenance and servicing ease.

- A magnetic compass will be affected if the network sounder is placed too close to it. Observe the compass safe distances noted in the safety instructions to prevent disturbance to the magnetic compass.

Fasten the network sounder to the mounting location with four self-tapping screws (5x20), referring to the outline drawing at the back of this manual for mounting dimensions.

## 1.3 Transducer

The performance of the echo sounder largely depends upon the transducer position. Select a place least affected by air bubbles since turbulence blocks the sounding path. Further, select a place least influenced by engine noise. It is known that air bubbles are fewest at the place where the bow first falls and the next wave rises, at usual cruising speed.

**Note:** The face of the transducer must be facing the sea bottom in normal cruising trim of the boat.

## 1.4 Optional Speed/Temperature Sensors ST-02MSB, ST-02PSB


### 1.4.1 Mounting considerations

Select a suitable mounting location considering the following points:

- Select a mid-boat flat position. The sensor does not have to be installed perfectly perpendicular. However, the sensor must not be damaged in dry-docking operation.
- Select a place apart from equipment generating heat.
- Select a place in the forward direction viewing from the drain hole, to allow for circulation of cooling water.
- Select a place free from vibration.
- Do not install near the transducer of an echo sounder, to prevent interference to the echo sounder.

### 1.4.2 Mounting procedure

1. Dry dock the boat.
2. Make a hole of approx. 51 mm in diameter in the mounting location.
3. Unfasten locknut and remove the sensor section.
4. Apply high-grade sealant to the flange of the sensor.
5. Pass the sensor casing through the hole.
6. Face the notch on the sensor toward boat's bow and tighten the flange.
7. Set the sensor section to the sensor casing and tighten the locknut.
8. Launch the boat and check for water leakage around the sensor.

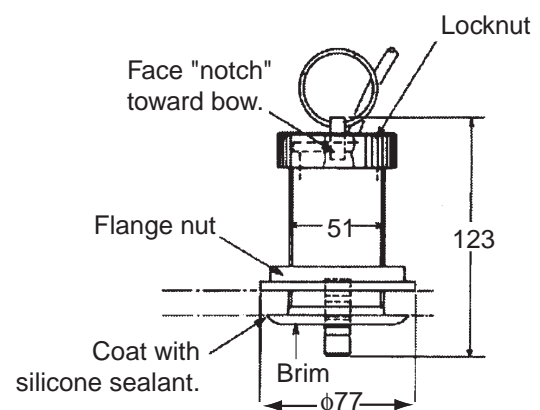




## 1.5 Optional Temperature Sensors

### 1.5.1 Transom mount temperature sensor T-02MTB


- Fix the cable at a convenient location with cable clamp.
- When the cable is led in through the transom board, make a hole of approx. 17 mm in diameter to pass the connector. After passing the cable, fill the hole with a sealing compound.

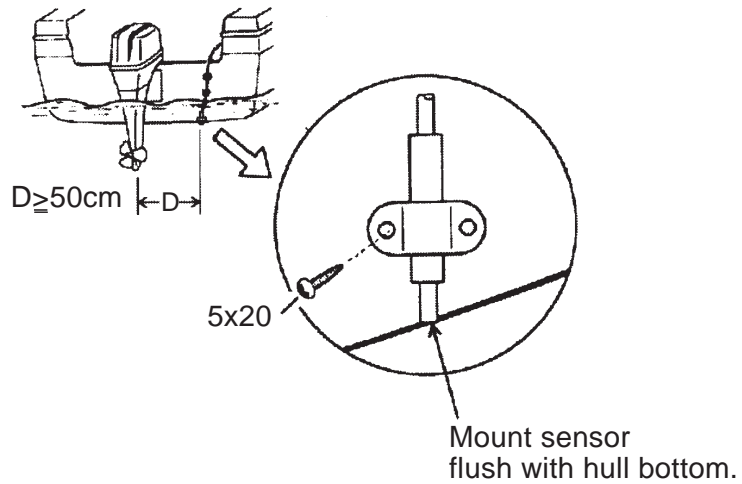

### 1.5.2 Thru-hull temperature sensor T-02MSB, T-03MSB

Select a suitable mounting location considering the following points:


- Select a mid-boat flat position. The sensor does not have to be installed perfectly perpendicular. However, the location should not be such that the transducer may be damaged when the boat is dry-docked.
- Locate away from equipment which gives off heat.
- Locate away from drain pipes.
- Select a location where vibration is minimal.

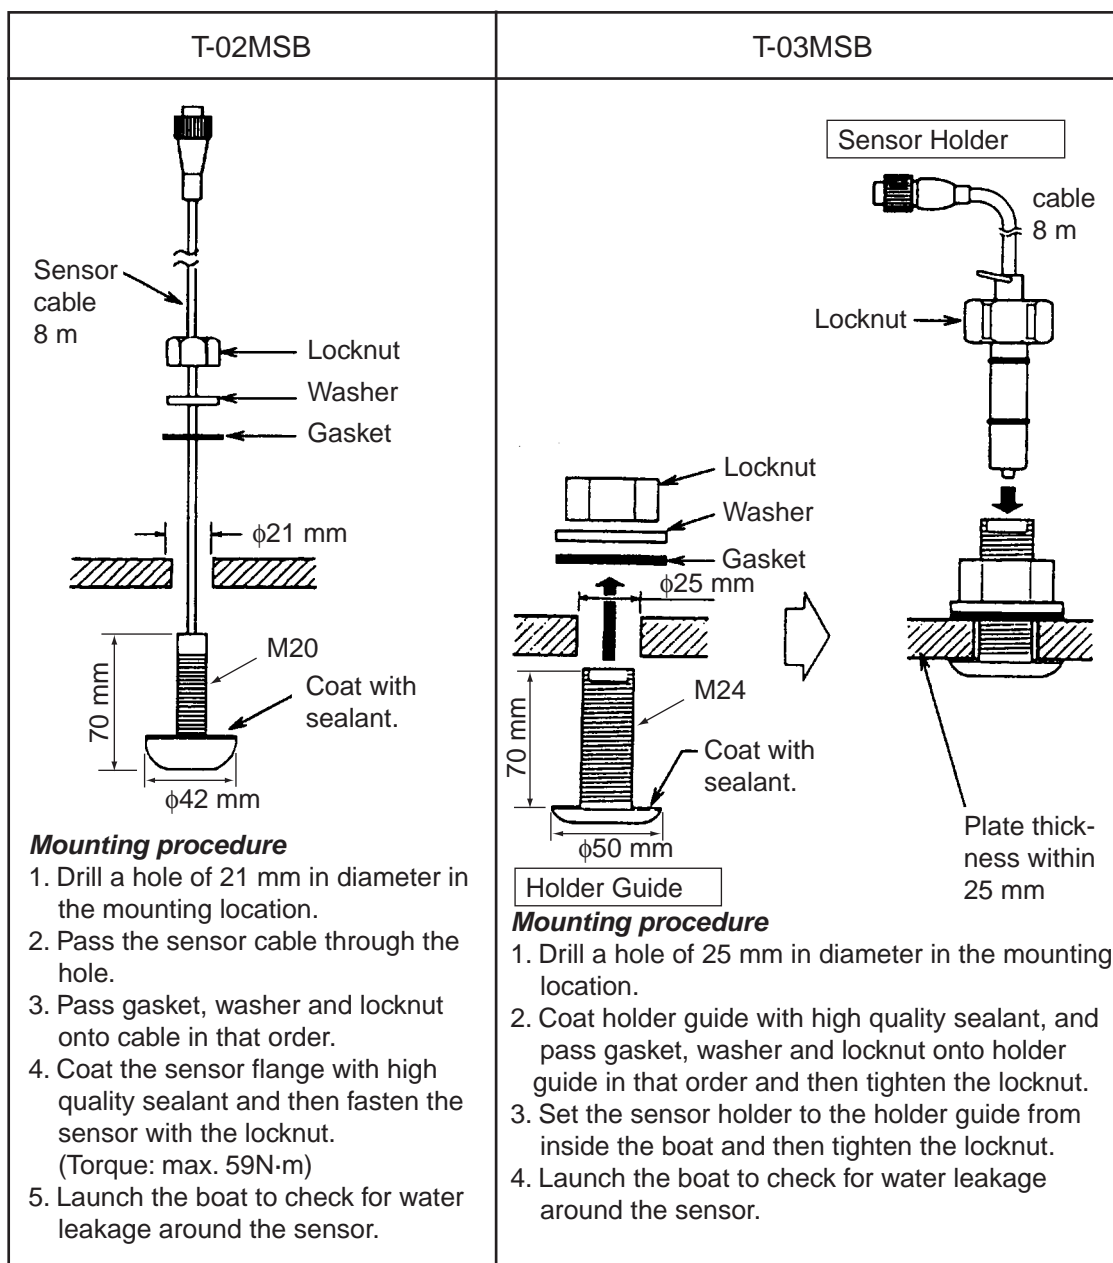

# 2. WIRING

## 2.1 Wiring Outline

Connect the power cable, transducer cables, sensor cable, network cable and ground wire to their respective locations on the network sounder. See the next page for how to connect the transducer cables.

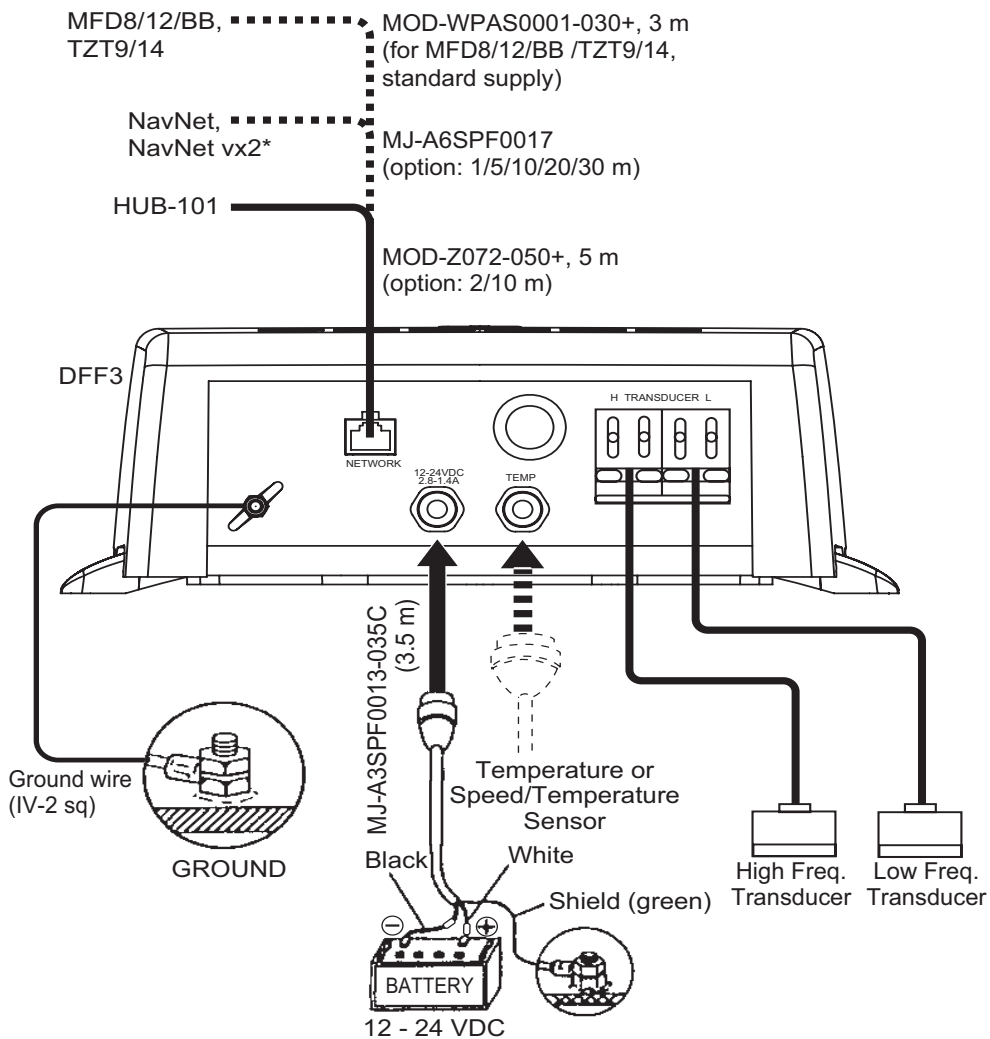

Model 17x2 Series, Model 17x2C Series, Model 17x4 Series, Model 17x4C Series, GD-1720, GD-1720C, Model 18x3C(-BB) Series, Model 18x4C(-BB) Series, Model 19x3C(-BB) Series, Model 19x4C(-BB) Series, GD-1900C(-BB), GD-1920C(-BB)

### Ground

Connect a ground wire (IV-2 sq, local supply) between the ground terminal and ship's ground to prevent interference to the sounder picture. Make the length of the wire as short as possible. For FRP vessels, install a ground plate that measures about 20 cm by 30 cm on the outside of the hull bottom and connect the ground wire there.

	<b>CAUTION</b>
	<b>Ground the equipment to prevent mutual interference.</b>

## 2.2 Transducer Cable


### TD-ID transducer (Airmar make transducer)

The TD-ID type transducer can be connected to this equipment. However, note the following limitations:

- TD-ID transducer cannot be used with NavNet, NavNet vx2.
- TD-ID transducer cannot be used with non-TD-ID transducer.
- Connect single TD-ID transducer to low frequency WAGO connector, regardless of actual frequency.

### Cable fabrication


Fabricate the transducer cable as shown below. Separate the transducer cable well away from other electric cables to prevent interference to the sounder. This is especially important in the case of power cables from televisions and monitors.

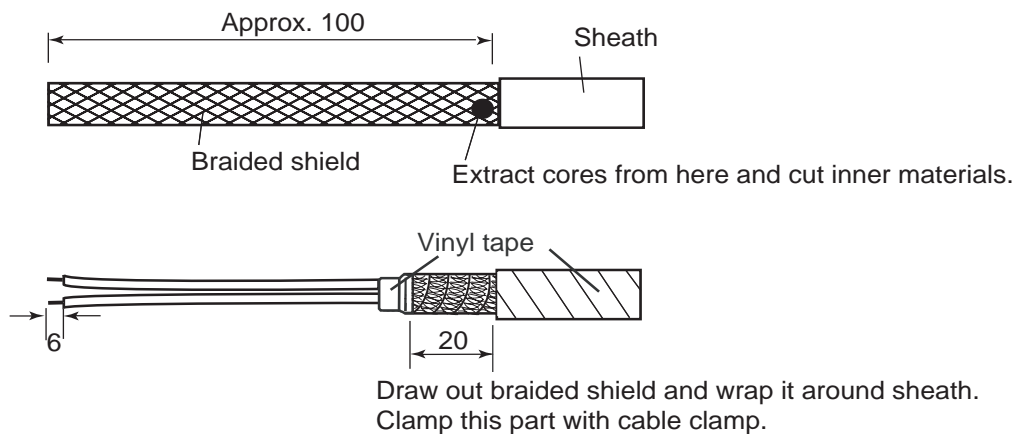

### Cable connection


After fabricating the transducer cable, connect the transducer cables to the equipment with WAGO connectors.

1. Open the cover: Grasp the cover at two sides, spread cover slightly and lift.
2. Unfasten six screws to remove the shield cover.
3. Detach the two WAGO connectors (low and high frequency) inside the equipment.

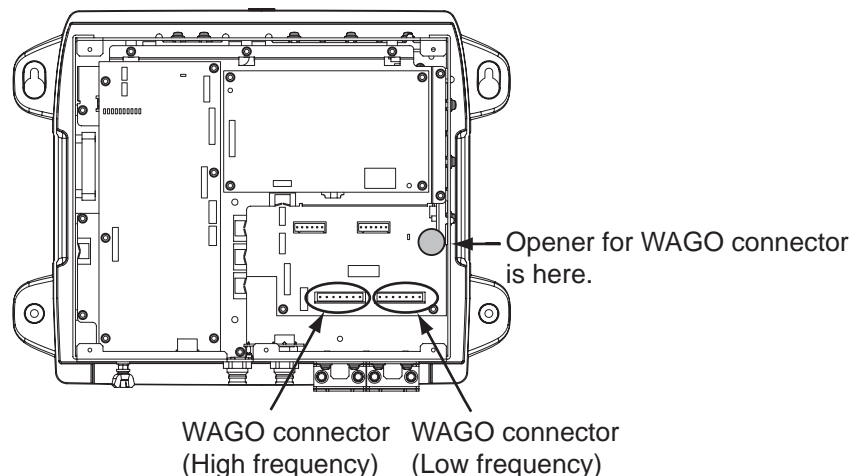


## 2. WIRING


4. Connect the transducer cable to the WAGO connector, following the instructions in the figure below and the interconnection diagram. (The opener for the WAGO connector is attached inside the equipment. See the figure above.)

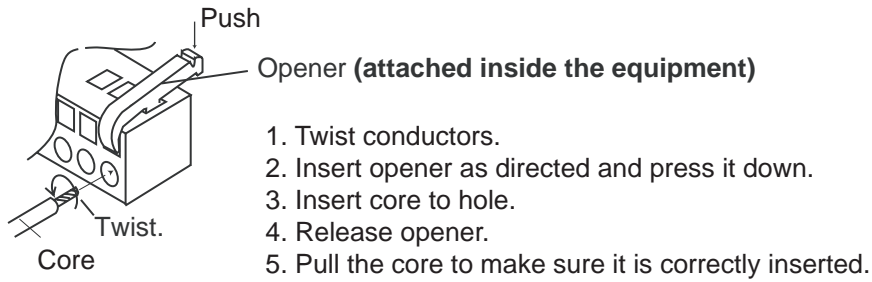

5. Unfasten the two screws labeled Screw A in the figure below.
6. Loosen the two screws labeled Screw B and slide cable clamp upward.

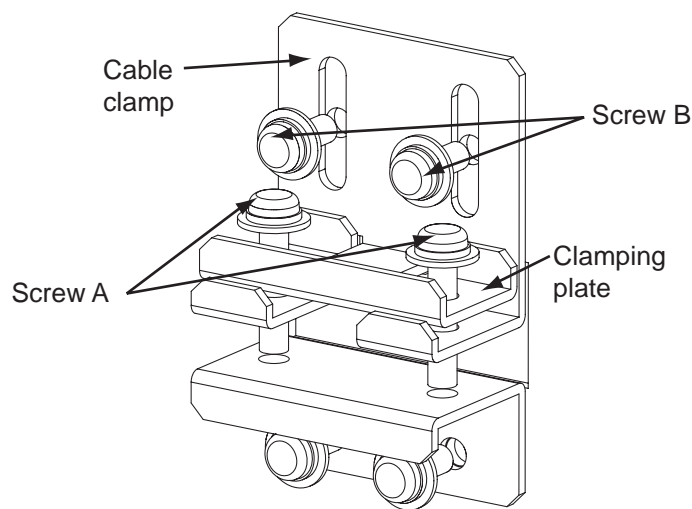

7. Pass the transducer cables through the cable entrance and connect their WAGO connectors to respective terminals inside the equipment.
8. Slide the cable clamp downward and tighten screws B and A in that order to fasten the cable clamp.

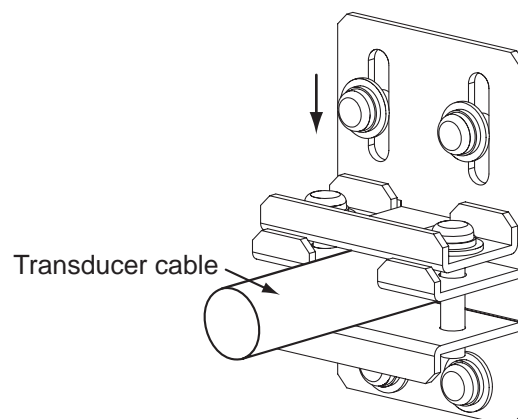

# 3. INITIAL SETTINGS

**⚠ WARNING**


Do not open the equipment unless totally familiar with electrical circuits.

Only qualified personnel should work inside the equipment.

## 3.1 Tap Setting

This equipment is preprogrammed for use with certain transducers. A jumper wire inside the equipment is set according to transducer model. Check the jumper wire setting instructions on the sticker attached to the chassis. Use the opener attached inside the unit to set the jumper wire. One end of the jumper wire is connected to COMMON; connect the other end to A - E in the jumper block as applicable.

For transducers not programmed, for example, Airmar make TD-ID transducer, consult a FURUNO agent or dealer for advice.

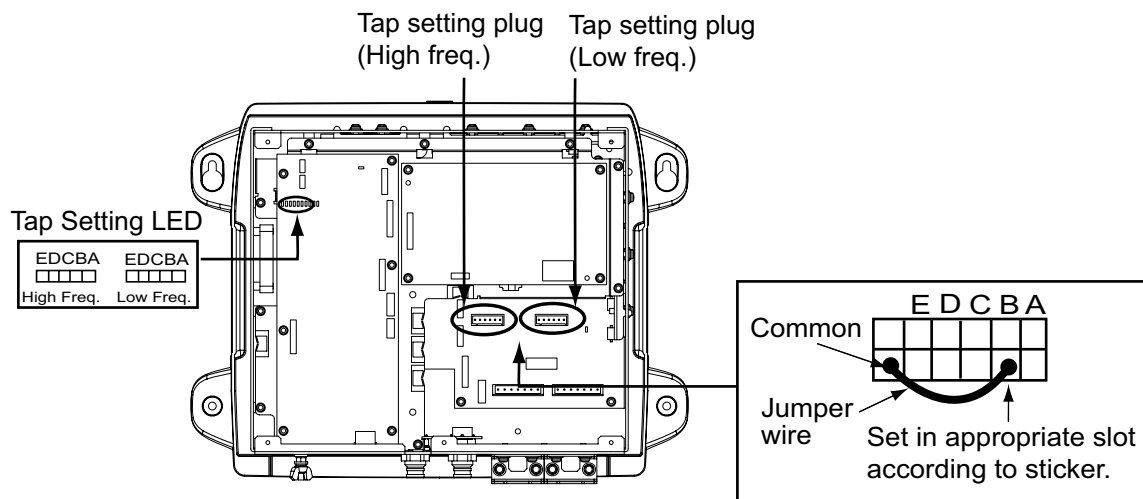


**Note 1:** For NavNet, the tap settings shown on the NETWORK SOUNDER SETUP are different from actual ones. Therefore, follow the instructions on the sticker inside the equipment.

**Note 2:** For transducers 50/200-1ST, 50/200-1T and 50/200-12M, use the tap settings for 50/200-1T (50: Tap B, 200: Tap C).

## 3.2 DIP Switch Setting

The DIP switch S2 sets up the system according to the equipment connected. In the default setting all switches (1-8) are OFF. The DIP switch S3 should not be adjusted; leave all switches in the OFF position.

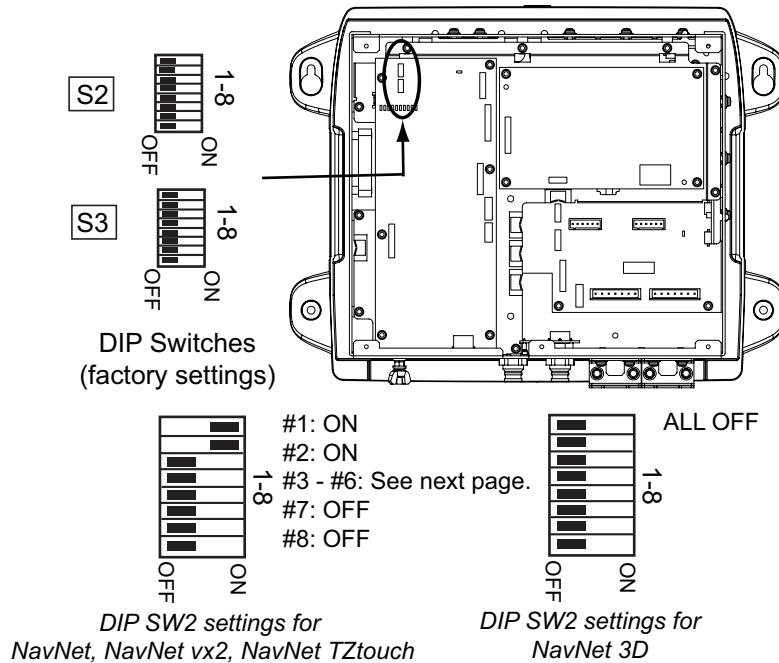

### DIP switch S2 description

Switch No.	Function	Setting
1	Power on/off by NavNet equipment	<b>OFF:</b> Power sync (for NavNet 3D)* <b>ON:</b> No power sync (for NavNet/NavNet vx2/ NavNet TZtouch)
2	Automatic/Manual IP address selection	<b>OFF:</b> Automatic IP address assignment. Use this setting for NavNet/NavNet vx2/NavNet TZtouch. <b>ON:</b> Manual IP address assignment. Use this setting for NavNet/NavNet vx2/NavNet TZtouch and refer to the table on the next page for IP addresses.
3 - 6	Manual IP address assignment	Valid when switch no. 2 is ON. For connection of multiple network sounders, assign each one an IP address with the Mode DIP switch, referring to the table on the next page.
7	Restore default settings (other than LAN and transducer)	See section 4.3.
8	Restore ALL default settings	See section 4.3.

\*: Power sync setting enabled at NavNet 3D.

**DIP SW S2 setting, sounder and IP address**

SW No.3	SW No.4	SW No.5	SW No.6	Host Name	IP Address
OFF	OFF	OFF	OFF	SOUNDER	172.031.092.001
ON	OFF	OFF	OFF	SOUNDER1	172.031.092.011
OFF	ON	OFF	OFF	SOUNDER2	172.031.092.012
ON	ON	OFF	OFF	SOUNDER3	172.031.092.013
OFF	OFF	ON	OFF	SOUNDER4	172.031.092.014
ON	OFF	ON	OFF	SOUNDER5	172.031.092.015
OFF	ON	ON	OFF	SOUNDER6	172.031.092.016
ON	ON	ON	OFF	SOUNDER7	172.031.092.017
OFF	OFF	OFF	ON	SOUNDER8	172.031.092.018
ON	OFF	OFF	ON	SOUNDER9	172.031.092.019
OFF	ON	OFF	ON		
ON	ON	OFF	ON		
OFF	OFF	ON	ON		
ON	OFF	ON	ON		
OFF	ON	ON	ON		
ON	ON	ON	ON		

**Transducer setting at NavNet series**

After setting up the transducer at the DFF3, set transducer type at NavNet 3D/TZtouch. See respective Installation Manual for the procedure.




### 3.3 Operation Check

For NavNet, NavNet vx2 and NavNet TZtouch, the DFF3 is powered on/off from ship's switch-board. For NavNet 3D, it is powered on/off from the display unit. The LED on the cover of the DFF3 lights or blinks according to equipment state, as described in the table below.

LED state and meaning

LED state	Meaning
Lighting continuously	<ul style="list-style-type: none"> <li>• Standby state. (If, for NavNet series, no signal is received via LAN for more than 10 minutes, the equipment automatically goes into standby to lessen power consumption.)</li> <li>• Power on (20 seconds during initialization)</li> <li>• IP address not set</li> </ul>
Blinking every two seconds	Normal operation
Blinking every 0.4 seconds	Transducer settings at NavNet series not properly set.

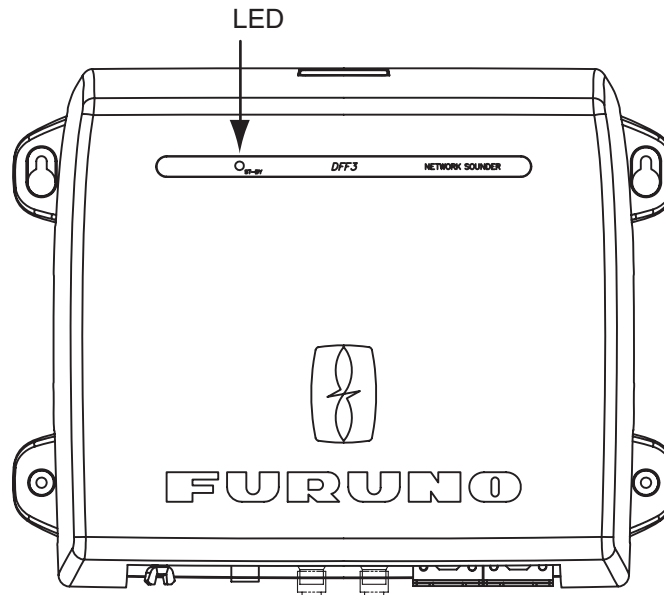

# 4. MAINTENANCE

**WARNING**

**ELECTRICAL SHOCK HAZARD**  
Do not open the equipment.

Only qualified personnel should work inside the equipment.

**NOTICE**

**Do not apply paint, anti-corrosive sealant or contact spray to coating or plastic parts of the equipment.**

Those items contain organic solvents that can damage coating and plastic parts, especially plastic connectors.


## 4.1 Maintenance

Regular maintenance is essential for good performance. Check the items listed in the table below at the suggested interval to help keep your equipment in good shape for years to come.

Item	Check point, action	Check interval
Transducer cables	Check that cables are tightly fastened and are not damaged. Refasten if necessary. Replace if damaged.	Once a month
Power cable, sensor cable	Check that these cables are tightly fastened and not damaged. Refasten if necessary. Replace if damaged.	Once a month
Ground	Check for corrosion. Clean if necessary.	Once a month
Power supply voltage	Check voltage. If out of rating correct problem.	Once a month
Cleaning the network sounder's cabinet	Dust or dirt on the cabinet may be removed with a dry cloth. Do not use chemical-based cleaners to clean the cabinet; they can remove markings and damage the cabinet.	Once a month
Transducer	Marine life on the transducer face will result in a gradual decrease in sensitivity. Check the transducer face for cleanliness each time the boat is dry-docked. Carefully remove any marine life with a piece of wood or fine-grade sandpaper.	When vessel is dry-docked

## 4.2 Replacing the Fuse

The 5A fuse (Type: FGBO-A 125V 5A PBF, Code No. 000-155-853-10) in the snap-in fuse holder on the power cable protects the equipment from equipment fault and reverse polarity of the ship's mains. If the equipment cannot be powered, the fuse may have blown. Find out the cause for blown fuse before replacing it. If the fuse blows again after replacement, contact a FURUNO agent or dealer for advice.

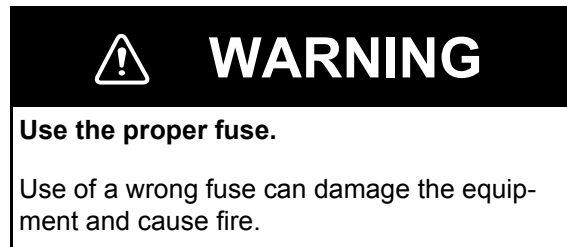

## 4.3 Restoring Default Settings

This procedure restores all default sounder settings on the NavNet series. You can restore all default settings or restore those other than transducer and LAN. This procedure should only be performed by a suitably qualified FURUNO technician.






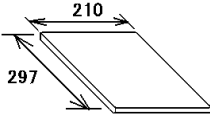
1. Disconnect the power and LAN cables from the DFF3.
2. Turn on the #1 and #2 switches of the Mode switch. See section 3.2 for the location.
3. Turn on the #7 or #8 switch of the Mode switch as applicable.  
#7: Restore default settings other than LAN and transducer.  
#8: Restore all default settings. Use this when changing transducers.
4. Connect the power cable to the DFF3, and turn on the power at the ship's switchboard.
5. The LED blinks (every four seconds) when default settings are completely restored.

# PACKING LIST

02GF-X-9851 -0 1/1

DFF3-J/E

A-1

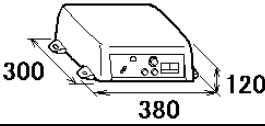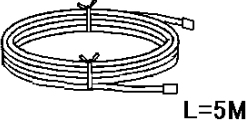NAME	OUTLINE	DESCRIPTION/CODE No.	Q' TY
<b>UNIT</b>			
NETWORK SOUNDER		DFF3	1
		000-011-916-00	
<b>SPARE PARTS</b>			
<b>SP02-05601</b>			
FUSE GLASS TUBE TYPE		FGB0-A 125V 5A PBF	2
		000-155-853-10	
<b>INSTALLATION MATERIALS</b>			
<b>CP02-08500</b>			
SELF-TAPPING SCREW		5X20 SUS304	4
		000-162-608-10	
CABLE ASSY.		MOD-Z072-050+	1
		000-167-176-10	
CABLE ASSY.		MJ-A3SPF0013-035C (5A)	1
		000-157-939-10	
<b>DOCUMENT</b>			
OPERATOR'S MANUAL		OM*-20370-*	1
		000-168-581-1* **	

CODE NUMBER ENDING WITH "\*\*" INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

**SPECIFICATIONS OF NETWORK SOUNDER  
DFF3**

**1 GENERAL**

- 1.1 TX frequency 28-200 kHz, two frequencies alternately transmitted (selectable)
- 1.2 Output power 1/2/3 kW nominal
- 1.3 Amplifier type Wide dynamic range linear amplifier (double superheterodyne)
- 1.4 Depth range and Pulse repetition rate (PRR)

200 kHz, TX rate: 20

Range (m)	PRR (/min.)
2	2403 (max)
5	2403
10	1621
40	476
100	222
200	117
400	58
1200	34

**2 INTERFACE**

- 2.1 Number of port LAN: 1 port, Transducer: 2 port, Temp/speed sensor: 1 port
- 2.2 Network Ethernet 10BASE-T/100BASE-TX

**3 POWER SUPPLY**

- 3.1 Network sounder 12-24 VDC: 2.8-1.4 A
- 3.2 Rectifier (PR-62, option) 100/110/220/230 VAC, 1 phase, 50/60 Hz

**4 ENVIRONMENTAL CONDITION**


- 4.1 Ambient temperature -15°C to +55°C
- 4.2 Relative humidity 93% at 40°C
- 4.3 Degree of protection IP20
- 4.4 Vibration requirement IEC 60945

**5 COATING COLOR**

N2.5 (not changed)


表1 TABLE 1

寸法区分 (mm) DIMENSION	公差 (mm) TOLERANCE
$L \leq 50$	$\pm 1.5$
$50 < L \leq 100$	$\pm 2.5$
$100 < L \leq 500$	$\pm 3$

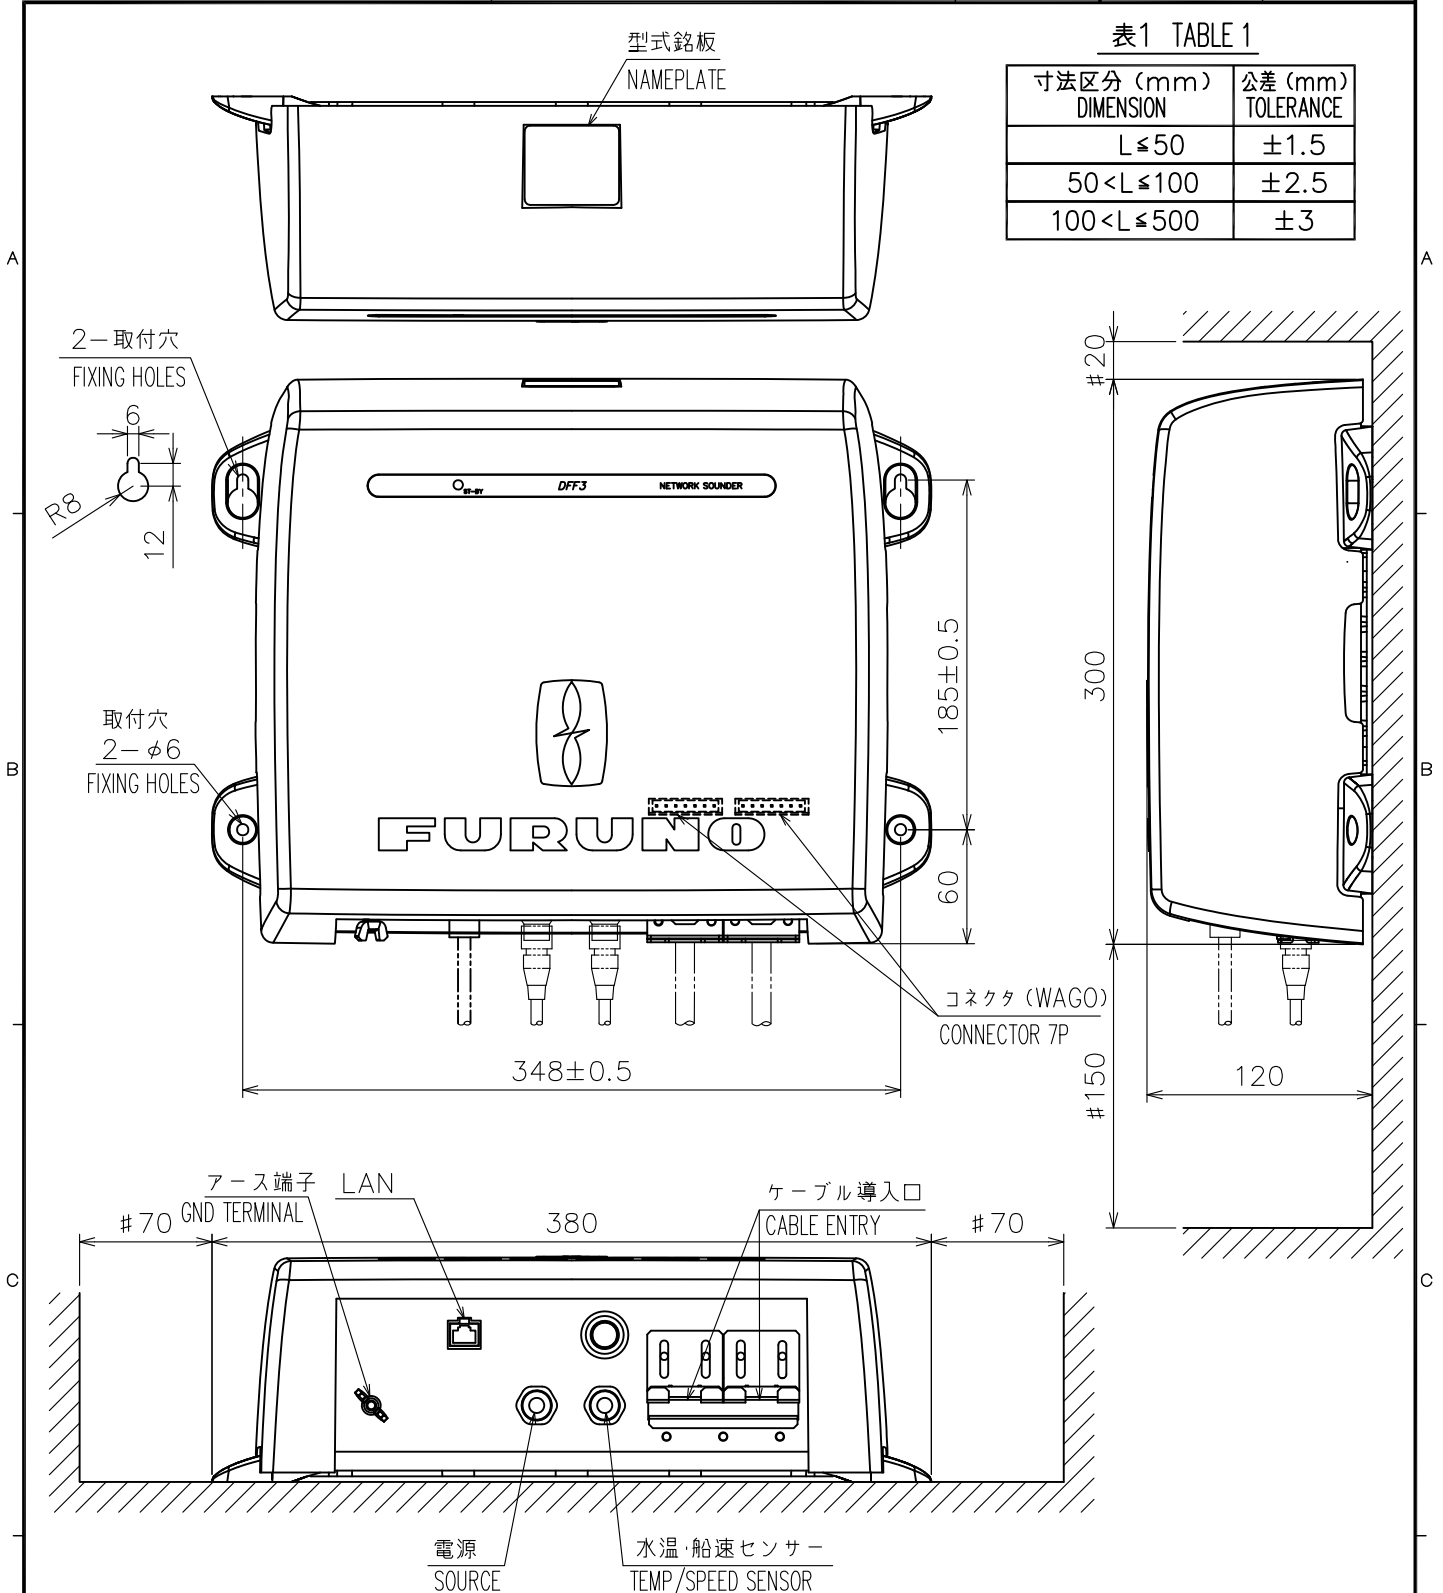

- 注 記
- 1) #印寸法は最小サービス空間寸法とする。
  - 2) 指定外の寸法公差は表1による。
  - 3) 取付用ネジはトラスタッピンネジ呼び径5×20を使用のこと。
- NOTE
1. # MINIMUM SERVICE CLEARANCE.
  2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
  3. USE TAPPING SCREWS 5x20 FOR FIXING THE UNIT.

DRAWN	26/Mar/08 T.YAMASAKI	TITLE	DFF3
CHECKED	27/Mar/08 T.TAKENO	名称	ネットワーク魚探
APPROVED	28/Mar/08 R.Esumi		外寸図
SCALE	1/4 MASS 3.9 $\pm 10\%$ kg	NAME	NETWORK SOUNDER
DWG.No.	C2037-G01-B	REF.No.	02-161-100G-1
		OUTLINE DRAWING	

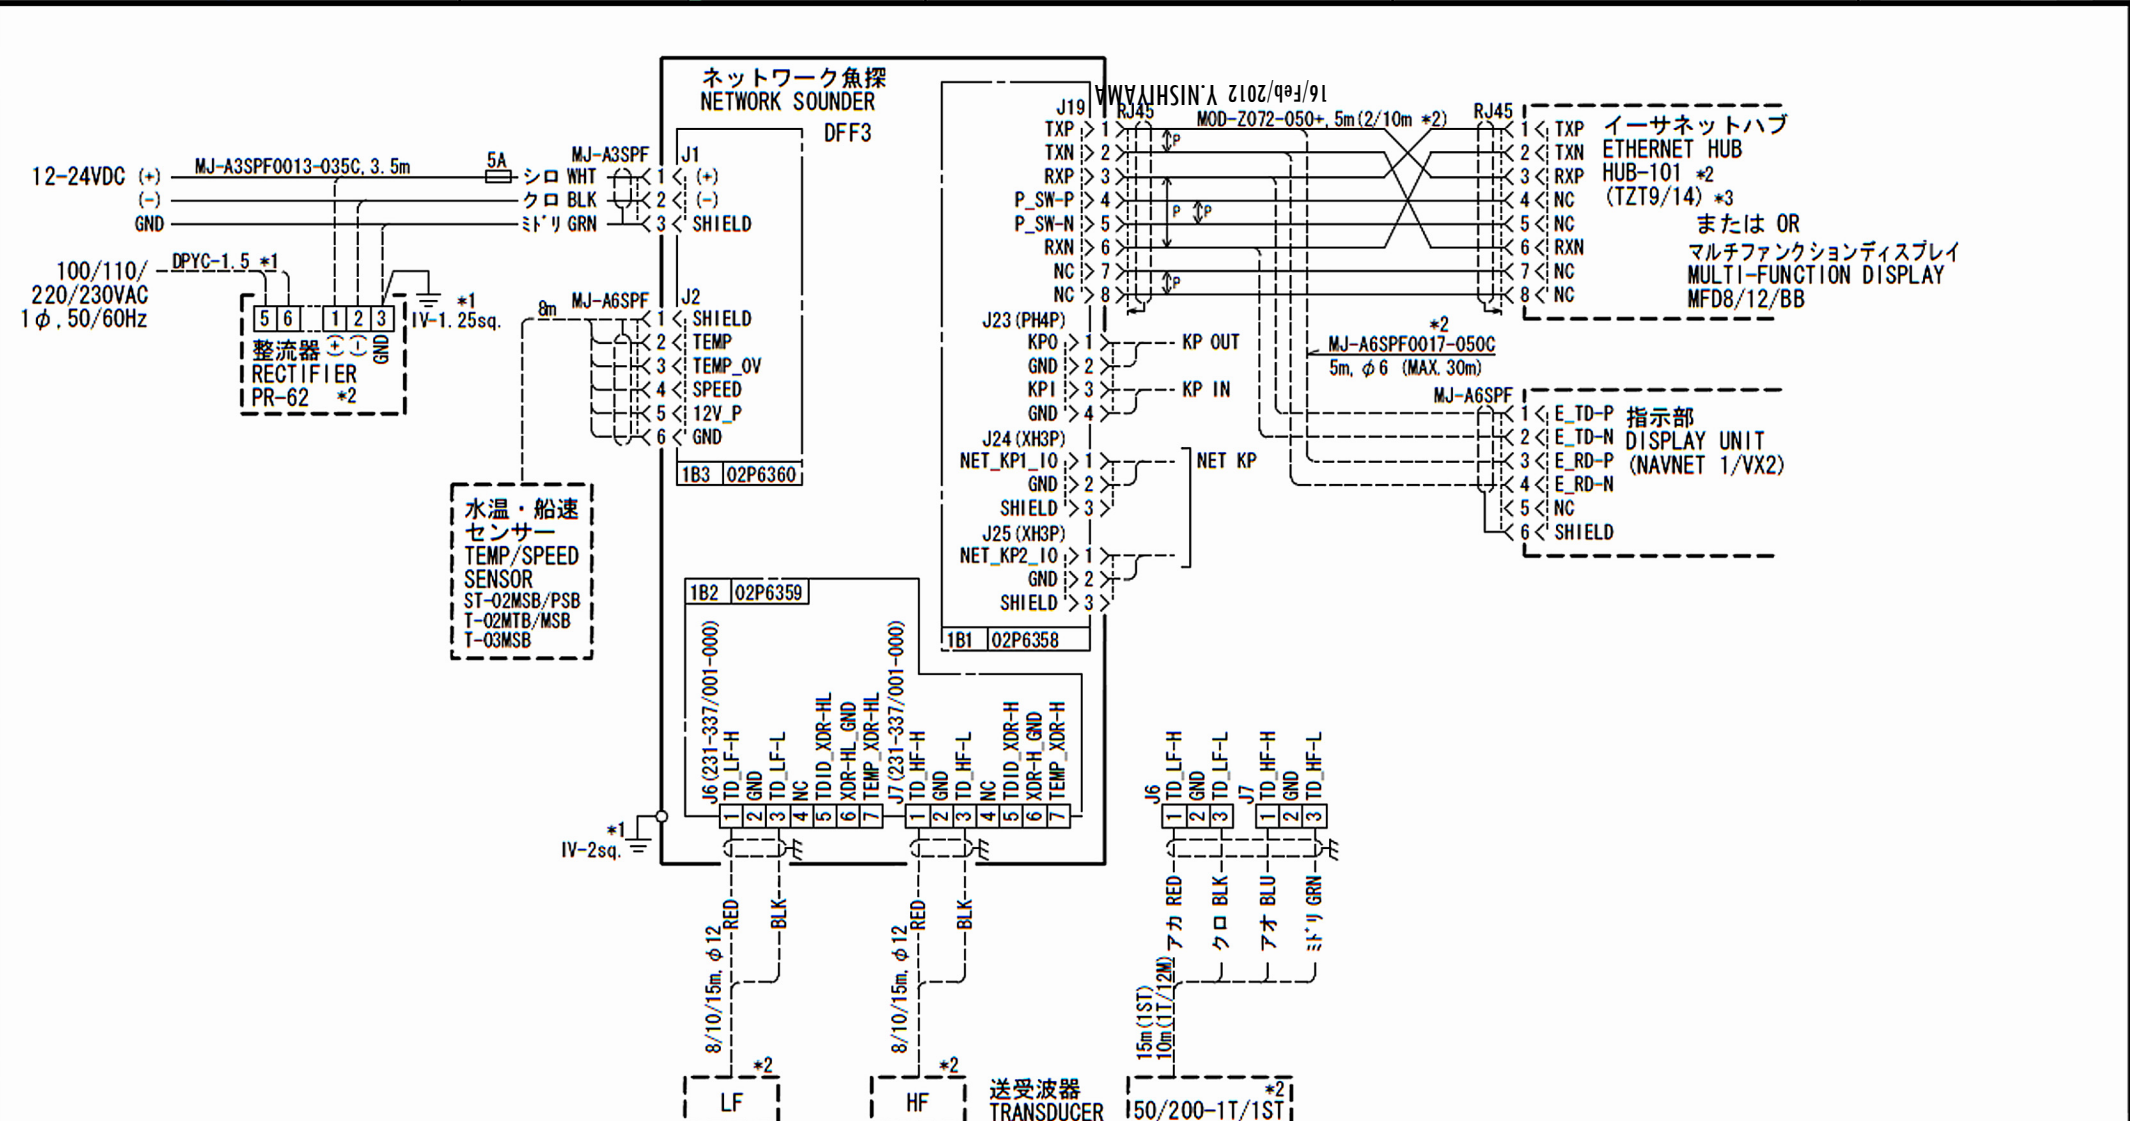

**注記**  
 \*1) 造船所手配。  
 \*2) オプション。  
 \*3) DFF3のDIPスイッチ設定変更が必要。

**NOTE**  
 \*1: SHIPYARD SUPPLY.  
 \*2: OPTION.  
 \*3: CHANGE DIP SWITCH SETTING OF DFF3.

DRAWN 14/Feb/2012 T. YAMASAKI	TITLE DFF3
CHECKED 14/Feb/2012 H. MAKI	名称 ネットワーク魚探
APPROVED 16/Feb/2012 Y. NISHIYAMA	相互結線図
SCALE MASS kg	NAME NETWORK SOUNDER
DWG. No. C2037-C01-D	REF. No. 02-161-1001-1
INTERCONNECTION DIAGRAM	

# FURUNO Worldwide Warranty for Pleasure Boats (Except North America)

This warranty is valid for products manufactured by Furuno Electric Co. (hereafter FURUNO) and installed on a pleasure boat. Any web based purchases that are imported into other countries by anyone other than a FURUNO certified dealer may not comply with local standards. FURUNO strongly recommends against importing these products from international websites as the imported product may not work correctly and may interfere with other electronic devices. The imported product may also be in breach of the local laws and mandated technical requirements. Products imported into other countries as described previously shall not be eligible for local warranty service.

For products purchased outside of your country please contact the national distributor of Furuno products in the country where purchased.

This warranty is in addition to the customer's statutory legal rights.

## 1. Terms and Conditions of Warranty

FURUNO guarantees that each new FURUNO product is the result of quality materials and workmanship. The warranty is valid for a period of 2 years (24 months) from the date of the invoice, or the date of commissioning of the product by the installing certified dealer.

## 2. FURUNO Standard Warranty

The FURUNO standard warranty covers spare parts and labour costs associated with a warranty claim, provided that the product is returned to a FURUNO national distributor by prepaid carrier.

The FURUNO standard warranty includes:

- Repair at a FURUNO national distributor
- All spare parts for the repair
- Cost for economical shipment to customer

## 3. FURUNO Onboard Warranty

If the product was installed/commissioned and registered by a certified FURUNO dealer, the customer has the right to the onboard warranty.

The FURUNO onboard warranty includes

- Free shipping of the necessary parts
- Labour: Normal working hours only
- Travel time: Up to a maximum of two (2) hours
- Travel distance: Up to a maximum of one hundred and sixty (160) KM by car for the complete journey

## 4. Warranty Registration

For the Standard Warranty - presentation of product with serial number (8 digits serial number, 1234-5678) is sufficient. Otherwise, the invoice with serial number, name and stamp of the dealer and date of purchase is shown.

For the Onboard Warranty your FURUNO certified dealer will take care of all registrations.

## 5. Warranty Claims

For the Standard Warranty - simply send the defective product together with the invoice to a FURUNO national distributor. For the Onboard Warranty – contact a FURUNO national distributor or a certified dealer. Give the product's serial number and describe the problem as accurately as possible.

Warranty repairs carried out by companies/persons other than a FURUNO national distributor or a certified dealer is not covered by this warranty.

## 6. Warranty Limitations

When a claim is made, FURUNO has a right to choose whether to repair the product or replace it.

The FURUNO warranty is only valid if the product was correctly installed and used. Therefore, it is necessary for the customer to comply with the instructions in the handbook. Problems which result from not complying with the instruction manual are not covered by the warranty.

FURUNO is not liable for any damage caused to the vessel by using a FURUNO product.

The following are excluded from this warranty:

- a. Second-hand product
- b. Underwater unit such as transducer and hull unit
- c. Routine maintenance, alignment and calibration services.
- d. Replacement of consumable parts such as fuses, lamps, recording papers, drive belts, cables, protective covers and batteries.
- d. Magnetron and MIC with more than 1000 transmitting hours or older than 12 months, whichever comes first.
- e. Costs associated with the replacement of a transducer (e.g. Crane, docking or diver etc.).
- f. Sea trial, test and evaluation or other demonstrations.
- g. Products repaired or altered by anyone other than the FURUNO national distributor or an authorized dealer.
- h. Products on which the serial number is altered, defaced or removed.
- i. Problems resulting from an accident, negligence, misuse, improper installation, vandalism or water penetration.
- j. Damage resulting from a force majeure or other natural catastrophe or calamity.
- k. Damage from shipping or transit.
- l. Software updates, except when deemed necessary and warrantable by FURUNO.
- m. Overtime, extra labour outside of normal hours such as weekend/holiday, and travel costs above the 160 KM allowance
- n. Operator familiarization and orientation.