


(2, 1)

DPF1320 Cutout Template

/16"

+

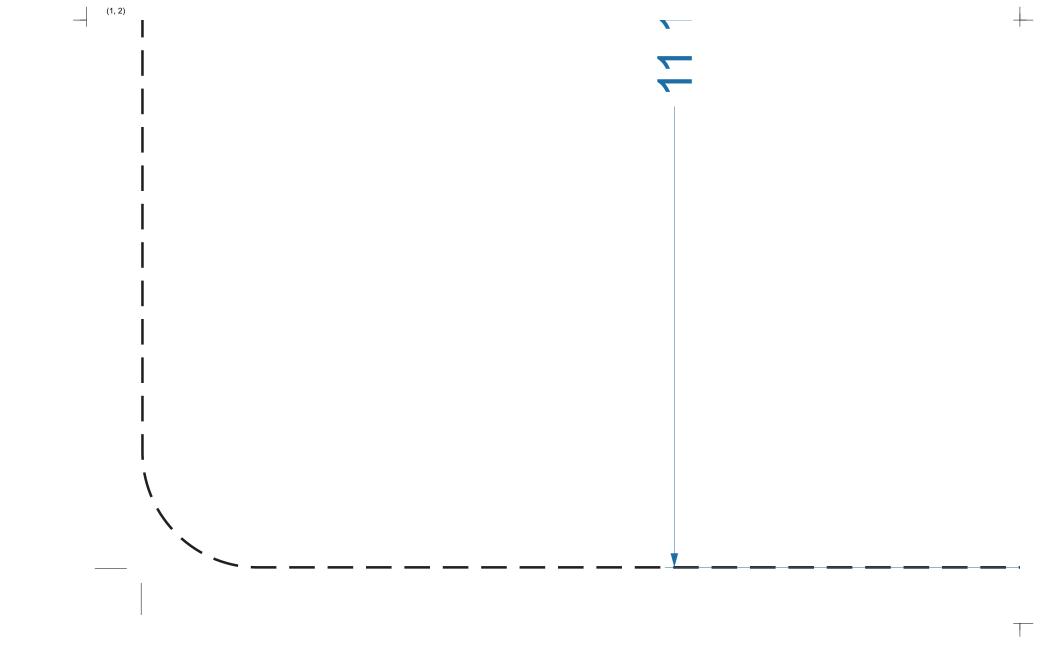

Installation Instructions:

Carefully cut along dotted line
Tape down template on location to be mounted
Carefully cut hole where hatch is to be mounted
Place hatch in hole mark/drill fastener holes
Apply generous bead of marine grade silicone
mounting surface and place frame into place
Install fasteners and be careful not to over
tighten