


(1, 1)

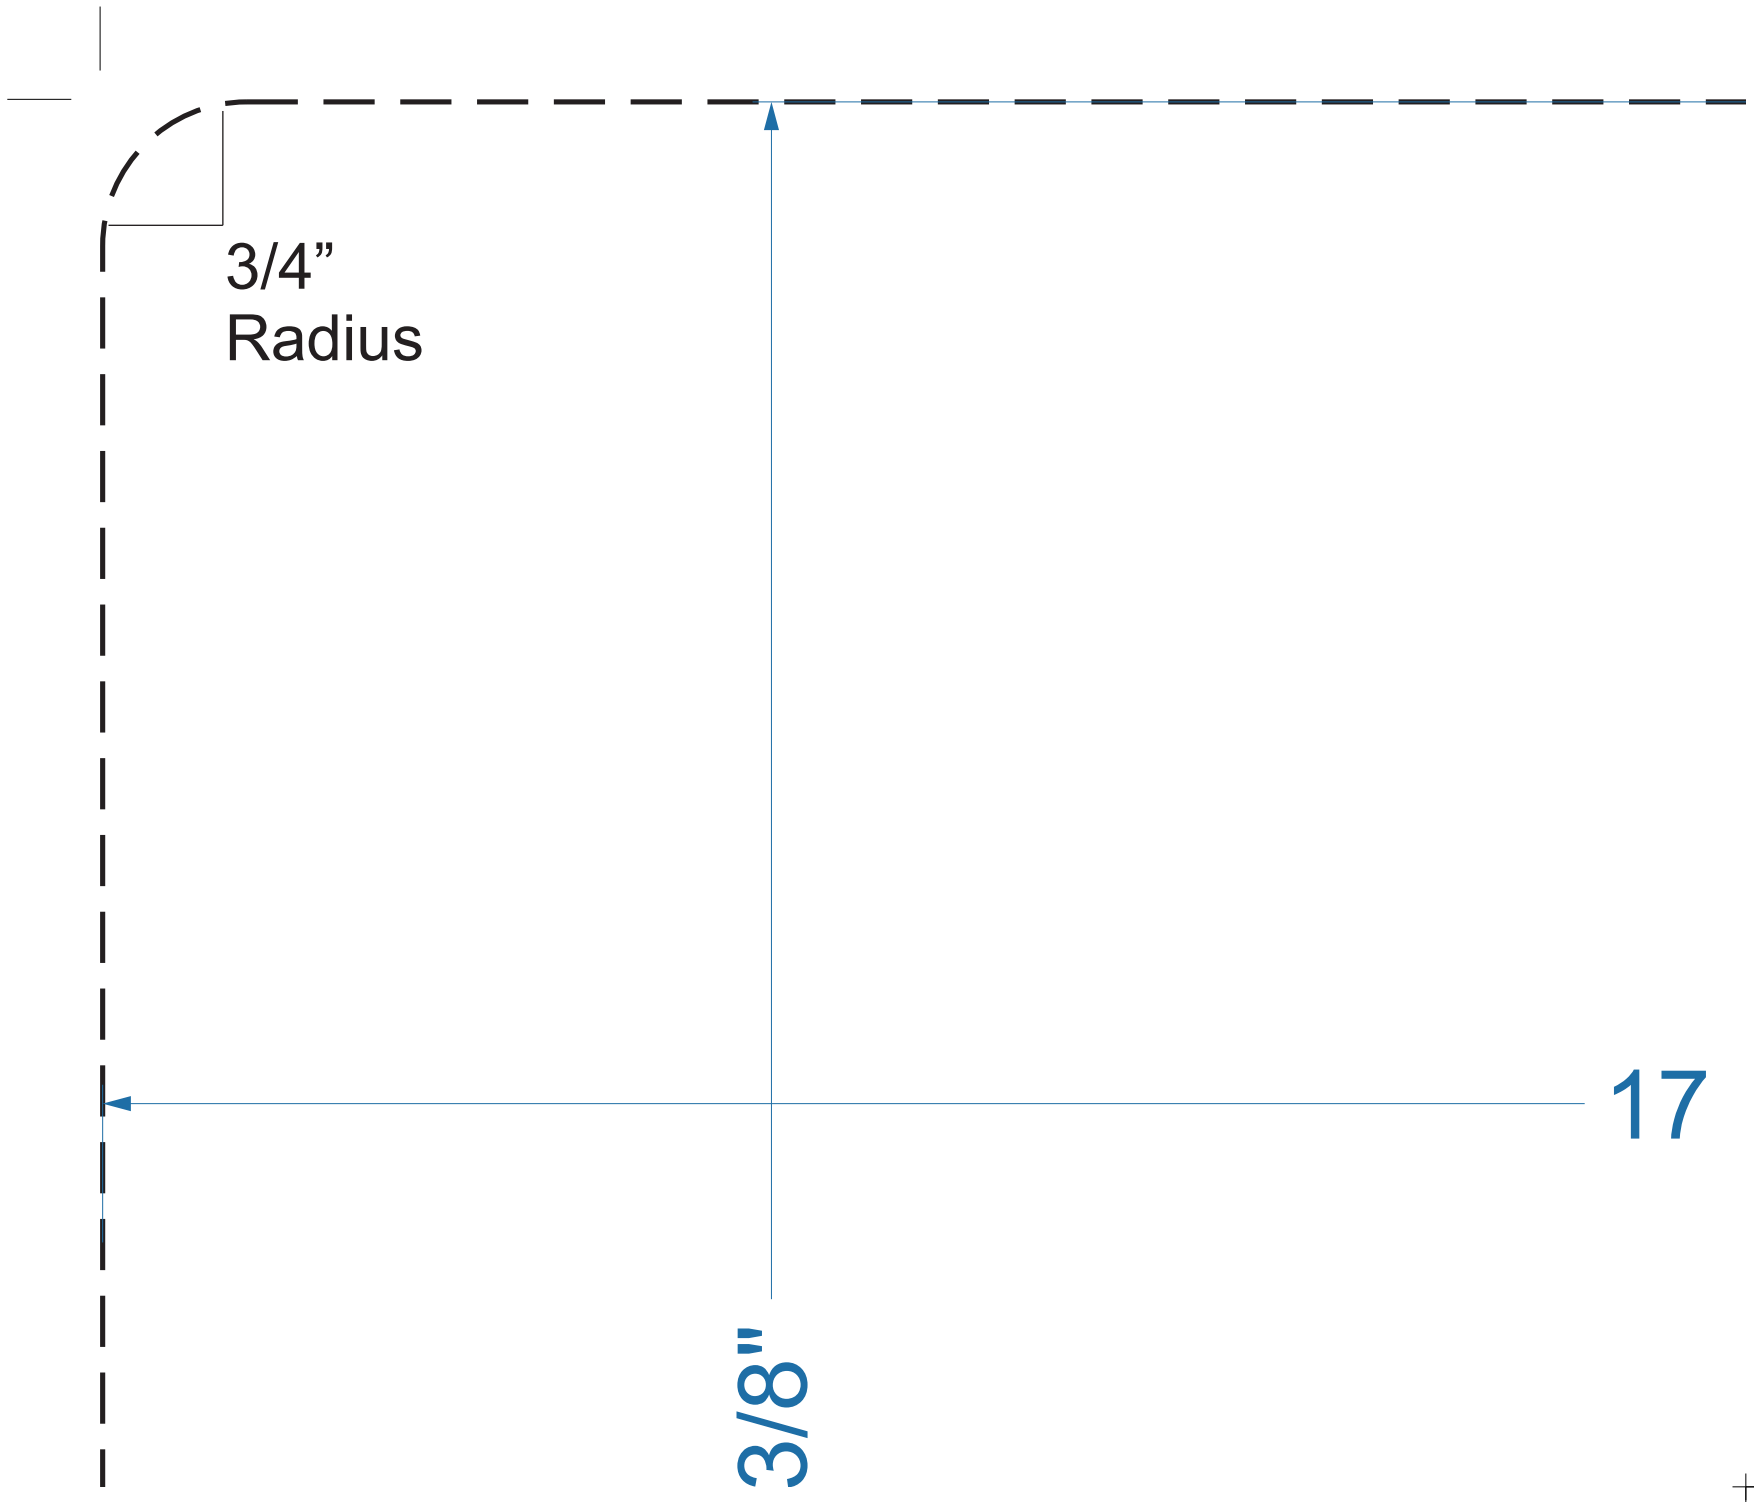

$3/4$ "
Radius


$3/8$ "

17


(2, 1)

DPF1618 & DPF1816 Cutout Template

1/8"

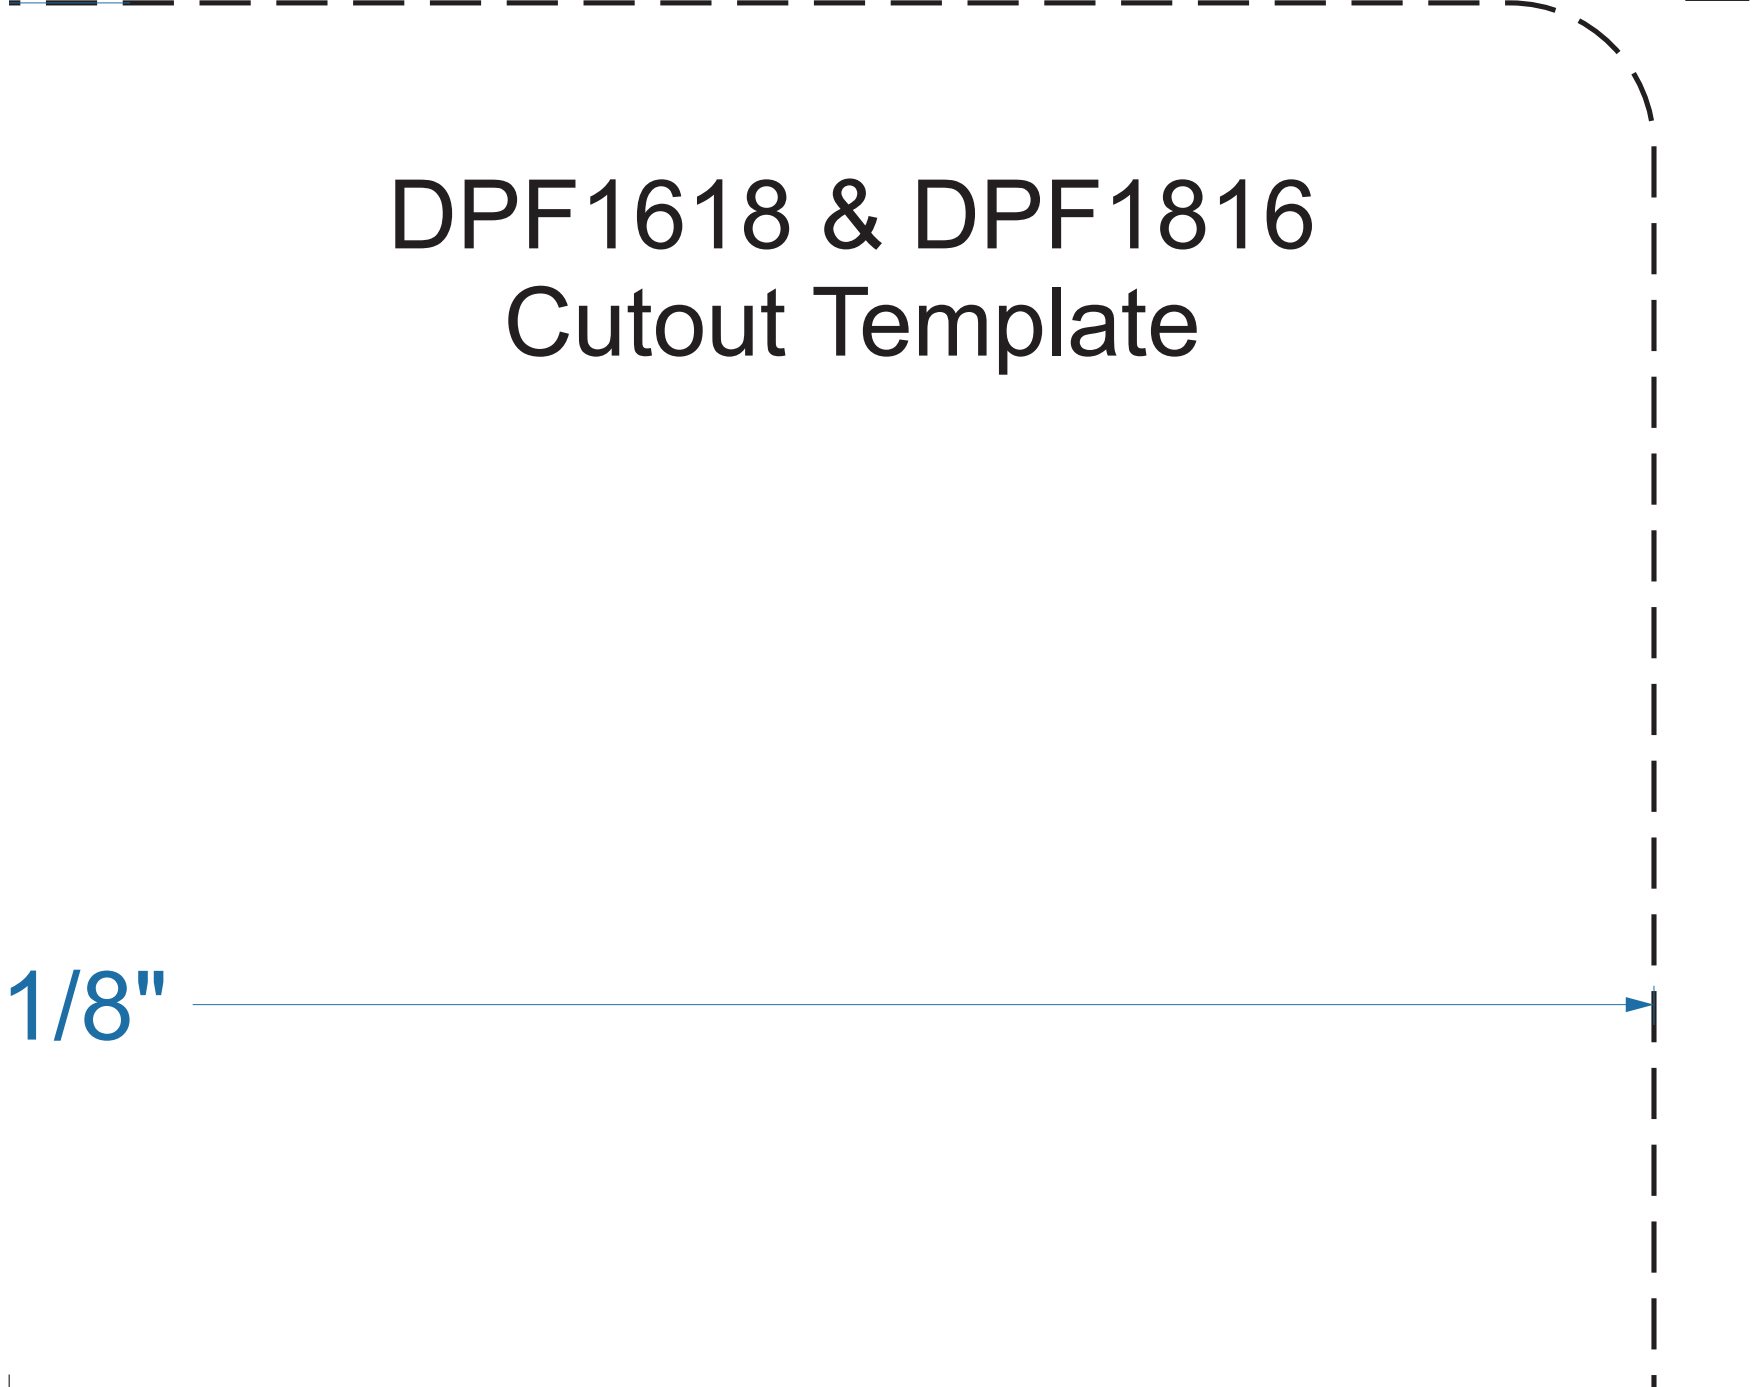

(1, 2)



14

T

Installation Instructions:

- 1) Carefully cut along dotted line
- 2) Tape down template on location to be mounted
- 3) Carefully cut hole where hatch is to be mounted
- 4) Place hatch in hole mark/drill fastener holes
- 5) Apply generous bead of marine grade silicone to mounting surface and place frame into place
- 6) Install fasteners and be careful not to over tighten