


---

## INSTRUCTIONS:

Slip ring over 60CM18 boot until it makes contact with ridge around boot.

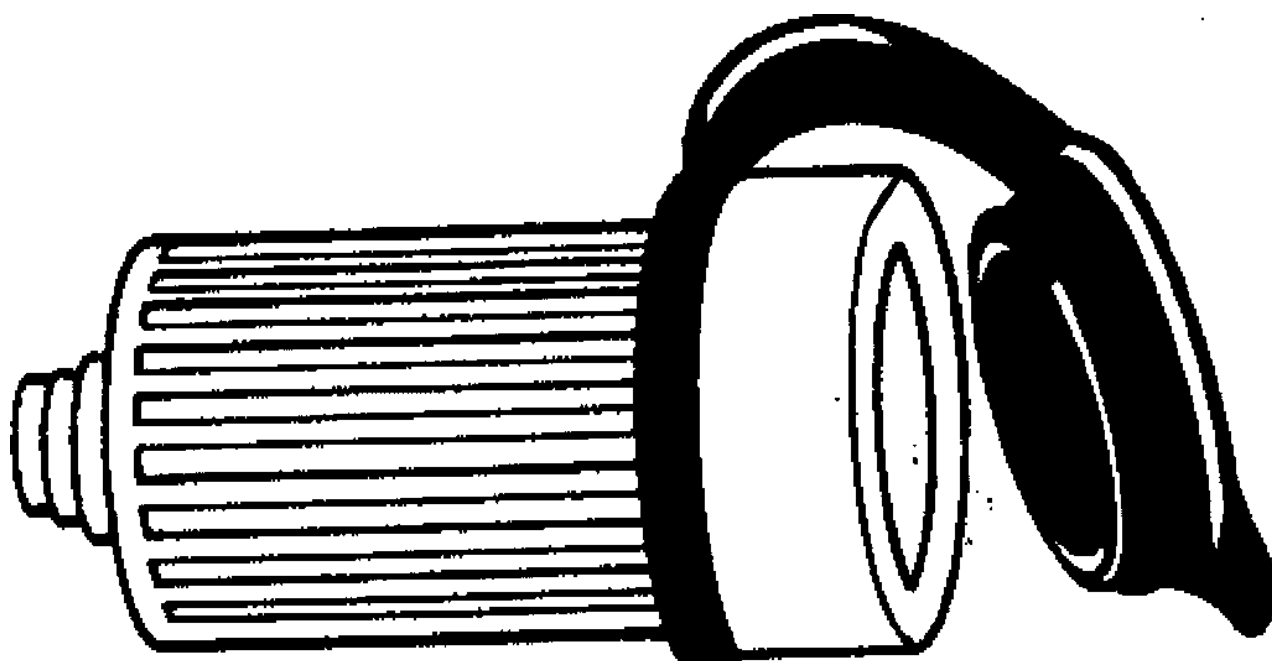

Wiring Device-Kellems

