

# MEGAWARE

## SkegPro®


### INSTALLATION INSTRUCTIONS

Thank you for purchasing a SkegPro® skeg protector from Megaware KeelGuard, Inc. You are now part of a family of thousands of boat and personal watercraft owners who have discovered the pleasure of worry-free boating. With proper installation, you too will enjoy years of carefree boating.

SkegPro® protection guards are very simple to install; however, the following instructions must be strictly followed.


**CAUTION!** When working with this product, **ALWAYS WEAR GLOVES** to prevent injury to yourself and others. This product can and will cut your skin if not handled properly.

**STEP 1.** If needed, repair skeg to ensure proper fit before installing SkegPro.®

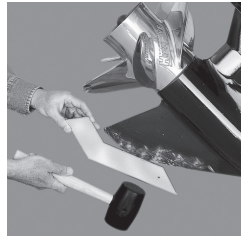


**STEP 2.** To enhance appearance, prime and paint skeg before installing the SkegPro.®

**STEP 3.** Using a mallet (leather, rubber or wooden), place the SkegPro® on the skeg and gently tap on it to get it started, then drive it on with the mallet until fully seated.\*

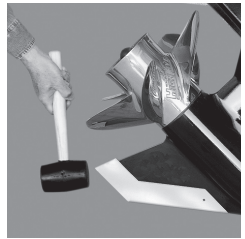

**STEP 4.** Using the pre-drilled mounting hole in the SkegPro® as a pilot hole, drill the skeg using a 3/16" drill bit, and install the stainless steel hardware.

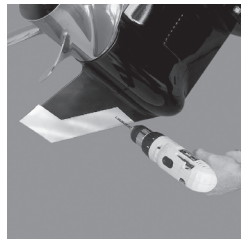

**Precautionary Statement:** The SkegPro® is not designed to prevent damage in the event of collision impact with stationary objects. This product is designed to prevent and reduce wear and the amount of damage encountered while hitting minor floating objects or submerged stumps or rocks.

\* Some lower units may have a reinforced wear tab at the lower end or bottom of the skeg. This wear tab should be filed flush with the skeg to provide a proper fit.

Made in China