
Patriot Dock


PN10827 4-Step Ladder Assembly and Installation Instructions

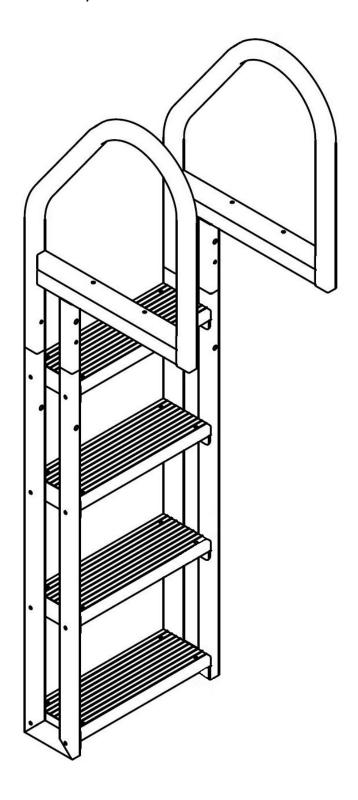



Tools Required: Cordless Drill with 3/8" drill bit, phillips head screw driver, pliers, M10 and M15 wrenches

Requires mounting holes in dock frame be drilled out.

Parts List

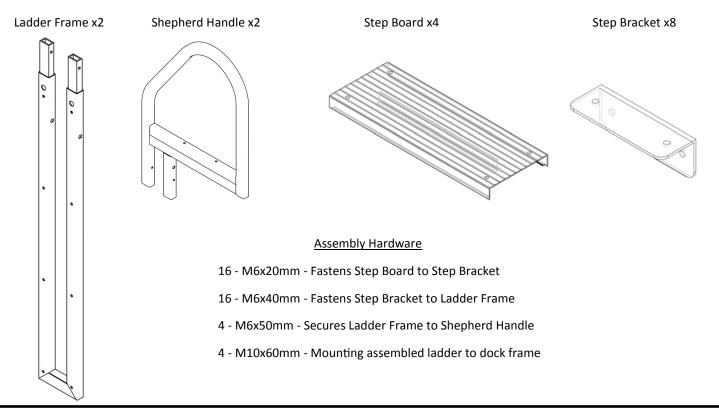

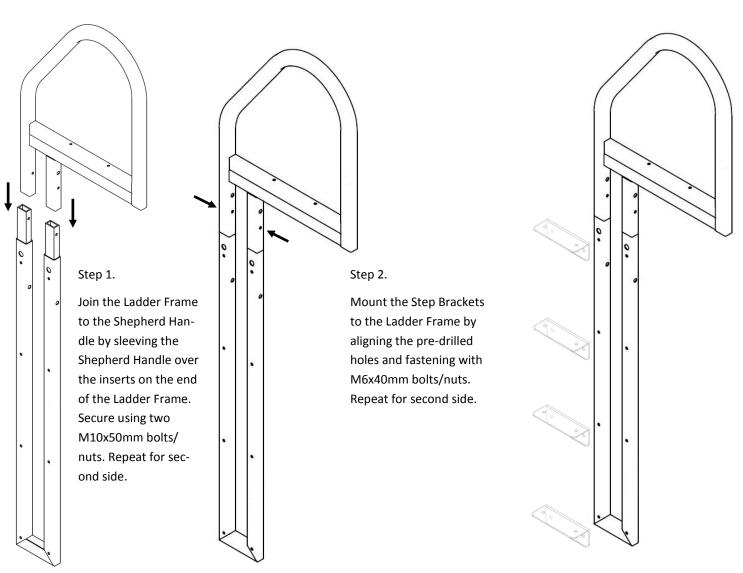

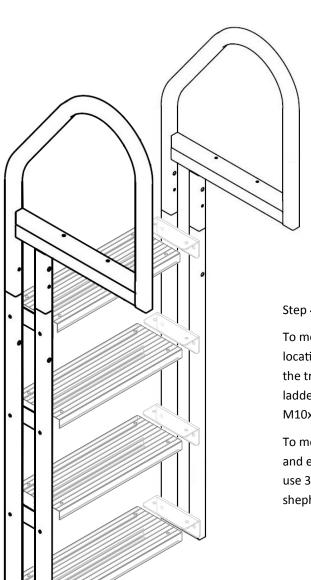

Step 3.

The Step Board sleeves over the Step Bracket and is fastened using two M6x20mm bolts/nuts on each side of the Step Board. Attach each Step Board to one of the Side Frame assemblies then position the second Side Frame assembly inside the Step Boards, tighten all fasteners to complete assembly.

Step 4.

To mount the 4-Step Ladder to a Patriot dock, first choose the desired location and align one side with the 3/8" holes in the vertical angle on the truss side frame. Mark the hole locations on the opposite side of the ladder, set ladder aside and drill 3/8" holes. Mount ladder using four M10x60mm mounting bolts through the truss side frame of the dock.

To mount the 4-Step Ladder to a wooden dock, choose desired location and either mark and pre-drill 3/8" holes for mounting with bolts/nuts or use 3/8" lag screws. The 4-Step Ladder also has mounting holes in the shepherd handles for fastening to the deck boards for added support.