


NYLON SWITCH PANEL


LED LIGHTED 12V POWER SOCKET & FIVE TOGGLES
424627-1

SEADOG[®]LINE
QUALITY MARINE GEAR

Assembly Instructions

1. Cut hole size as per template (right).
 2. Connect positive from battery into the wire connector (supplied) along with wiring from each fuse holder.
 3. Connect negative from battery to negative panel wire or grounding buss bar (not supplied).
 4. Connect positive from each device to any terminal that is available from selected switches and attach the corresponding label.
 5. Connect negative from each device to negative stud or grounding buss bar (not supplied).
 6. Secure the panel with 4 screws (supplied).
- Each fuse holder is supplied with a 15A ATC type fuse.
 - To replace ATC fuses, pull fuse holder cover as per drawing and take out the old fuse.
 - Put in new fuse and close cover.

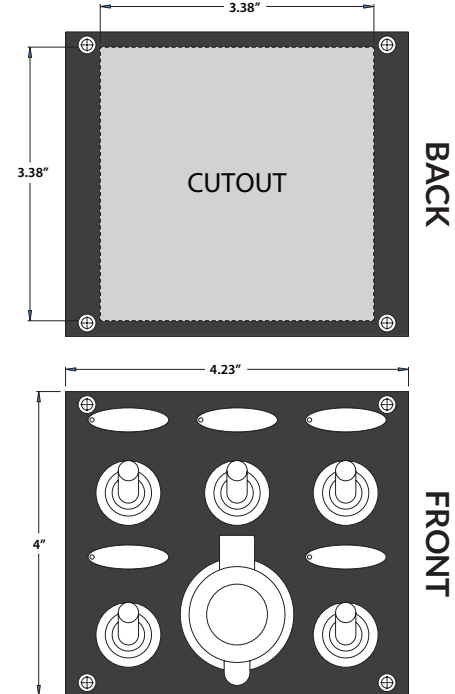

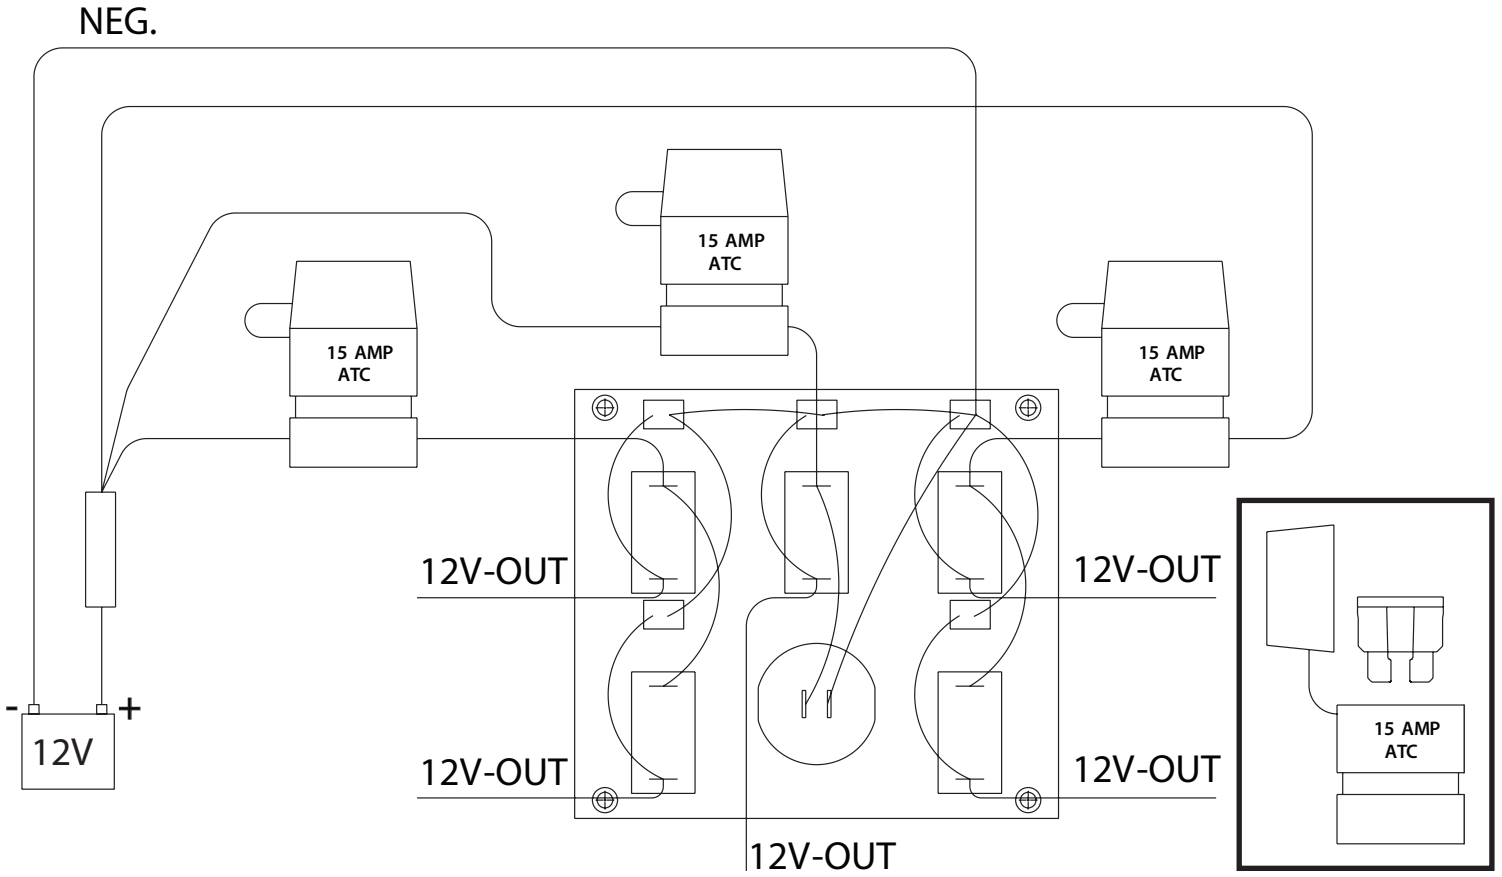

Learn more about marine electrical distribution on our website.