


Instructions for Trailer “Y” Harness

INSTALLATION INSTRUCTIONS

1. Run wiring harness through tongue of trailer until the plug end projects 12" beyond coupler.
2. Attach white wire to the frame of the trailer (Make sure it has a good ground).
3. Separate the harness into Brown/Yellow and Brown/Green segments.
4. Mount Brown/Green segment on the right inside of trailer frame with frame clips.
5. Mount Brown/Green segment on left inside of trailer frame with frame clips.
6. Connect correct color coded wires to taillights using heat shrink butt splices. After crimping butt splices, heat end of butt splices to shrink and seal to wire. Making sure lights are grounded.
7. Attach marker lights to Brown wire using wiretaps or other connectors, making sure lights are grounded.
8. After installation check lights to make sure turn signs are bright and do not flash too rapidly. If you experience a weak or rapid flash, check for a good ground and also you might have to install a heavy duty flasher in your vehicle.
9. Seal all electrical connections with liquid electrical tape or marine-grade silicone sealant.

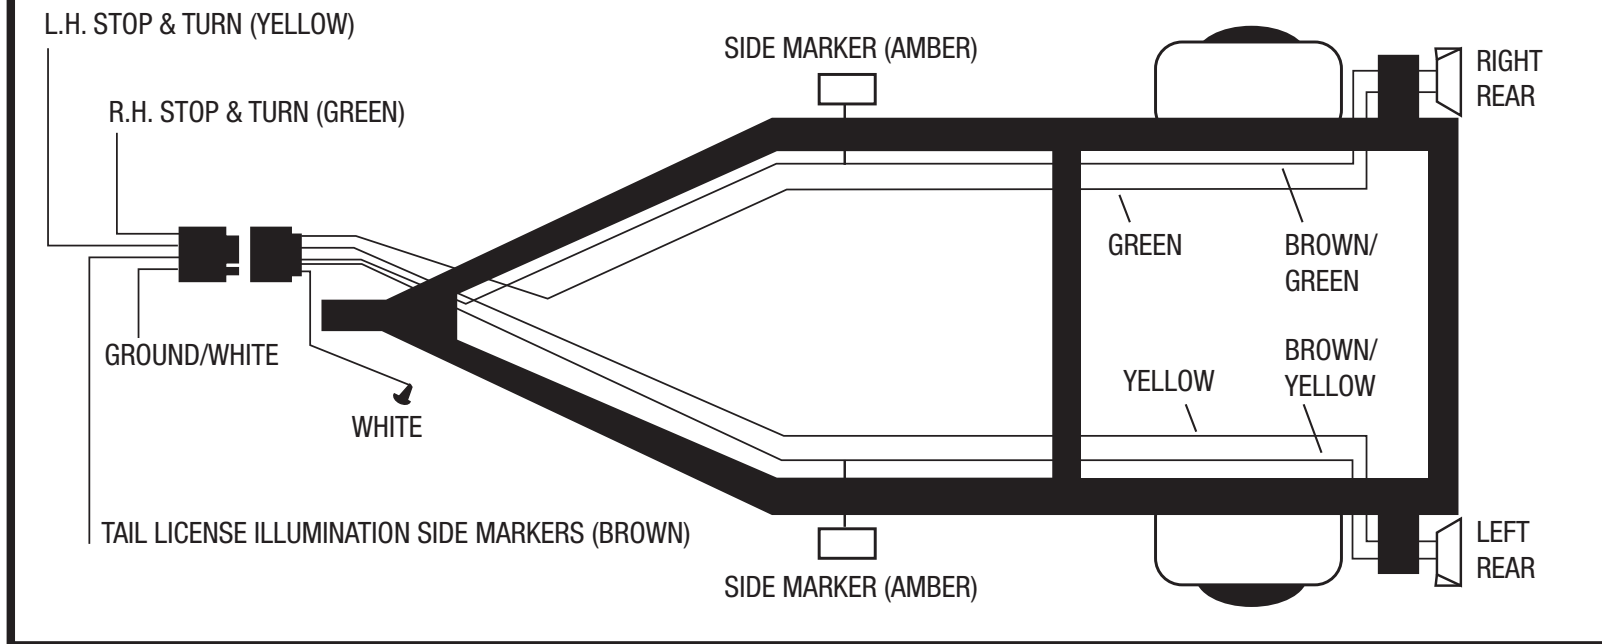

One Year Limited Warranty



The Quality
Choice

Find out more about trailer hitches we have.