


GO7 XSR / Vulcan7R / I3007 / P3007 Mounting template

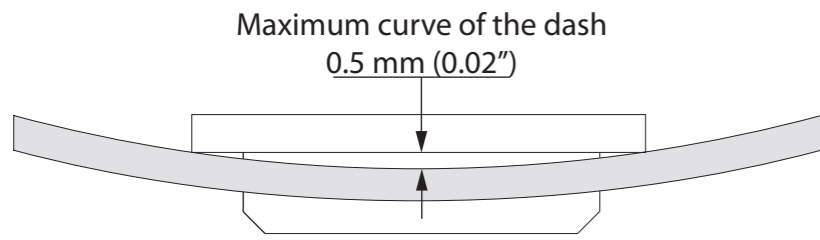


! Recommended pilot holes:

Material	#4 screw	#6 screw
Soft materials e.g. plywood	Ø 1.9-2.2 mm (5/64")	Ø 2.3-2.5 mm (3/32")
Hard material e.g. fiberglass, acrylic, hardwoods	Ø 2.3-2.6 mm (3/32")	Ø 2.7-3.1 mm (7/64")

NOTE:
DO NOT SCALE
PRINT 1:1

IMPORTANT. Do not use this template if it has been rescaled by copying or printing. If this is not the original, or is a print from a file, please check the dimension lines below are to scale before use.

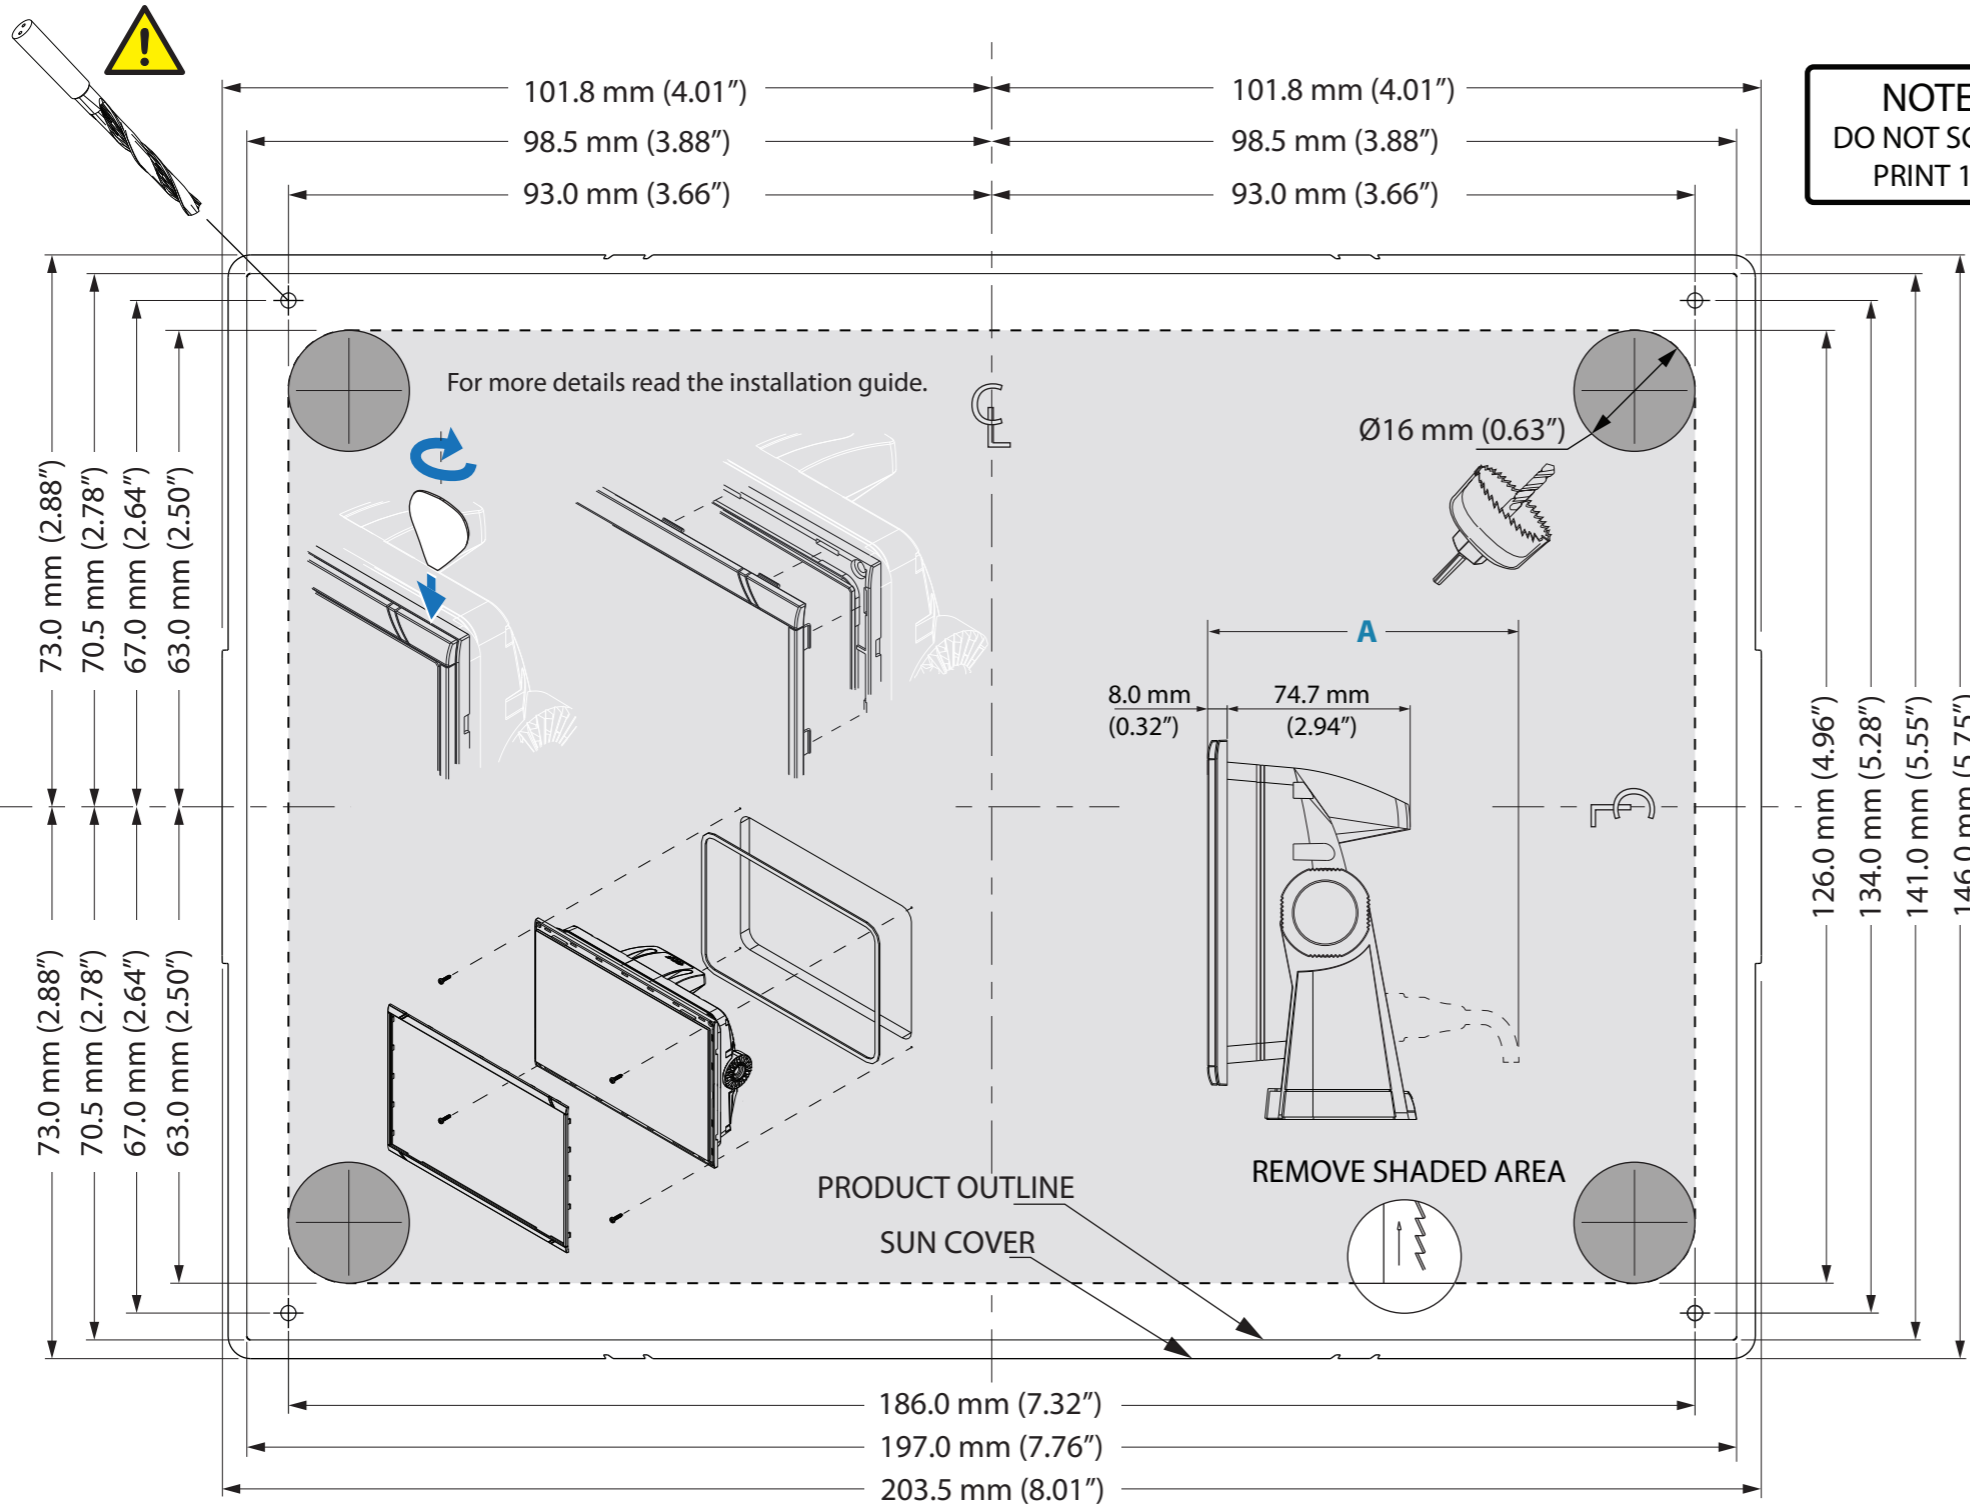

Check dimensions before cutting

	A
I3007 / P3007	174.0 mm (6.85")
GO7 / VULCAN7	127.0 mm (5.00")

