



## **Mooring Snubbers – Installation Instructions**

## Shock absorber for all lines.

Eliminates dangerous surging, even with short leads.

## Use StanPro Snubber for:

- Mooring and anchor lines
- Tow lines
- · Lasting lines
- Trolling lines


For permanent lines at your private dock or mooring, it's recommended to splice snubber into line.

Notice: Always provide bight twice the length of snubber. DO NOT use snubber without safety loop.

## **Special Notes:**

- Rope size to be determined by size of craft.
- Use splices recommended by cordage suppliers.
- Snubber can be used with any type rope.
- Allow sufficient slack in lines to compensate for tides, swells or abnormal high or low water.
- Use two or three snubbers together for larger boats.

For temporary installations on any line, use stopper knots as per illustration below.

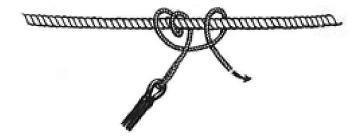

Directions for stopper knot:

Make a turn with rope around object and over itself. Take a second turn around object. Pull end up under second turn so it lies between rope and object. Tighten by pulling on both ends.