




best in the
LongRun

Bunk Slicks

Installation Instructions

Part #86170

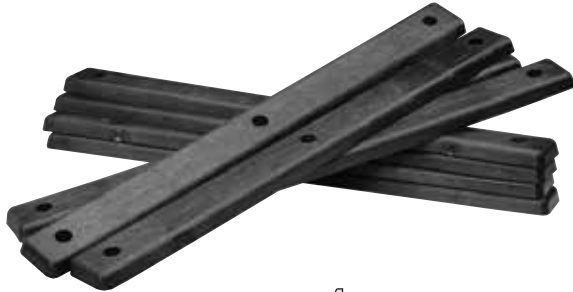

Self Tapping Screws

Part 86170 - Kit contains the following components:


#	Qty.	Part #	Description
1	8	48668	1-3/4" x 17" Black Bunk Slicks
2	24	10881	#8- 3/4" Stainless Steel Self Tapping Screws

Installation Instructions

1. With the boat on the trailer, determine the forward most point where the boat makes contact with the bunks.
2. Area to be "covered" is from the rear end of the carpeted bunk; 2" from the end, and 5" past the most forward point where the boat hull comes in contact with the carpeted bunk (below).

Additional Bunk Slick Kits may be required.

3. Unload boat from the trailer.
4. Position the first Bunk Slick centered on the rear end of bunk: 2" from the end.
5. Place the remain Bunks Slicks no more that 4" apart.
6. Using the screws provided, attached the Bunk Slick to the carpeted bunk.
7. Repeat 5-6 for remaining Bunk Slicks.

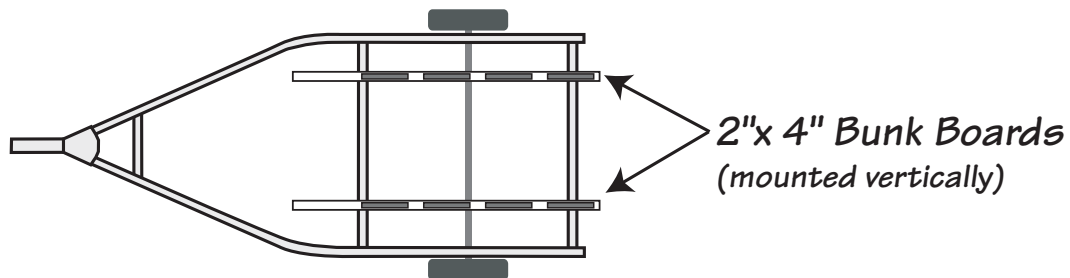

Warning: Before You Load Your Boat!

As with ALL bunk boards make sure the bunks are free of sand and debris, which can cause damage to your boat hull.

WARNING

WARNING

WARNING

WARNING



Bunk Slicks greatly reduce friction between boat and trailer bunk boards. Winch must be locked and winch line must be securely attached when launching, loading and transporting boat on trailer. Failure to keep boat secured at all times to boat trailer can result in serious property damage, personal injury and/or possible death. Prior to towing - always securely connect winch line, bow chain and transom tie down straps

