



Tommy Docks

8608 Progress Way, Weston, WI 54476

Phone : 715-842-3804


Toll Free : 866-675-1880

Fax : 715-842-3420


Hardware Kit

PLEASE READ FIRST BEFORE INSTALLATION

Before beginning your dock assembly, remove the Stainless Steel Bolt completely from the side of the pipe tube on the side of the bracket. Remove any gray powder coat that may have accumulated on the threads of the bolt during the painting process. Oil the bolt and reinsert into the side of the pipe tube.

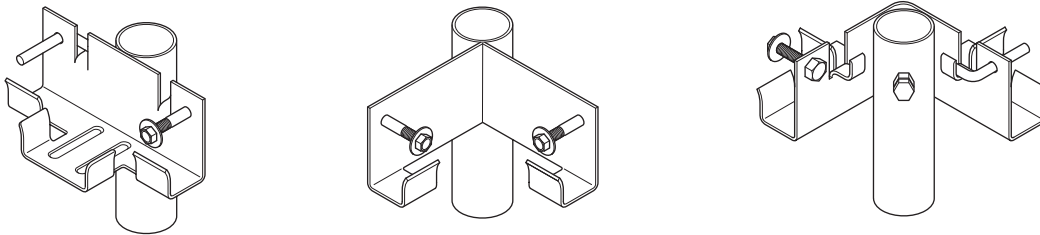

For Footpads and Muckpads use the same process on the bolt used to attach to your dock post pipe.

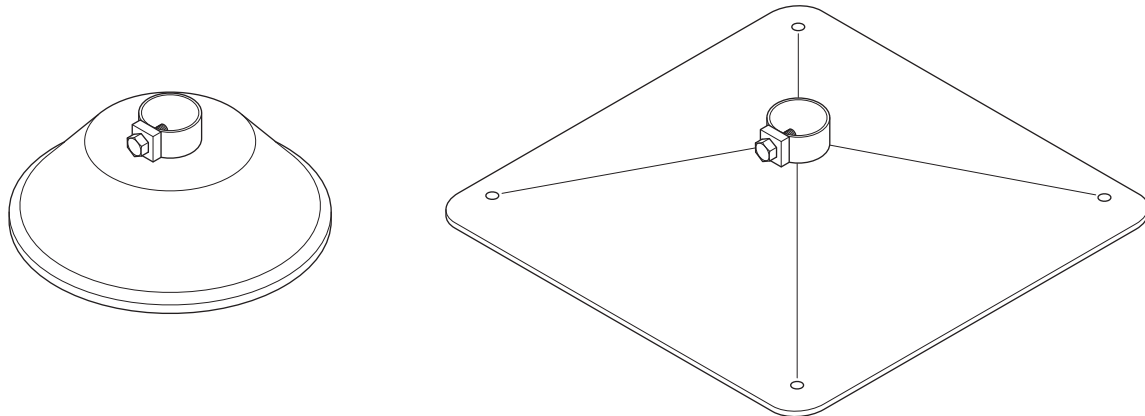

Note: Remove orange caps to reveal location of fasteners.