

TBL610 Instructions

MODEL #
TBL610





OUTBOARD MOTOR LOCK

**Quickly
Secures
Outboard
Motor Clamps
For Added
Security**

■ **Simple To Install**

1. Twist clamps as close to horizontal as possible. Position top half of lock on top of the motor clamps.
2. Push bottom half of lock up to secure. Squeeze top and bottom together for a secure fit.

NOTE: Always place the Keyed half of the lock facing down.

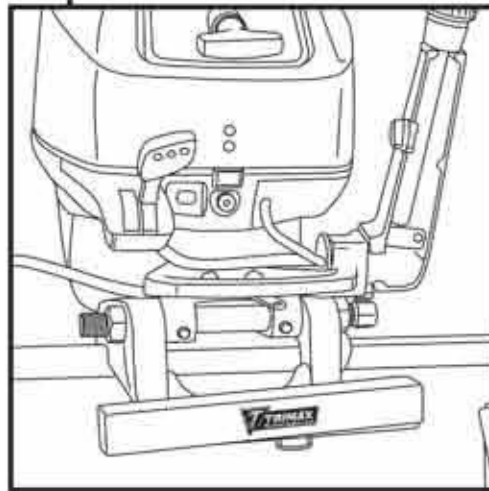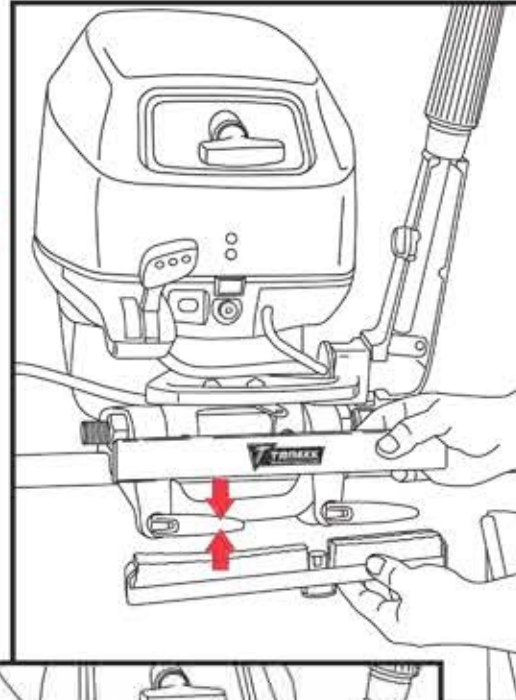

NOTE: BE SURE TO RECORD YOUR KEY NUMBER FOR REPLACEMENT IF LOST

■ Foam Padding Reduces Rattles & Vibration.

■ Constructed of Heavy Gauge Steel For Maximum Security.



■ Includes 2 **TRIMAX™** Flat Keys.

■ Key Hole Cover Helps Keep Out Dirt & Grime.

TRIMAX™
WYERS™
Products Group, Inc.