



**Hella marine**

*Vision and Innovation*

# HOW TO..... Separate a NaviLED® compact shroud from the light module.


## Step 1:

Find an object strong enough to use as a lever, preferably with round edges so in the unlikely event you should slip, the object may not cut your skin. We recommend a common tea spoon.




## Step 2:

Hold the lamp horizontally in one hand. Using the other hand insert the tool into the back of the lamp, between the shroud and the light module.

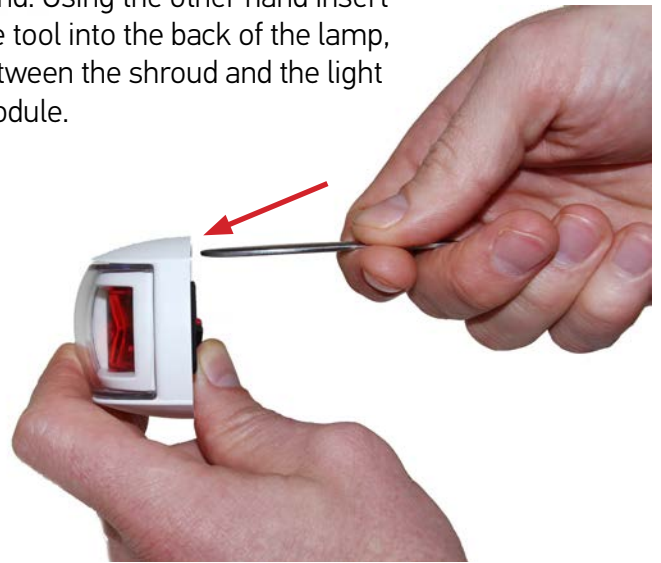

## Step 3:

Use your top thumb to hold the shroud and slowly lever the tool to raise the front top lip of the shroud.

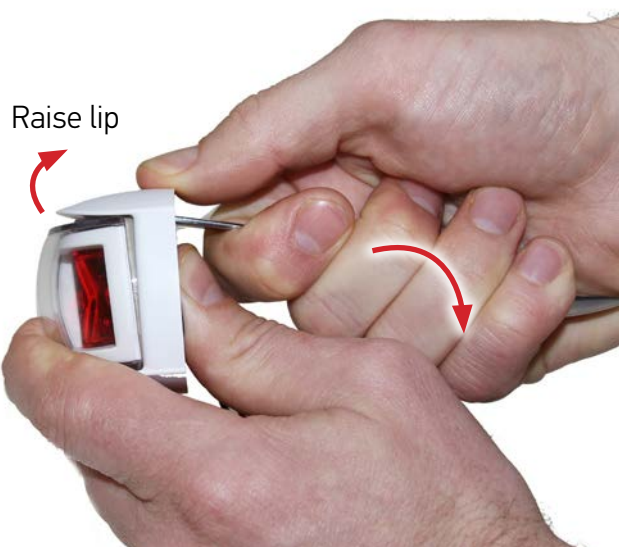

## Step 4:

While raising the top lip of the shroud press the light module with your thumb. This will push the light engine out and away from the shroud.

