

# Re-Arming Instructions



**Re-arm instructions for MUSTANG SURVIVAL  
Models**

## **MRD100 & MRD101**

Please review and follow additional maintenance instructions in your MRD100 & MRD101, owner's manual.

Refold the Rescue Stick™ according to the repacking instructions in the owner's manual.

## MUSTANG SURVIVAL Rescue Stick™ Re-arming Instructions


**WARNING:** CO<sub>2</sub> cylinders are under **EXTREMELY** high pressure. Failure to install a bobbin prior to the installation of the CO<sub>2</sub> cylinder could result in a premature puncture of the CO<sub>2</sub> cylinder. CO<sub>2</sub> cylinders contain freezing liquid CO<sub>2</sub> at -50°F which could cause serious skin burns and eye injury. A punctured unrestrained CO<sub>2</sub> cylinder can travel at high velocities which could cause serious injury or death.




**WARNING:** In order to properly re-arm the device, steps 1 - 4 must be followed exactly.

**IMPORTANT:** Bobbin must be installed into the inflator **HOUSING** before screwing on the inflator cap.

**IMPORTANT:** Check the date on the bobbin in the re-arm kit. The date should not be more than three (3) years previous to today's date. If more than three (3) years, **DO NOT USE** and discard the expired bobbin.

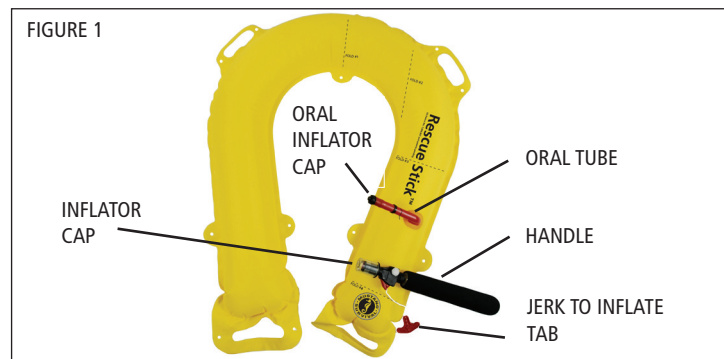

Step 1 - To install a valid bobbin, align the slots on the bobbin with those on the housing. The bobbin will slide in easily if installed correctly (Fig. 2).

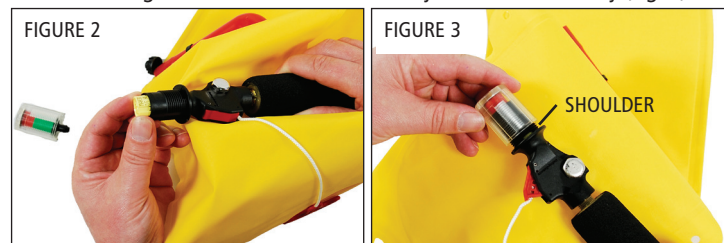

Step 2 - Install cap by screwing clockwise until it meets the housing shoulder (Fig. 3).

**NOTE:** Ensure there is no gap between the cap and the inflator shoulder (Fig. 3).

Step 3 - Install new handle (with an unpierced CO<sub>2</sub> cylinder) by rotating clockwise into inflator until firmly secured (Fig. 4).



Step 4 - Check to be sure service indicator is green inside clear cap and the green indicator clip is firmly attached to the activation lever (Fig. 5).

## Operation


In a water rescue situation, time is against you. The Rescue Stick™ is a quick and simple emergency flotation device to be used when a conscious victim is in the water. This device can be thrown, near a conscious victim who requires temporary flotation until further rescue efforts begin.

## INSTRUCTIONS FOR USE

Step 1 - Throw the device in area near the victim (Fig. 6).

Step 2 - The device automatically inflates when immersed in water.

Step 3 - The device can also be manually inflated by pulling "jerk to inflate" tab.

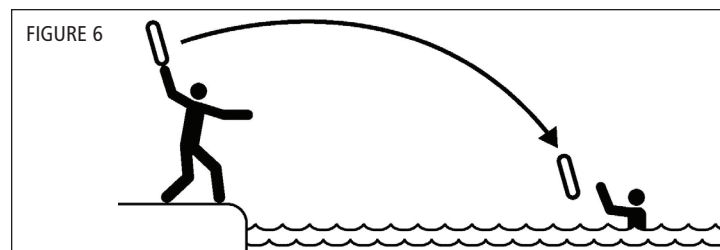

**WARNING:** Unless you are a water rescue professional, entering the water to rescue a person can be a fatal mistake. Water conditions and the desperate acts of a victim can easily make you a victim as well.

