Specifications

Model:	SmartRemote
Product code retail:	77010600
Product code OEM:	77010500
Dimensions:	72x72x30 mm/2.8x2.8x1.2"
Screen:	320x240 pixels,
	16 bits color, 2.8"
Weight:	75 g / 0.2 lb
Operating temperature:	-20 to 55°C/-4 to 131°F
Relative humidity:	max. 95% non-condensing
Storage temperature:	-30 to 70°C/-22 to I58°F
Power supply:	bus powered, II-I4V *
Power consumption:	<180mW (idle mode)
Protection degree:	IP20
Approvals:	CE
Interfaces:	MasterBus,
	CZone (upcoming)

№ WARNING

If you are not knowledgeable about electrical systems, have an electrical professional install this unit.

ACAUTION

The SmartRemote is not waterproof. Do not install where the display is exposed to water.



Correct Disposal

Contact your local waste disposal department to properly dispose of the unit.

* The paired device must have MasterBus powering set to on.



Meaning of the icons



Device state (inverting/charging/standby)



Battery voltage or charging current



Output power (AC OUT)



Shore power (AC IN)



Energy left in battery (State of Charge)




Time remaining during discharge

MASTERVOLT

SmartRemote QuickStart Installation Guide

Components included

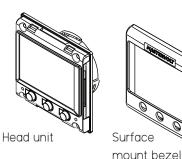





4 x Phillips countersunk self-tapping screws (2.9x16)



Mastervolt CZone Drop Cable* (Im / 3.3ft)



MasterBus cable*

MasterBus Terminator*

On first use

When the SmartRemote is added to a MasterBus network, it will scan for available supported devices to pair with. If there is only one device, it will automatically pair with this device. If there are multiple devices, it will ask to select a device.



When changing the language, be aware that language of the SmartRemote and language of the paired device are two separate settings!

Operation Notes

The three push buttons PI, P2 and P3 provide a scroll and select function. Their behavior depends on the paired device. When idle, the button menu slides down. To get it back, press any button. To wake up from standby mode, simultaneously press PI and P3 to enter the main menu. Standby time can be changed.

How to switch an inverter e.g. on or off?
When the SmartRemote is active, press any key to reveal the sub menu. Press PI to switch on or off.

How to adjust the power sharing level?

When the SmartRemote is active, press any key to reveal the sub menu. Press P2 or P3 to select the required AC IN limit.

How to select another device?


First, unpair the currently paired device: simultaneously press PI and P3 to enter the main menu. Scroll down to *Unpair device* and press the checkmark button. Confirm the action by pressing the checkmark button again. The SmartRemote will scan for available devices. If there is only one device, it will automatically pair with this device. If there are multiple devices, it will ask to select a device.

^{*} Need to be ordered separately with OEM packaging

Installation Notes


- Before installing, be sure to turn electrical power off.
- The SmartRemote is designed for indoor use only.
- Make sure the front panel is easy accessible and readable.
- Always check for existing wiring, pipes, etc. before drilling or cutting into walls.
- Make sure there is adequate space behind the mounting surface to fit the SmartRemote, including its cables.
- The SmartRemote is powered by the MasterBus network. Make sure that at least one device has MasterBus powering on.


Surface Mount

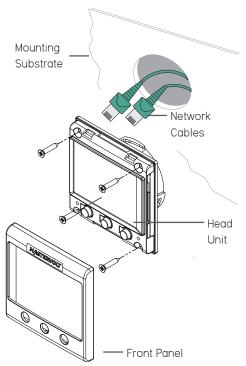

To remove the front cover, gently insert a small screwdriver in the opening at the bottom.

Connect the required RJ45 cable at the back of the SmartRemote.

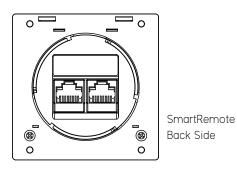


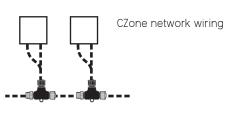



Ensure that the network is properly terminated.

Mounting Template 55mm [2.3"] Ø 52mm [2"] 72mm [2.8"]

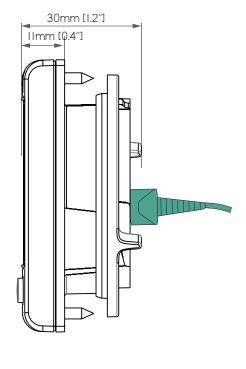

360 Panel Mount

Note that this requires the 360 Panel Mounting Kit PN 1525 Isold separately).

STEP I

Snap header and footer into the mounting clips on the panel frame. Snap the bezel mount into place with the flat edge up.

STEP 2

Place the carrier mount behind the panel, aligning mounting holes, and attach with 4 screws.

STEP 3

Place the SmartRemote and fasten with the bayonet collar. Turn collar until is snaps.

